

Operation Manual For

Panini Premium and Diablo Premium Presses



765 Westminster Street • Providence, Rhode Island 02903 • U.S.A. Tel: (401) 273-3300 Fax: (401) 273-3328 www.equipex.com e-mail: service@equipex.com





IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1. Read all the instructions before use.
- 2. Do not touch hot surfaces; use handles or knobs.
- 3. To avoid electric shock, **do not immerse the power cord**, **or any part of the unit**, in any liquid.
- 4. Close supervision is necessary when any appliance is used, especially around children.
- Unplug appliance from the electrical outlet when not in use, and before cleaning. Allow appliance to cool before installing or removing any parts or accessories, and before cleaning.
- 6. Do not operate any appliance with a damaged cord or plug, or if appliance should sustain damage, or malfunction in any way. In this event, return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessories and/or attachments not recommended by the appliance manufacturer may cause injury or damage to the appliance, and may void your warranty.
- 8. Do not use outdoors.
- Do not allow the power cord to hang over the edge of a table or counter, or to be exposed to hot surfaces, as damage may occur.
- 10. Do not place appliance on or near a burner, or in a heated oven.
- 11. To disconnect an appliance, <u>first</u> turn all controls to the '**off**' position *then* unplug the power cord from the wall outlet.
- 12. Do not use appliance other than for its intended use.
- 13. SAVE THESE INSTRUCTIONS FOR LATER USE!

INTRODUCTION

EQUIPEX (Roller Grill) Premium PANINI GRILLS — Models PANINI Premium and DIABLO Premium — are uniquely designed to offer quality cooking. These units are constructed of food service quality stainless steel, and use enamel impregnated fine grain cast iron top and bottom cooking surfaces. The grills are versatile in application and easy to operate. The moveable top is spring counterbalanced with externally adjustable tension on the handle. Top and bottom heating elements are thermostatically controlled up to 570 F. The units come equipped with a removable front grease drawer. All models are available with all grooved or flat bottom and grooved top grill plates, and come standard with electronic timer and heavy-duty stainless steel handles. The new mode switch allows selection of different heating profiles: top plate only, bottom plate only, top and bottom plate heating, or both plates off.

Specifications:

Model	Electrical	NEMA Plug
PANINI Premium	120V, 1.75KW, 14Amps 208/240V, 1PH, 3KW, 12/14 Amps	5-15 P 6-15 P
DIABLO Premium	208/240V, 1PH, 6.5KW, 24/27 Amps	6-50 P

OPERATION

Initial set up

Clean the enameled cast iron plates thoroughly with soap and water to remove any shipping materials. Prepare the grill plates with a small amount of food safe cooking spray.

Preheating

Turn the grill on using the mode switch(s) (the green light(s) will go on) and turn the temperature control knob(s) to the desired temperature. The orange light(s) will go on and stay on until the desired temperature is reached. The orange light(s) will then go out. The preheat time will vary depending on the cooking temperature settings and the electrical specifications of your model. It will normally take 8-10 minutes for your grill to reach cooking temperature. After reaching the set temperature, the orange light(s) will cycle on and off as the thermostat cycles, to maintain temperature. The green light(s) will remain on until the unit is shut off with the mode switch.

Cooking

EQUIPEX (Rollergrill) Panini grills can be used for a wide variety of foods. Following are some suggested guidelines for foods frequently cooked on this grill. Cooking times will vary depending on the food products, temperature settings and desired results.

Sandwiches Temperature: 400-450° F

Time: 2-3 minutes

Wraps Temperature: 375-450° F

Time: 1-2 minutes

<u>Chicken Breasts</u> Temperature: 475-500° F

Time: 2-3 minutes

Beef Steaks Temperature: 475-550° F

Time: 2.5-4.5 minutes

Burgers Temperature: 500-550° F

Time: 2-4 minutes

During cooking

If food sticks to the cooking surface during toasting or cooking operations, spray sparingly a small amount of food safe cooking oil to the upper and bottom plates.

To protect the enamel surfaces from scratching or chipping, do not press the plates together. The top plate may rest on the bottom plate, without pressure. It is acceptable to push the top plate onto the product being prepared.

Adjusting Handle Tension

The handle is adjustable externally, with the supplied Allen wrench, which can be conveniently stored in the punch-outs on the rear of the spring cover behind the access holes. The two holes are located in the top left of the spring cover, through which the adjustment screws are accessed. Fit the Allen wrench into first one, and then the other screw, tightening or loosening the screws on the handle straps slightly, until the desired tension is achieved.

CLEANING

WARNING: Disconnect (unplug) electrical power supply before cleaning

Allow the grill to cool before cleaning. Using a scotch bright pad or a stiff wire brush scrape the debris from the upper and then lower grill plates. To clean the grill, scrape or brush the debris toward yourself and into the hole in the grill plate and removable crumb drawer. Use a cloth dampened slightly with a soap and water mixture to clean the stainless steel housing, upper grill covers, spring protection cover and the grease drawer. Clean the grill thoroughly at the end of each day. Failure to do so may cause hard to remove carbon build up. In order to remove the build up from the grill plates, use industry standard food service grade degreasers or grease removers.

DO NOT spray the unit with any cleaning liquid before unplugging it


DO NOT allow water to drip into the housing of the unit or around the electrical components

DO NOT immerse the unit in water for cleaning

You should inspect all parts on a regular basis to ensure that all is in proper working order. If a part is damaged, have the unit repaired by an authorized service agency prior to returning the unit to operation. If you have trouble locating a service agency in your area, please consult our website at http://www.equipex.com/, or call us at 1-800-649-7885 and ask for customer service.


Please be advised that Model DIABLO Premium is subject to on-site service under the terms of our warranty, while Model PANINI Premium shall be carried-in for service.

Panini parts list

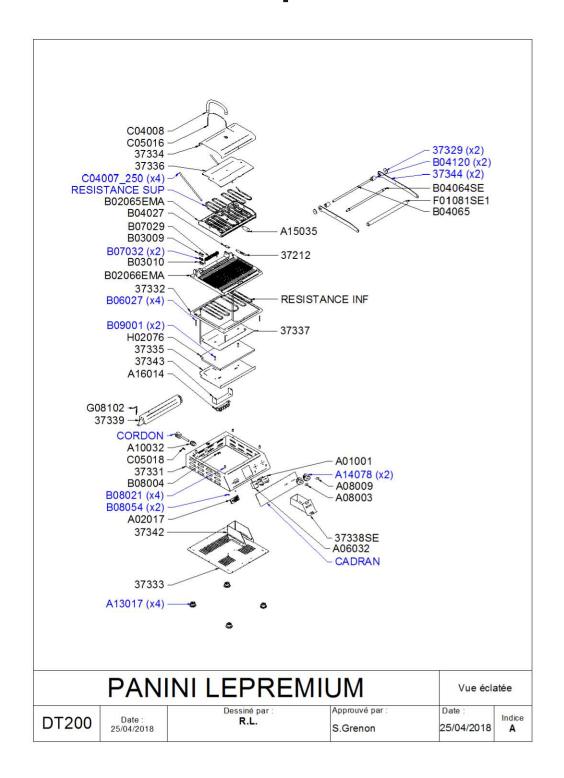

Part #	Qty	Pièce	Spart part	
37329	2	RONDELLE PANINI XLB	WASHER	
37331	1	CAISSON PANINI	BODY	
37332	1	CADRE DE FONTE	CAST IRON FRAME	
37333	1	FOND DE SOCLE	BOTTOM ENCLOSURE	
37334	1	CAPOT PANINI	COVER	
37335	1	DEFLECTEUR	DEFLECTOR	
37336	1	SERRE RESISTANCE HAUT	TOP HEATING ELEMENT HOLDER	
37337	1	SERRE RESISTANCE BAS	BOTTOM HEATING ELEMENT HOLDER	
37338SE	1	S/E BAC A SAUCE	DRIP TRAY	
37339	1	CACHE RESSORT	SPRING COVER	
37342	1	PROTECTION JUS	DRIP TRAY SUPPORT	
37343	1	SUPPORT BORNIER	TERMINAL BLOCK HOLDER	
37344	2	POIGNEE GAUCHE/DROITE	RIGHT/LEFT HANDLE	
A01001	1	COMMUTATEUR	MODE SWITCH	
A02017	1	MINUTERIE/CONT.	ELECTRONIC TIMER	
A06032	1	THERMOSTAT	THERMOSTAT	
A06034/1	1	THERMOSTAT SECURITE 135°-105°	SAFETY THERMOSTAT 135°-105°	
A08003	1	VOYANT ORANGE DIAM 12 220V	ORANGE LIGHT DIAM 12 220v	
A08004	1	VOYANT ORANGE DIAM 12 120V	ORANGE LIGHT DIAM 12 120v	
A08009	1	VOYANT VERT DIAM 12 220v	GREEN LIGHT DIAM 12 220v	
A08007	1	VOYANT VERT DIAM 12 120v	GREEN LIGHT DIAM 12 120v	
A10032	1	PRESSE ETOUPE	STRAIN RELIEF	
A13017	4	PIED	FOOT	
A14078	2	BOUTON	KNOB	
A15035	1	POIGNEE	HANDLE	
A16014	1	BORNIER 6 PLOTS	6 POSITION TERMINAL BLOCK	
B02065EMA	1	PLAQUE FONTE EMAILLEE SUP	TOP ENAMELLED PLATE	
B02066EMA	1	PLAQUE FONTE EMAILLEE INF	BOTTOM ENAMELLED PLATE	
B03009	1	PALIER HAUT SERRAGE POIGNEE CG	TOP HANDLE BEARING CG	
B03010	1	PALIER BAS SERRAGE POIGNEE CG	BOTTOM HANDLE BEARING CG	
B04027	1	BRIDE POIGNEE	HANDLE STRAP	
B04064SE	1	S/E AXE ROTATION CAPOT	ROTATION AXLE COVER	
B04065	1	AXE ROTATION POIGNEE	ROTATION AXLE HANDLE	
B04120	2	BLOCAGE POIGNEE	HANDLE BLOCK	
B06027	4	BOUT FILETE M6X40	THREAD TIP M6X40	
B07029	1	RESSORT DOUBLE TORSION INOX	DOUBLE TORSION SPRING	
B07032	2	RESSORT COMPRESSION	COMPRESSION SPRING	
B08021	4	ENTRETOISE ACIER	STEEL SPACER	
B08054	2	ENTRETOISE 3.2X6X5 P A 6.6 NATUREL	3.2X6X5 SPACER	
B09001	2	ENTRETOISE DIAM EXT 10 LG 12 MM	10 LG SPACER EXT DIAM 12 MM	
CADRAN	1	CADRAN	FRONT PANEL	
CORDON	1	CORDON	POWER CORD	
C04007_250	4	SILIGAINE DIAM 8MM	INSULATING SLEEVE 8MM	
C04008	1	GAINE RESSORT LG 350 MM	SPRING GIRDEL LG 350 MM	
C05016	1	FIL DE TERRE VERT/JAUNE	EARTH WIRE GREEN/YELLOW	
F01081SE1	1	S/E POIGNEE INOX	STAINLESS STEEL HANDLE	
G08102	1	CLE ALLEN H4	ALLEN WRENCH H4	
H02076	1	ISOLANT	INSULATION	
RESISTANCE INF	1	RESISTANCE INFERIEUR	BOTTOM HEATING ELEMENT 220v	
RESISTANCE INF	1	RESISTANCE INFERIEUR	BOTTOM HEATING ELEMENT 120v	
RESISTANCE SUP	1	RESISTANCE SUPERIEUR	TOP HEATING ELEMENT 220V	
RESISTANCE SUP	1	RESISTANCE SUPERIEUR	TOP HEATING ELEMENT 120V	


Diablo parts list

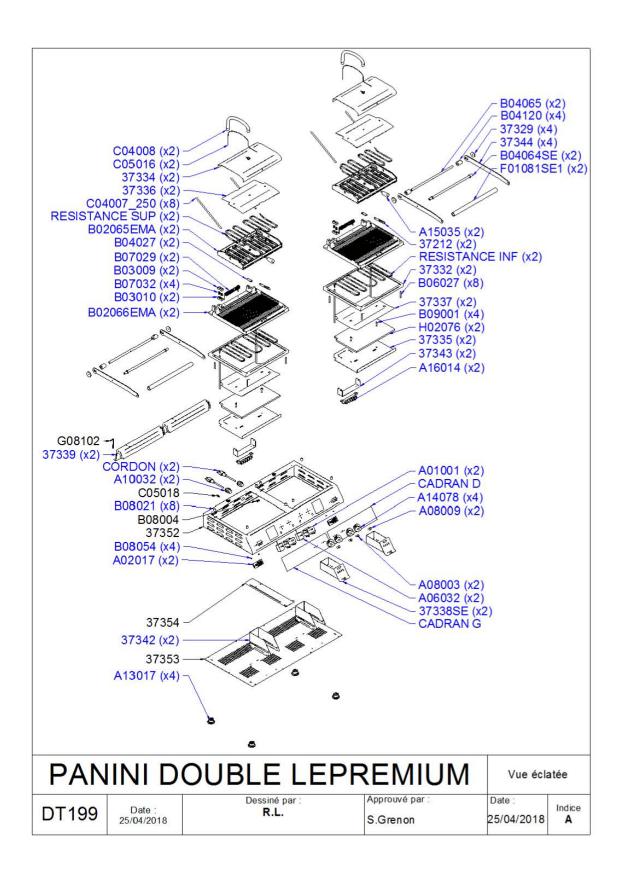


CODE	QTE	· PIECE	SPARE PART	
37212	2	GUIDE PLAQUE SUPERIEURE PANINI XL	TOP PLATE GUIDE PANINI XL	
37329	4	RONDELLE PANINI XLB	WASHER PANINI XLB	
37332	2	CADRE DE FONTE PANINI LEPREMIUM	CASTIRON FRAME PANINI LEPREMIUM	
37334	2	CAPOT PANINI LEPREMIUM	COVER PANINI LEPREMIUM	
37335	2	DEFLECTEUR PANINI LEPREMIUM	DEFLECTOR PANINI LEPREMIUM	
37336	2	SERRE RESISTANCE HAUT PANINI LEPREMIUM	TOP HEATING ELEMENT HOLDER PANINI LEPREMIUM	
37337	2	SERRE RESISTANCE BAS PANINI LEPREMIUM	LOW HEATING ELEMENT HOLDER PANINI LEPREMIUM	
37338SE	2	S/E BAC A SAUCE PANINI LEPREMIUM	SAUCE TRAY PANINI LEPREMIUM	
37339	2	CACHE RESSORT PANINI LEPREMIUM	SPRING COVER PANINI LEMPRMIUM	
37342	2	PROTECTION JUS PANINI LEPREMIUM	SAUCE PROTECTION PANINI LEPREMIUM	
37343	2	SUPPORT BORNIER PANINI LEPREMIUM	DOMINO HOLDER PANINI LEPREMIUM	
37344	4	POIGNEE GAUCHE/DROITE PANINI LEPREMIUM	RIGHT/LEFT HANDLE PANINI LEPREMIUM	
37352	1	CAISSON DOUBLE PANINI LEPREMIUM	DOUBLE BOX PANINI LEPREMIUM	
37353	1	FOND DE SOCLE PANINI DOUBLE PREMIUM	BOTTOM ENCLOSURE PANINI DOUBLE LEPREMIUM	
37354	1	RENFORT CENTRAL PANINI DOUBLE PREMIUM	CENTRAL REINFORCEMENT PANINI DOUBLE PREMIUM	
A01001	2	COMMUTATEUR	COMMUTATOR	
A02017	2	MINUTERIE / CONT. GRILL PANINI QUICK	ELECTRONIC, TIMER C. GRILL	
A06032	2	THERMOSTAT	THERMOSTAT	
A06034/1	2	THERMOSTAT SECURITE 135°-105°	SAFETY THERMOSTAT 135°-105°	
A08003	2	VOYANT ORANGE DIAM 12	ORANGE PILOT LIGHT DIAM 12	
A08009	2	VOYANT VERT DIAM 12	GREEN PILOT LIGHT DIAM 12	
A10032	2	PRESSE ETOUPE	CORD CLOSER	
A13017	4	PIED		
A14078	4	BOUTON 12 H ELECT	FOOT	
	2		KNOB 12 H FOR ELECTRIC	
A15035 A16014	2	POIGNEE C.G.	HANDLE CONTACT GRILL	
	_	BORNIER 6 PLOTS CONTACT GRILL	6 HOLES DOMINO	
B02065EMA	2	PLAQUE FONTE EMAILLEE SUP PANINI LEPREMIUM	TOP ENAMELLED CAST IRON PLATE PANINI LEPREMIU	
B02066EMA	2	PLAQUE FONTE EMAILLEE INF PANINI LEPREMIUM	BOTTOM ENAMELLED CAST IRON PLATE PANINI LEPREM	
B03009	2	PALIER HAUT SERRAGE POIGNÉE CG	BEARING TOP HANDLE CG	
B03010	2	PALIER BAS SERRAGE POIGNÉE CG	BEARING LOW HANDLE CG	
B04027	2	BRIDE POIGNEE CONTACT GRILL	HANDLE STRAP PANINI XL	
B04064SE	2	S/E AXE ROTATION CAPOT PANINI LEPREMIUM	COVER ROTATION AXLE PANINI LEPREMIUM	
B04065	2	AXE ROTATION POIGNÉE PANINI LEPREMIUM	HANDLE ROTATION AXLE PANINI LEPREMIUM	
B04120	4	BLOCAGE POIGNÉE PANINI XLB	HANDLE BLOCK PANINI XLB	
B06027	8	BOUT FILETE M 6 x 40	THREAD TIP M 6 x 40	
B07029	2	RESSORT DOUBLE TORSION INOX PANINI	SPRING PANINI	
B07032	- 4	RESSORT COMPRESSION PANINI LEPREMIUM	COMPRESSION SPRING PANINI LEPREMIUM	
B08004	1.	RIVET TERRE	EARTH RIVET	
B08021	.8	ENTRETOISE ACIER CONTACT GRILL	STEEL SPACER	
B08054	4	ENTRETOISE 3.2X6X5 PA 6.6 NATUREL	SPACER 3.2x6x5	
B09001	4	ENTRETOISE DIAM EXT 10 LG 12 MM	SPACER DIAM EXT 10 LG 12 MM	
CADRAN D	1	CADRAN D	RIGHTFRONTPANEL	
CADRAN G	1	CADRAN G	LEFT FRONT PANEL	
CORDON	2	CORDON	CORD	
C04007_250	8	SILIGAINE DIAM 8 mm	SHEATH DIM 8 mm	
C04008	2	GAINE RESSORT Lg 350 mm	SPRING GIRDLE Lg 350 mm	
C05016	2	FIL DE TERRE VERT/JAUNE	EARTH WIRE GREEN/YELLOW	
C05018	1	BORNE EQUIPOTENTIEL	EQUIPOTENTIAL TERMINAL	
F01081SE1	2	S/E POIGNEE INOX PANINI LEPREMIUM SAV	STAINLESS STELL HANDLE PANINI LEPREMIUM	
	1	CLE ALLEN H4	KEY ALLEN H4	
G08102				
	2	ISOLANT PANINI LEPREMIUM	INSULATION PANINI LEPREMIUM	
G08102	_			

PANINI DOUBLE LEPREMIUM					Nomenclature		
DT199_1	Date : 26/07/2018	Dessiné par : R.L.	Approuvé par :	Date :	Indice	ı	
			J.Godéré	26/07/2018			


Electrical Diagram Diablo Premium

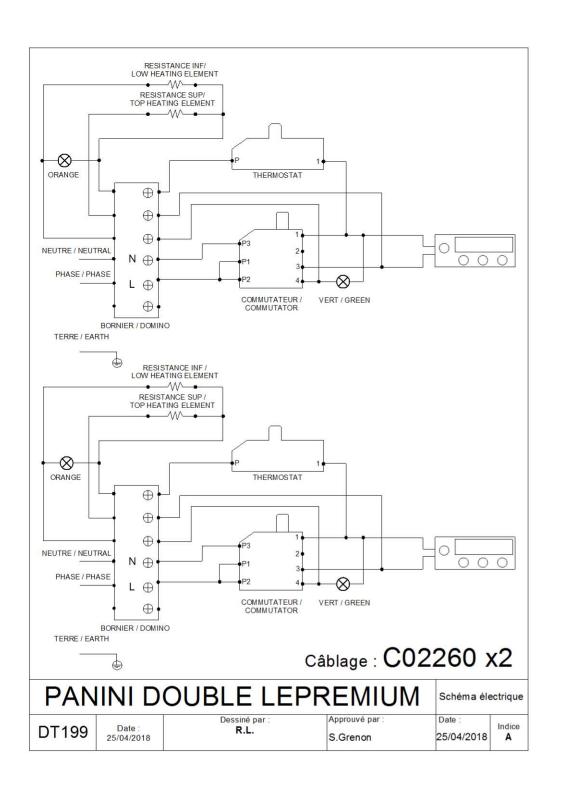

Electrical Diagram Panini Premium 120V

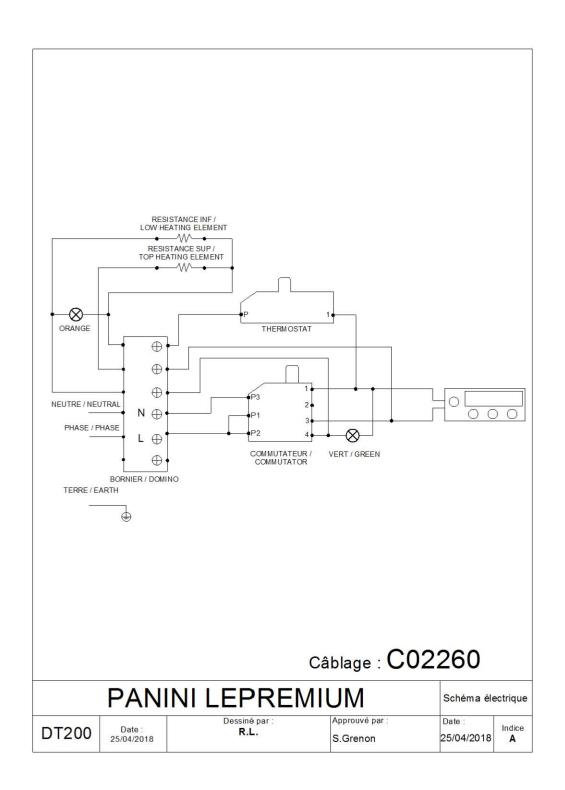

Electrical Diagram Premium Panini 220V

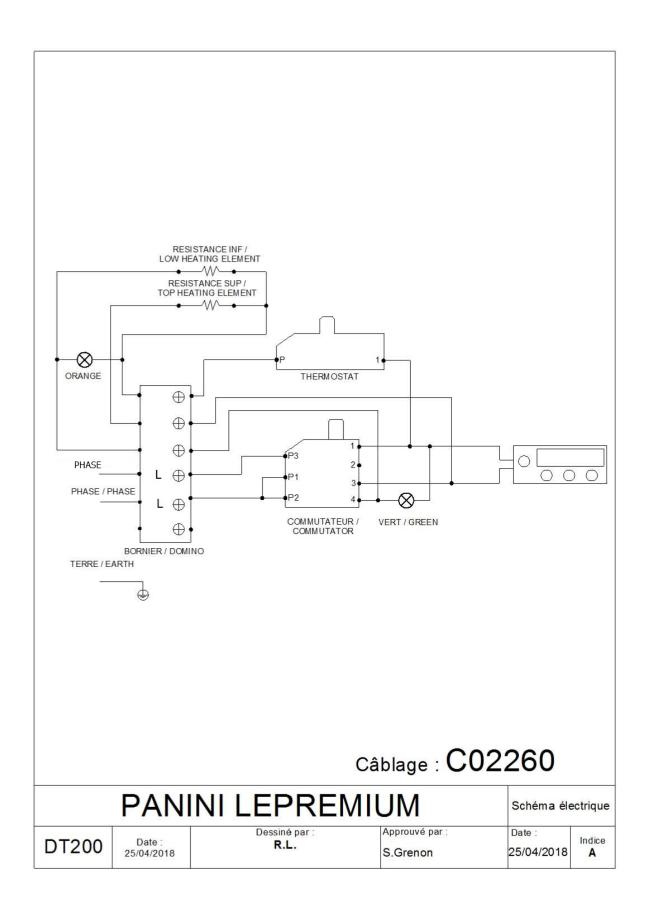

765 Westminster Street, Providence, RI 02903; 401-273-3300; fax 401-273-3328; www.equipex.com; service@equipex.com

LIMITED ONE YEAR WARRANTY - EQUIPMENT and DISPLAYS

Your new **EQUIPEX** product is warranted to the original purchaser for a period of one year from the date of purchase.

This limited warranty is against defects from original factory imperfections in material and/or workmanship and includes labor for replacement of defective parts, provided repairs are performed by an authorized service agency. Our obligation under this warranty is limited to repairing or replacing any part or parts thereof. The CUSTOMER must inform the Service Agency of warranty coverage and provide a copy of the dated sales or delivery receipt BEFORE WARRANTY REPAIRS BEGIN. Replacement parts and accessories are warranted for ninety (90) days from the date of purchase when purchased separately and will be verified by dated sales receipt or packing slip for that item. All parts or accessories replaced under warranty must be returned to the Service Agency.

This warranty applies only to equipment under normal use and service in the U.S.A. and Canada. It does not apply to any item which has been repaired or altered in any way so as, in the judgment of **EQUIPEX**, to affect its reliability.

THE FOLLOWING ARE NOT COVERED UNDER WARRANTY:

- 1. Damage caused by abuse, misuse or dropping or other similar incidental damage caused by, or as a result of, customer failure to follow assembly, operation, cleaning, user maintenance or storage instructions.
- 2. Labor to replace inoperative parts such as bulbs, plugs or racks due to normal wear and tear or abuse.
- 3. Materials or labor to repair scratched, stained, chipped, pitted, dented or discolored surfaces, attachments or accessories.
- 4. Transportation charges to or from a service agency for repair of your machine. If you should have questions relating to this issue, please call **Equipex** at 1-800-649-7885.
- 5. Labor charges to install or test attachments or accessories, which are replaced for any reason.
- 6. **SHIPPING DAMAGE:** Inspect merchandise immediately on receipt. Sign for and notify carrier if shipment is damaged. All claims must be filed with carrier by purchaser. Keep all original packaging material for carrier inspection. Visible and hidden damages not covered by warranty.
- 7. Products placed or stored in the equipment are not subject to this warranty and no responsibility is assumed thereof.

THIS WARRANTY IS GIVEN EXPRESSLY AND IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, FOR MERCHANTABILITY AND FOR FITNESS TOWARD A PARTICULAR PURPOSE AND CONSTITUTES THE ONLY WARRANTY MADE BY EQUIPEX, LLC. IT NEITHER ASSUMES, NOR AUTHORIZES ANY PERSON TO ASSUME FOR US, ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF THE SUBJECT EQUIPMENT.

For service, please call EQUIPEX at 1-800-649-7885, menu option # 3