



LAKESIDE®

4900 Electric Avenue • Milwaukee, WI 53219 • (414) 902-6446

REGULAR

cabinet & tubular style
MOBILE NON-HEATED
self-leveling

DISPENSER

ADJUSTMENT INSTRUCTIONS

For 2-Stack Models

5200 Through 5212

For 3-Stack Models

5300 Through 5310

For 4-Stack Models

5400 Through 5410

Refer to pictures at right before starting.

WEIGHT ADJUSTMENT

Dish diameter and weight determine how many springs should support your dishes. To insure smooth operation, use an equal number of springs on all sides of the tube. Always unhook lower end of springs only. Leave spring hang for future use.


Use the following chart as a guide to determine approximately how many springs to use.

Dish Diameter	Springs Required
Up to 5"	4 Silver
5 1/4" to 5 3/4"	3 Silver Plus 4 Brown
5 3/4" to 6 1/4"	3 Silver Plus 4 Brown
6 1/4" to 7 1/4"	7 to 9 Silver
7 1/4" to 8 1/4"	9 to 11 Silver
8 1/4" to 9 1/4"	10 to 13 Silver
9 1/4" to 10 1/4"	12 to 16 Silver
10 1/4" to 12 1/4"	16 to 22 Silver

- First place ten dishes into the unit directly on top cap.
- If the dishes are above the top of the dish guides, one or more of the springs must be unhooked. Remove the dishes, lift the dispenser out of the unit high enough for access to the bottom of the springs, or lift the dispenser out and place on floor. Unhook one or more springs from the bottom. Leave the spring hang for future use. Replace the ten dishes. Repeat this operation if the dishes are still too high. Place dispenser back into unit.
- If the dishes become too low, remove all the dishes. Lift the dispenser out of the unit high enough for access to the bottom of the spring. Hook one or more loose springs into position. Replace the dishes. Repeat this operation if the dishes are still too low.
- Repeat the above operations with more dishes and with less dishes.

For Fast Direct Information Call LAKESIDE SPEED-LINE
(800) 558-8565*

*This Service Not Available In: Wisconsin — Alaska — Hawaii — Canada

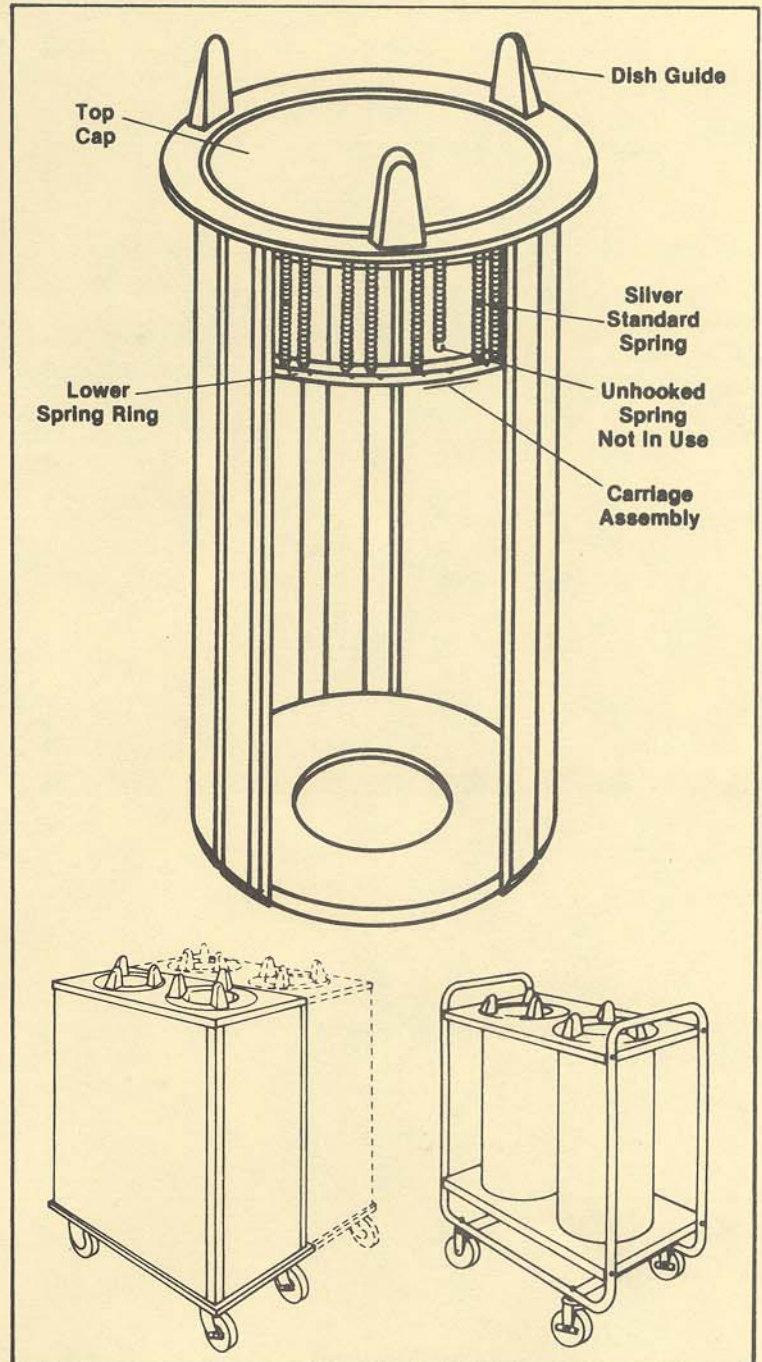

NOTE: The silver springs are stronger than the brown springs. Light duty springs are provided for fine adjustment of very light dishes. Most dishes require the use of silver springs only.

CLEANING OF UNIT

- Clean self-leveling mechanism as desired.
- Wash stainless steel on unit with soap and water, or stainless steel polish.