


Holman[®] **CONVEYOR TOASTER**

MODEL
Q1-350, Q1-500B, Q1-35C

Installation and Operation Instructions

2M-Z9777 Rev. B 1/07/2015

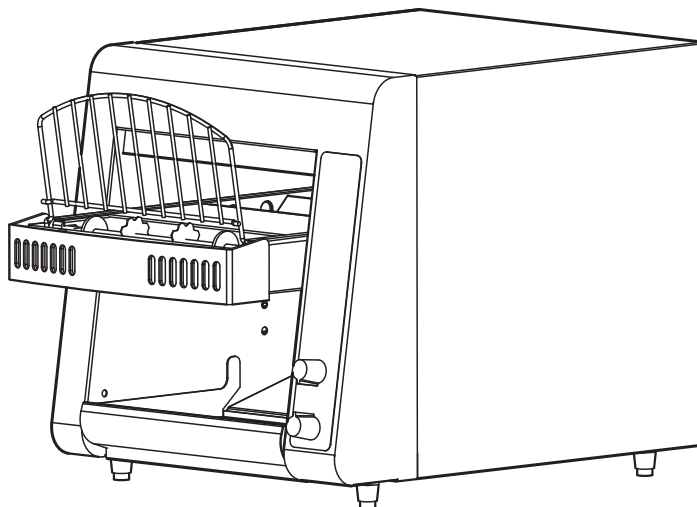

QCS1-350-120V



SAFETY SYMBOL



These symbols are intended to alert the user to the presence of important operating and maintenance instructions in the manual accompanying the appliance.

RETAIN THIS MANUAL FOR FUTURE REFERENCE

NOTICE

Using any part other than genuine Star factory supplied parts relieves the manufacturer of all liability.

Star reserves the right to change specifications and product design without notice. Such revisions do not entitle the buyer to corresponding changes, improvements, additions or replacements for previously purchased equipment.

Due to periodic changes in designs, methods, procedures, policies and regulations, the specifications contained in this sheet are subject to change without notice. While Star International Holdings Inc., Company exercises good faith efforts to provide information that is accurate, we are not responsible for errors or omissions in information provided or conclusions reached as a result of using the specifications. By using the information provided, the user assumes all risks in connection with such use.

MAINTENANCE AND REPAIRS

Contact your local authorized service agent for service or required maintenance.

Please record the model number, serial number, voltage and purchase date in the area below and have it ready when you call to ensure a faster service.

Model No. _____
Serial No. _____
Voltage _____
Purchase Date _____

Authorized Service Agent Listing

Reference the listing provided with the unit

or

for an updated listing go to:

Website: www.star-mfg.com
E-mail customerservice@star-mfg.com

Service Help Desk

Business Hours: 8:00 am to 4:30 p.m. Central Standard Time

Telephone: (314) 678-6303

Fax: (314) 781-2714

E-mail customerservice@star-mfg.com

Website: www.star-mfg.com

Mailing Address: Star International Holdings Inc., Company
10 Sunnen Drive
St. Louis, MO 63143
U.S.A

GENERAL INSTALLATION DATA



CAUTION

This equipment is designed and sold for commercial use only by personnel trained and experienced in its operation and is not sold for consumer use in and around the home nor for use directly by the general public in food service locations.

Before using your new equipment, read and understand all the instructions & labels associated with the unit prior to putting it into operation. Make sure all people associated with its use understand the units operation & safety before they use the unit.

All shipping containers should be checked for freight damage both visible and concealed. This unit has been tested and carefully packaged to insure delivery of your unit in perfect condition. If equipment is received in damaged condition, either apparent or concealed, a claim must be made with the delivering carrier.

Concealed damage or loss - if damage or loss is not apparent until after equipment is unpacked, a request for inspection of concealed damage must be made with carrier within 15 days. Be certain to retain all contents plus external and internal packaging materials for inspection. The carrier will make an inspection and will supply necessary claim forms.

INSPECTION & ASSEMBLY

UNCRATING AND INSPECTING

Unpack the unit and components from the shipping container. Remove all visible packing material and those from inside the cooking chamber. If damage is discovered, file a claim immediately with the carrier that handled the shipment. Do not operate the unit if it was damaged during shipping.

ASSEMBLY AND INSTALLATION

The unit was shipped fully assembled and ready to plug into a standard outlet specified for its voltage and amp draw. If improper electrical supply is determined, contact a qualified electrician prior to using the unit. Removal and replacement of the power cord and plug will void the warranty. For assistance, contact your local authorized service agent for service or required maintenance.

Level unit using the adjustable feet under the unit (approximately 1/2" adjustment).

Before using the unit for the first time, wipe down the exterior with a damp cloth.



CAUTION

Allow enough space around the toaster for adequate ventilation. Do not operate the unit without the crumb tray properly positioned. Overheating and poor toasting may occur. Read all labels on the unit and follow their instructions.

ELECTRICAL CONNECTION

Before making any electrical connection to this unit, check that the power supply is adequate for the voltage, amperage and requirements stated on the rating plate.

A wiring diagram is included herewith.

Disconnect the unit from the power source before installing or removing any parts.

Be absolutely sure that the ground connection for the receptacle is properly wired. Do not connect equipment to power without proper ground connections. Improper grounding may result in personal injury or fatality.



WARNING

DO NOT CUT OR REMOVE THIS PLUG OR GROUNDING PRONG FROM THE PLUG.



WARNING

CONNECT/PLUG UNIT INTO DEDICATED A.C. LINE ONLY SPECIFIED ON THE DATA PLATE OF THE UNIT.

DAILY OPERATION

ROTARY POWER SAVER SWITCH

For toasters equipped with a Rotary Power Saver Switch, turn clockwise or counterclockwise to get in the following positions.

FULL POWER

When in this position your equipment is at full power and ready to use.

OFF ROTARY

Two off positions are provided, a single rotation to either direction will shut the unit off.

STANDBY

The standby position reduces the power consumption by 75%. Using this position during the quiet times will save electricity, and keep the toaster warm. When needed, turn the switch to FULL POWER. Recovery time is about 30 seconds.



CERTAIN SURFACES ARE EXTREMELY HOT DURING OPERATION AND CARE SHOULD BE TAKEN WHILE USING THIS UNIT.

COOKING PROCEDURES


BREAD TOASTING

Some toasters are equipped with a swinging heat shutter at the toaster entrance. This shutter will move out of the way as the product passes under it.


- 1) Turn the power saver to FULL POWER.
- 2) Set the conveyor speed to 5.
- 4) Allow warm up time of 5 to 10 minutes.
- 5) Place a sample product on the conveyor belt to test the settings.

- If toasting is too light, turn conveyor speed control counterclockwise to a slower speed.
- If toasting is too dark, turn conveyor speed control clockwise to a faster speed.

(NOTE: Some products may require adjustment of the speed control in order to achieve the desired results.)

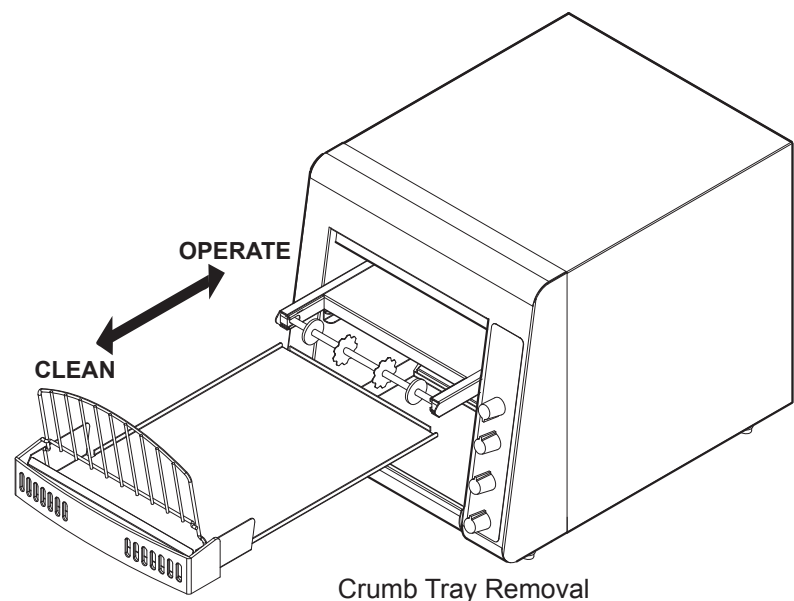

TOASTER COMPONENTS

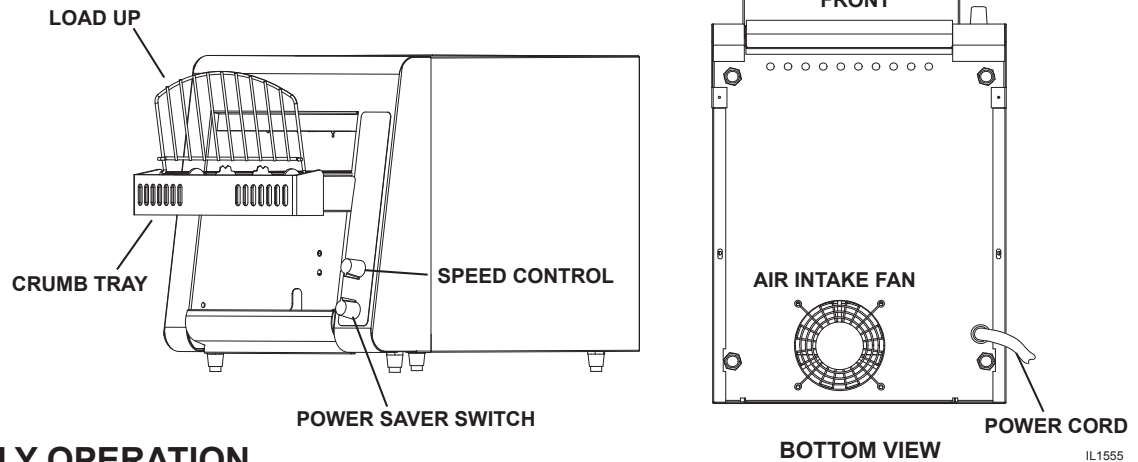

DAILY OPERATION

Check the power cord to insure that it is plugged into a proper outlet.

Set the Rotary Power Saver Switch & speed control knob to desired settings.

Always allow 10 minutes of preheat time before loading the unit with product. Failure to allow sufficient preheat time will result in unsatisfactory cooking until the unit reaches operating temperature.



OPERATING HINTS AND SAFETY

Disconnect power to the unit with the switch at the end of each day of operation.

Do not leave the unit in operation without an attendant.

Turn Power Saver Switch to Standby during idle periods. It will take only a few minutes to regain operating temperature.

Do not leave the unit at high temperature when not in use or during idle periods. This will cause food particles and grease film to carbonize.

CLEANING

Preventive maintenance for your Holman toaster consists of the following recommended cleaning procedures. To keep your toaster in its top operating condition, these steps should be performed on a daily or weekly as indicated.

- A. Turn main power saver switch to the OFF position. Disconnect unit from power source.
- B. After the unit cools, remove interior crumb tray (as shown on page 4) and clean. Slide crumb tray back into position.
- C. Wipe exterior surface of unit.
- D. Areas inside the toaster, be sure to unplug the unit and allow to cool prior to wiping clean with a damp cloth.
- E. Clean air intake on bottom of unit.
- F. For lightly soiled conveyor belts, turn conveyor speed control to fastest setting and wipe with a damp cloth (daily) For heavily soiled conveyors, turn conveyor speed control to fastest setting, with crumb tray installed and wipe with a light abrasive pad (as needed).

DO NOT IMMERSE OR LET THE UNIT STAND IN WATER.

DO NOT HOSE DOWN THE UNIT OR THE TABLE/COUNTER IF THE UNIT IS ON THE TABLE/COUNTER.

KEEP AWAY FROM RUNNING WATER.



WARNING

MAINTENANCE PROCEDURES

A. REPLACING HEATER TUBES

- 1) **DISCONNECT UNIT FROM POWER SOURCE.**
- 2) Remove the enclosure, by removing the screws on both the back and bottom of the unit and lifting the enclosure's back up first and pulling away from the unit.
- 3) Remove heater tube wires from terminal block connection, keeping top and bottom wires separate.
- 4) Lift heater tube retainers by loosening retaining screws and sliding the retainer plate. Hand tighten the plate to hold it up so the heater tubes will slide out freely.
- 5) Gently, pull defective heater tube out of unit.
- 6) Gently, put new heater tube into unit.
- 7) Loosen retainer screws and slide the retainer back into place. Tighten the screw to secure the retainer in place over the ends of the heater tubes.
- 8) Install the heater tube wires to the terminal block, and reinstall the enclosure.
- 9) Connect unit to power source and test by toasting some bread after unit has properly reached operating temperature.

B. REPLACING FAN MOTOR

- 1) **DISCONNECT UNIT FROM POWER SOURCE.**
- 2) Remove the enclosure, by removing the screws on both the back and bottom of the unit and lifting the enclosure's back up first and pulling away from the unit.
- 3) Remove the enclosure and the back panel.
- 4) Unplug power supply cord from fan motor.
- 5) Remove (4) screws, which hold fan motor and grill to bottom of unit and remove fan.
- 6) Put replacement motor and grill in place and secure to the bottom of unit with screws.
- 7) Reconnect power supply cord to fan motor.
- 8) Replace back panel and enclosure. Fasten with screws removed in step 2.

C. REPLACING BELT DRIVE MOTOR


- 1) **DISCONNECT UNIT FROM POWER SOURCE.**
- 2) Remove the enclosure, by removing the screws on both the back and bottom of the unit and lifting the enclosure's back up first and pulling away from the unit.
- 3) Remove sprocket from motor shaft, using an Allen wrench and loosening the set-screw.
- 4) Remove the wire from terminal block connecting the drive motor to internal wiring.
On units rated 208 or 240 volts, note which color leads are being used for these connections and which lead is capped with white tape. The new motor should use the same arrangement.
- 5) Remove screws holding motor in place and remove motor from unit.
- 6) Put new motor in place and attach loosely with mounting screws.
- 7) Replace sprocket on motor shaft.

NOTE: The two sprockets should line up FLUSH with each other, so the chain does not twist any during operation. Also the hub gets installed closets to the motor.

- 8) Slide motor until the drive chain has about 1/4" slack when lightly pushed at the center of its top open run.
See chain tensioning illustration.
- 9) Tighten screws to secure motor.
- 10) Rewire leads same as removed in step 4.
- 11) Replace side panel and control box cover.

D. CLEANING AIR INTAKE ONCE A WEEK.

- 1) **DISCONNECT UNIT FROM POWER SOURCE.**
- 2) Place unit on its backside.
- 3) Use a vacuum cleaner and or a damp cloth to clean the air intake. This procedure should be done at least once a week.

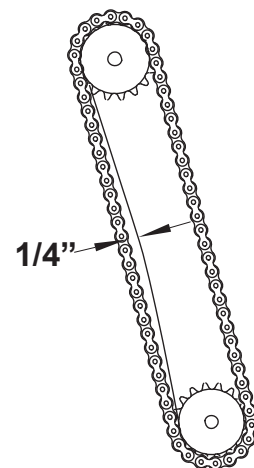

QCS/RCS Chain Tension

MAINTENANCE PROCEDURES continued

E. LUBRICATE THE CHAIN & SPROCKETS EVERY 6 MONTHS

- 1) **DISCONNECT UNIT FROM POWER SOURCE.**
- 2) Remove enclosure exposing chain drive.
- 3) Using an extreme pressure, synthetic chain lubricant with a temperature range up to 400°F. Apply liberally onto chain and sprockets. This grease is available as **part no. 1L-Z12397**.
- 4) Replace enclosure, Reconnect power source and test unit.

TROUBLESHOOTING GUIDE

A. UNIT WILL NOT HEAT, CONVEYOR BELT WILL NOT MOVE.

- 1) Be sure the main circuit breaker is switched to the ON position.
- 2) Check to see if the toaster is plugged in and all controls are turned to the ON position.
- 3) Call the Star Service Help Desk at 314-678-6303.

B. UNIT HAS HEAT ONLY ON ONE SIDE, CONVEYOR BELT TURNS FREELY.

- 1) Call the Star Service Help Desk at 314-678-6303, as heating element may need replacing.

C. CONVEYOR WILL NOT TURN, UNIT HEATS PROPERLY.

To check for mechanical binding:

- 1) **DISCONNECT UNIT FROM POWER SOURCE.**
- 2) Remove 2 screws holding enclosure to the bottom of the unit.
- 3) Set unit on the legs and remove 4 screws on the back of the toaster.
- 4) Slide the enclosure off the unit and remove the back panel.
- 5) Loosen the four screws that hold the drive motor in place.
- 6) Slide the motor up allowing the drive chain to be removed from the sprockets.
- 7) Move the conveyor belt by hand to check for mechanical binding.
If conveyor moves freely, call the Star Service Help Desk at 1-800-807-9054, as the drive motor and/or speed control may need replacing.
- 8) Replace the enclosure by sliding it forward towards the front of the unit.
The front edge of the enclosure will slide beneath the toaster front.

D. CONVEYOR TURNS AT ONE SPEED REGARDLESS OF SPEED CONTROL SETTING.

- 1) Call the Star Service Help Desk at 314-678-6303, as speed control **MAY** need replacing.

E. PRODUCT STICKING TO CONVEYOR OR SLIDE

Your Holman conveyor toaster is designed to toast product that is a current room temperature. **DO NOT** attempt to put frozen, refrigerated, or any butter or a butter substitute material in the toaster. Doing so may cause it to come out doughy or very moist, as well as possibly sticking to parts of the unit.

- 1) Follow the cleaning procedures listed on page 5.

Visit our Website at: www.star-mfg.com

Email: customerservice@star-mfg.com

THOROUGHLY INSPECT YOUR UNIT ON ARRIVAL

This unit has been tested for proper operation before leaving our plant to insure delivery of your unit in perfect condition. However, there are instances in which the unit may be damaged in transit. In the event you discover any type of damage to your product upon receipt, you must immediately contact the transportation company who delivered the item to you and initiate your claim with same. If this procedure is not followed, it may affect the warranty status of the unit.

LIMITED EQUIPMENT WARRANTY

All workmanship and material in Star products have a one (1) year limited warranty on parts & labor in the United States and Canada. Such warranty is limited to the original purchaser only and shall be effective from the date the equipment is placed in service. Star's obligation under this warranty is limited to the repair of defects without charge, by the factory authorized service agency or one of its sub-agencies. Models that are considered portable (*see below*) should be taken to the closest Star service agency, transportation prepaid.

- > Star will not assume any responsibility for loss of revenue.
- > On all shipments outside the United States and Canada, see International Warranty.
- * The warranty period for the Ultra-Max, Hot Plates, Griddles, Charbroilers is (3) years parts & labor.
- * The warranty period for the Star-Max, Charbroilers, Griddles, Hot Plates, Fryers & Finishing Oven is (2) years parts & labor.
- * The warranty period for the JetStar six (6) ounce & Super JetStar eight (8) ounce series popcorn machines is two (2) years.
- * The warranty period for the Chrome-Max Griddles is five (5) years on the griddle surface. See detailed warranty provided with unit.
- * The warranty period for Dura-Tec coatings is one year under normal use and reasonable care. This warranty does not apply if damage occurs to Dura-Tec coatings from improper cleaning, maintenance, use of metallic utensils, or abrasive cleaners, abrasive pads, product identifiers and point-of-sale attachments, or any other non-food object that comes in continuous contact with the roller coating. This warranty does not apply to the "non-stick" properties of such materials.
- > This warranty does not apply to "Special Products" but to regular catalog items only. Star's warranty on "Special Products" is six (6) months on parts and ninety (90) days on labor.
- > This warranty does not apply to any item that is disassembled or tampered with for any purpose other than repair by a Star Authorized Service Center or the Service Center's sub-agency.
- > This warranty does not apply if damage occurs from improper installation, misuse, wrong voltage, wrong gas or operated contrary to the Installation and Operating instructions.
- > This warranty is not valid on Conveyor Ovens *unless* a "start-up/check-out" has been performed by a Factory Authorized Technician.

PARTS WARRANTY

Parts that are sold to repair out of warranty equipment are warranted for ninety (90) days. The part only is warranted, the labor to replace the part is **NOT** warranted.

SERVICES NOT COVERED BY WARRANTY

- | | |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| 1. Travel time and mileage rendered beyond the 50 mile radius limit | 10. Voltage conversions |
| 2. Mileage and travel time on portable equipment (<i>see below</i>) | 11. Gas conversions |
| 3. Labor to replace such items that can be replaced easily during a daily cleaning routine, ie; removable kettles on fryers, knobs, grease drawers on griddles, etc. | 12. Pilot light adjustment |
| 4. Installation of equipment | 13. Miscellaneous adjustments |
| 5. Damages due to improper installation | 14. Thermostat calibration and by-pass adjustment |
| 6. Damages from abuse or misuse | 15. Resetting of circuit breakers or safety controls or reset buttons |
| 7. Operated contrary to the Operating and Installation Instructions | 16. Replacement of bulbs |
| 8. Cleaning of equipment | 17. Replacement of fuses |
| 9. Seasoning of griddle plates | 18. Repair of damage created during transit, delivery, & installation OR created by acts of God |

PORTABLE EQUIPMENT

Star will not honor service bills that include travel time and mileage charges for servicing any products considered "Portable" including items listed below. These products should be taken to the Service Agency for repair:

- * The Model 510FD, 510FF Fryer.
- * The Model 526TOA Toaster Oven.
- * The Model J4R, 4 oz. Popcorn Machine.
- * The Model 518CMA & 526CMA Cheese Melter.
- * The Model 12MC & 15MC & 18MCP Hot Food Merchandisers.
- * The Model 12NCPW & 15NCPW Nacho Chip/Popcorn Warmer.
- * All Hot Dog Equipment **except** Roller Grills & Drawer Bun Warmers.
- * All Nacho Cheese Warmers **except** Model 11WLA Series Nacho Cheese Warmer.
- * All Condiment Dispensers **except** the Model HPD & SPD Series Dispenser.
- * All Specialty Food Warmers **except** Model 130R, 11RW Series, and 11WSA Series.
- * All QCS/RCS Series Toasters **except** Model QCS3 & RCS3 Series.
- * All Fast Steamer Models **except** Direct Connect Series.



ALL:


- * Pop-Up Toasters
- * Butter Dispensers
- * Pretzel Merchandisers
(Model 16PD-A Only)
- * Pastry Display Cabinets
- * Nacho Chip Merchandisers
- * Accessories of any kind
- * Sneeze Guards
- * Pizza Ovens
(Model PO12 Only)
- * Heat Lamps
- * Pumps-Manual

The foregoing warranty is in lieu of any and all other warranties expressed or implied and constitutes the entire warranty.

FOR ASSISTANCE

Should you need any assistance regarding the Operation or Maintenance of any Star equipment; write, phone, fax or email our Service Department. In all correspondence mention the Model number and the Serial number of your unit, and the voltage or type of gas you are using.

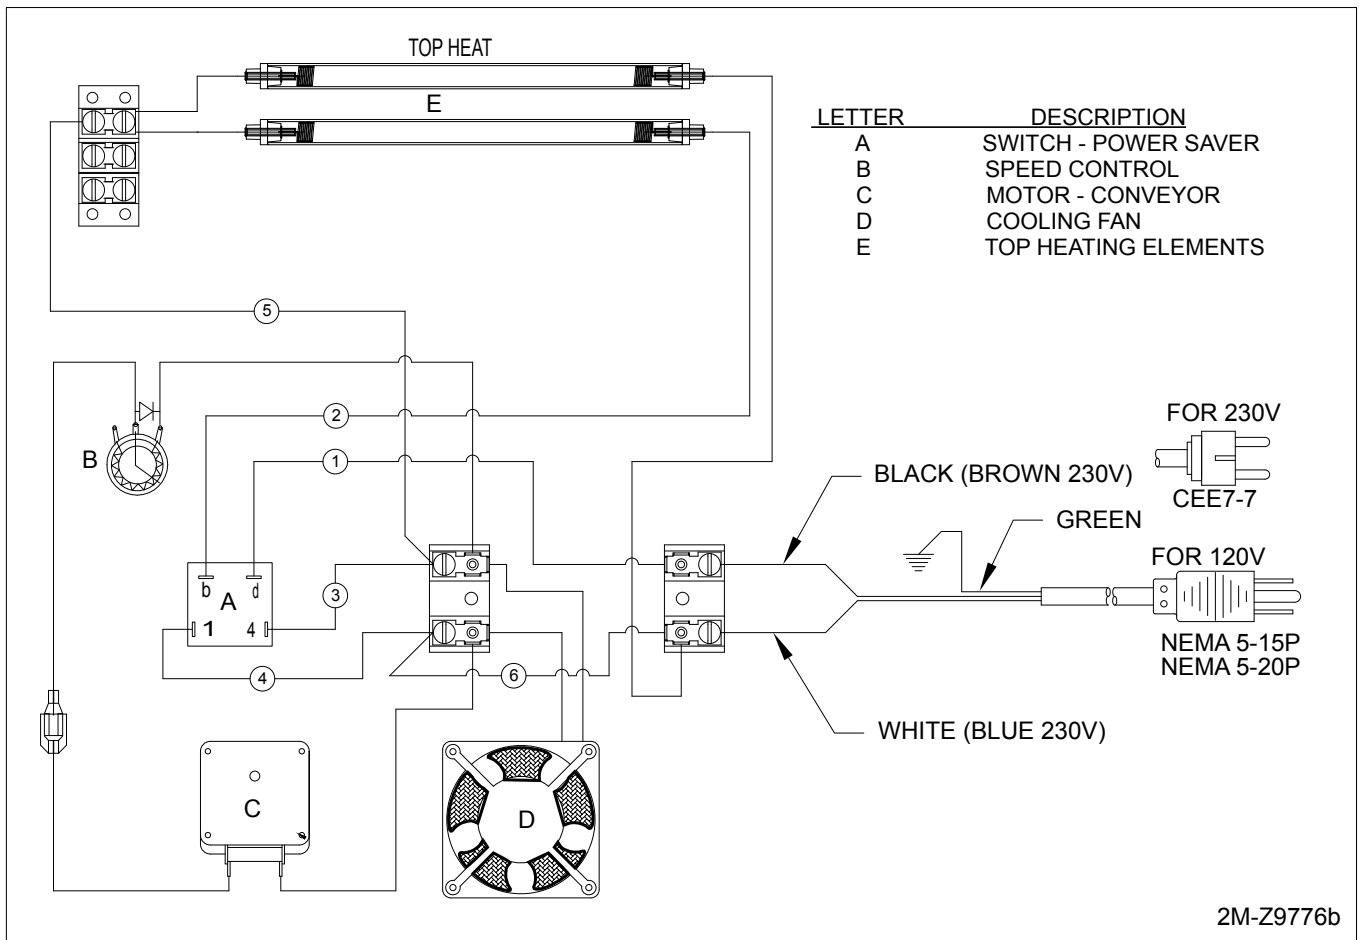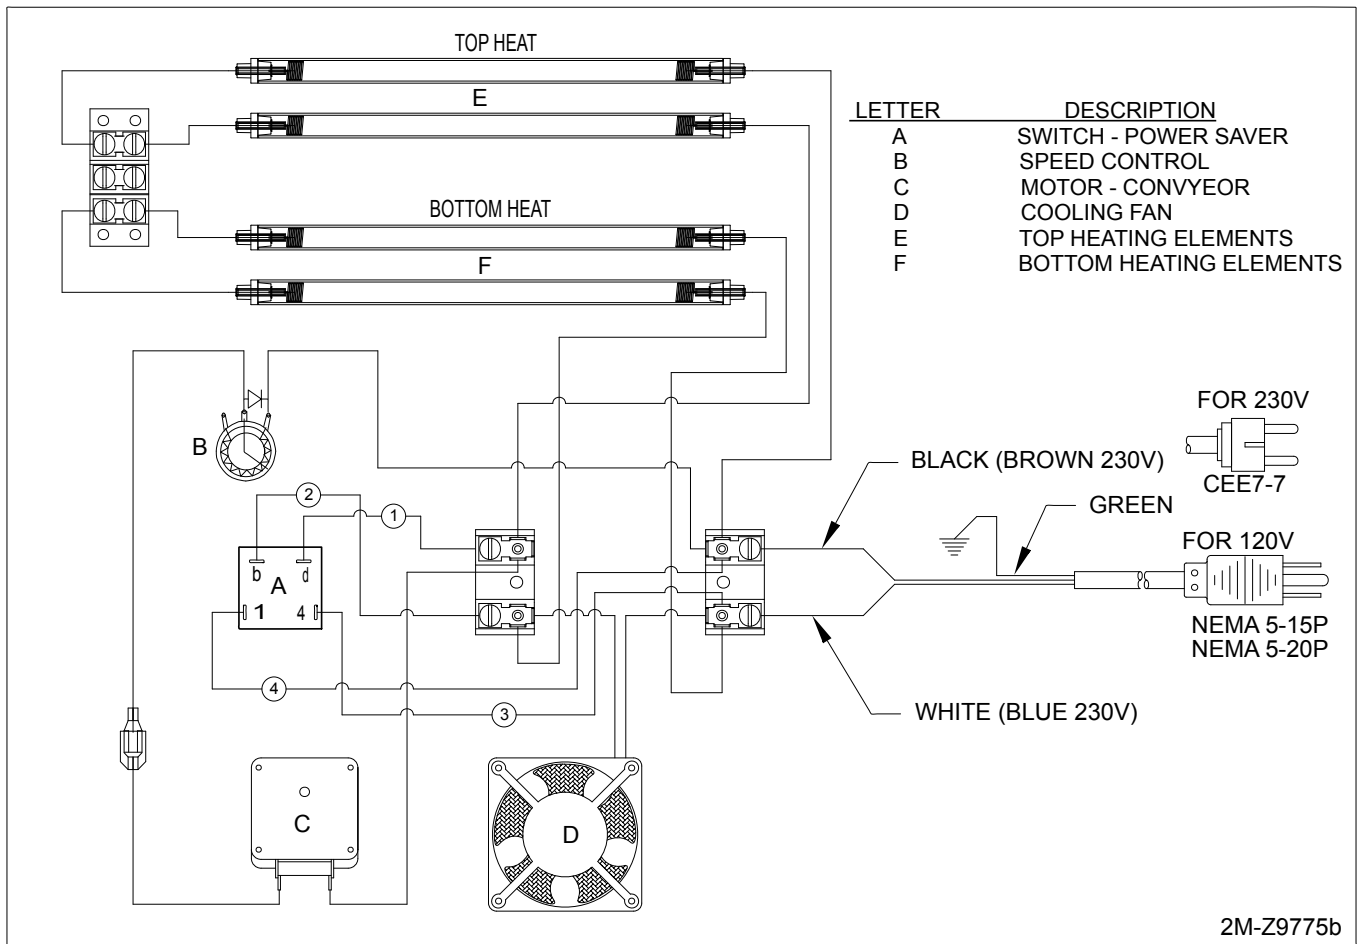

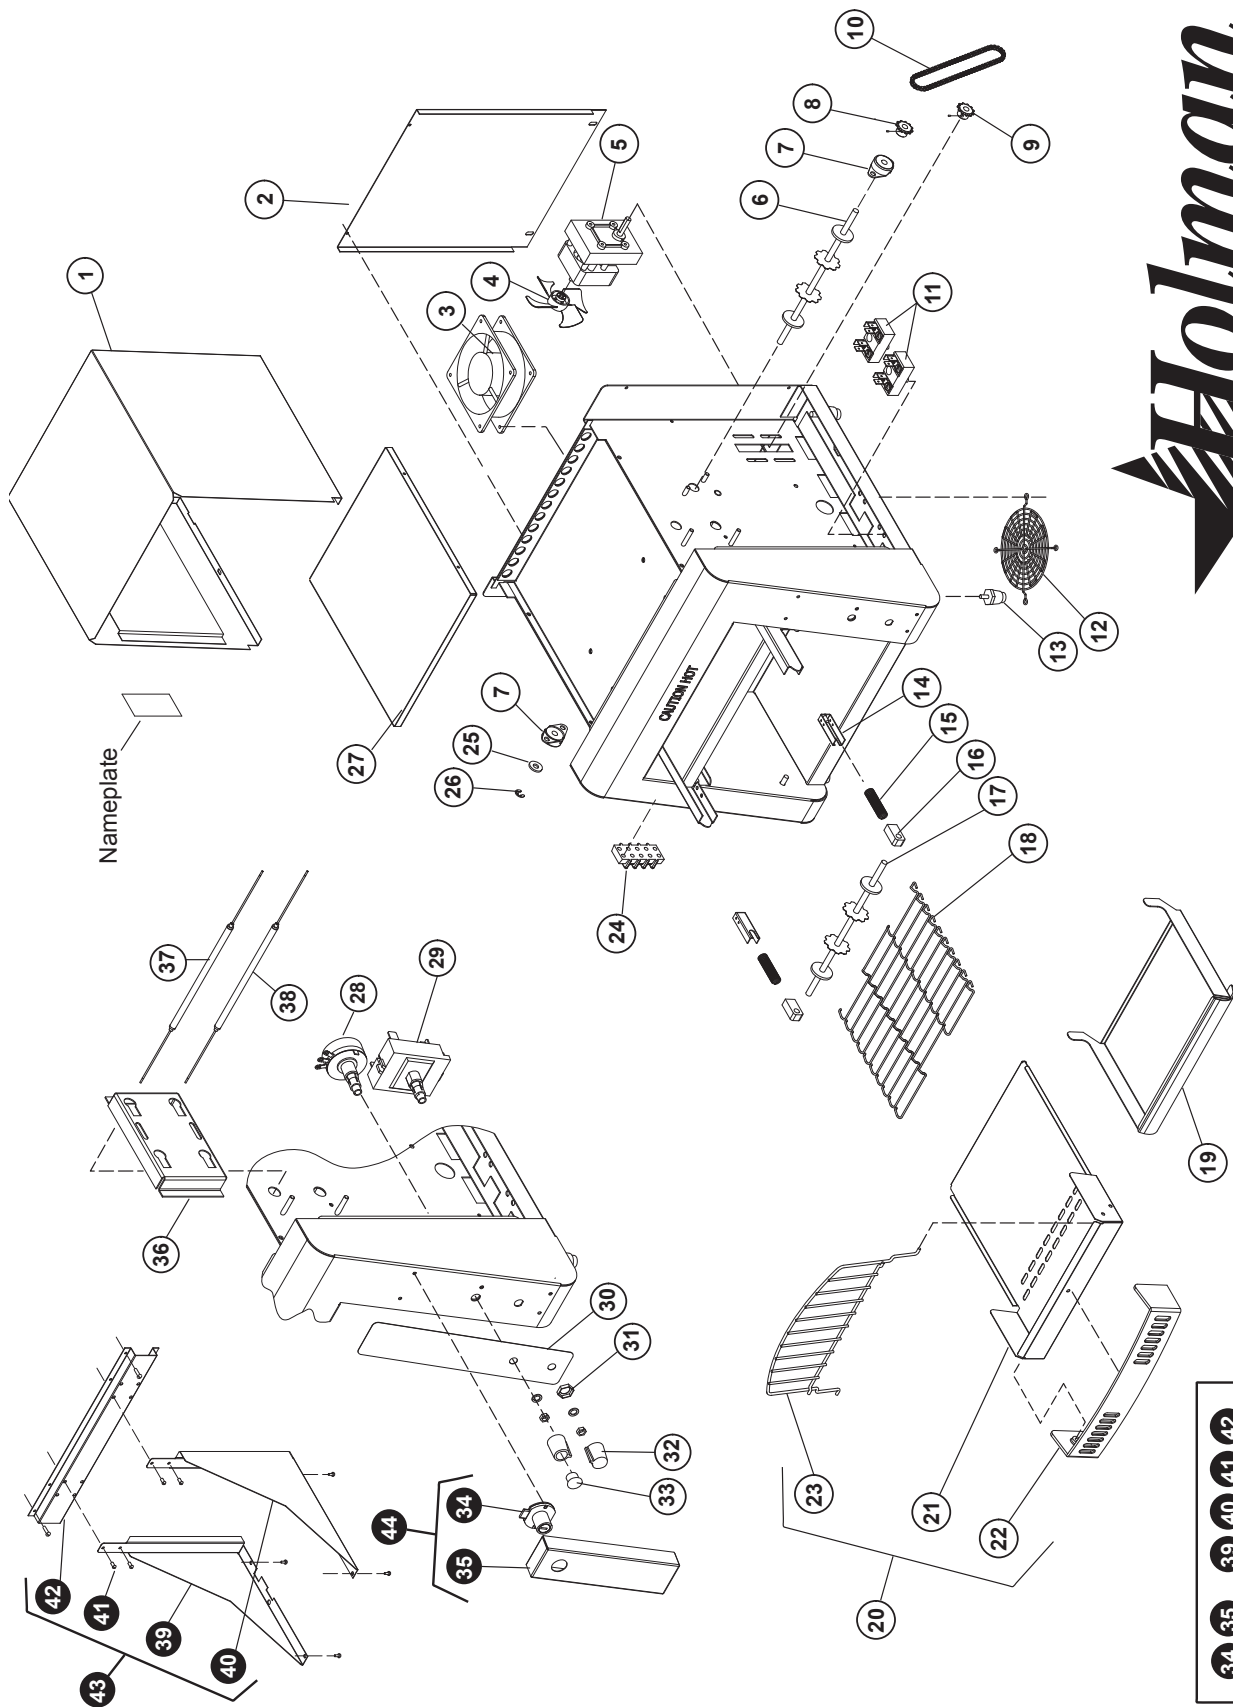

SK2212 Rev. A 11/17/2011

34 35 39 40 41 42
OPTIONAL ACCESSORY PARTS

MODEL: QCS1-350/500B-120V CONVEYOR TOASTER

THIS DRAWING CONTAINS INFORMATION CONFIDENTIAL TO HOLMAN.
NO REPRODUCTION OR DISCLOSURE OF ITS CONTENTS IS PERMITTED.

Model: Q1-350, Q1-500B, Q1-35C				
Fig No	Part No	Qty	Description	Application
1	HA-Z9786	1	BODY COVER	
2	HA-Z9745	1	BACK PANEL	
3	2U-200558	1	MOTOR, FAN 120V 15BTL	120V
	2U-200560		FAN 240V	230V
4	2R-Z8879	1	2-5/8" DIA FAN BLACK CW	
5	HA-120240	1	MOTOR ASSEMBLY	120V, CUL20, 350-CUL15
	HA-120243		MOTOR W/QC ASSY	230V
6	2A-202900	1	SHAFT, DRIVE	
7	HA-112261	2	BEARING ASSY, 5/16 BRONZE	
8	2P-200645	1	SPROCKET, 25B17 X 5/16", DRIVEN	
9	2P-200646	1	SPROCKET, 25B20 X 5/16", DRIVE	
10	2P-200665	1	CHAIN, 17 1/2"	Q1-350, Q1-500B
11	2E-Z9736	2	TERMINAL BLOCK - POWER	
12	2R-200562	1	FAN GUARD (OLDER MODELS)	
13	2R-200709	4	LEG 1 INCH CHROME PLASTIC	
	2R-Z18201		FOOT 1.69X1 SIL 1/4 20	Q1-35C, Q1-50BC
14	HA-Z9743	2	SPRING RETAINER	
15	2R-200736	2	2" INCH BEARING SPRING	
16	2P-200700	2	BEARING-PTFE SPRING LOADED	
17	2A-202904	1	SHAFT, IDLER	
18	HN-160020	1	CONVEYOR BELT (10" X 27")	
	2B-200601		LINK CONVEYOR BELT (10" WIDE)	
19	HA-100560	1	TRAY, PULL OUT, QCS 10"	
20	PS-120315	1	CRUMB TRAY ASSY	Q1-350 & 500
21	HA-Z9746	1	CRUMB TRAY	
22	PS-200787	1	CRUMB TRAY GUARD w/HARDWARE	
23	2B-200763	1	LOADUP, 10 EURO, WIRE	
24	2E-Z9737	1	TERMINAL BLOCK - ELEMENTS	
25	2C-200149	1	FLAT WASHER 5/16 ID 31NWX H8Z ZINC	
26	2A-200284	1	E-CLIP, 5/16"	
27	HA-Z9751	1	TOP LINER QCS-1	
28	HA-120239	1	SPEED CONTROL ASSEMBLY	
	HB-120261			230V
29	2E-200551	1	SWITCH ROTARY	
30	2M-Z9715	1	FRONT PANEL LABEL	
	2M-Z9759		LABEL - CONTROL	QCS1-500B
	2M-Z18430		FRONT PANEL LABEL	Q1-35C
	2M-Z18431		LABEL, QCS1-500-CONTROL	Q1-50BC
31	2C-200231	1	PALNUT, HEX, 3/8-24	
32	2R-200768	1	KNOB, CONTROL SERIES	
	2R-200769		KNOB, POWERSAVER SERIES	
	HA-120352		KNOB ASSY, CONTROL SPEED	Q1-35C, Q1-50BC
	HA-120353		KNOB ASSY, PWR SV-INF CNT	Q1-35C, Q1-50BC
33	2P-200708	2	CAP, KNOB CONTROL	
34	2R-200752	1	KEYLOCK SPEC KEYED ALIKE_KEY LOCKING ACCESSORY	
35	HF-Z9835	1	SECURITY LOCKING COVER_KEY LOCKING ACCESSORY	
36	HA-Z9744	1	ELEMENT RETAINER	

Model: Q1-350, Q1-500B, Q1-35C				
Fig No	Part No	Qty	Description	Application
37	HA-120231	2	HEATER ASSY 350W 60V - TOP	Q1-350-120V, Q1-CUL20
	HA-120233		HEATER ASSY 300W 60V-TOP	Q1-CUL15
	HA-120235		HEATER ASSY 350W 115V-TOP	Q1-350-230V
	HA-120237		HEATER ASSY 800W 120V-TOP	Q1-500B-120V
	HA-120238		HEATER ASSY 800W 115V-TOP	Q1-500B-230V
38	HA-120232	2	HEATER ASSY 450W 60V - BTM	Q1-350-120V, Q1-CUL20
	HA-120234		HEATER ASSY 400W 60V -BTM	Q1-CUL15
	HA-120236		HEATER ASSY 450W 115V-BTM	Q1-350-230V
39	HF-102215	1	ASSEMBLY BRACKET LEFT_WALL MOUNTING ACCESSORY	
40	HF-102214	1	ASSEMBLY BRACKET RIGHT_WALL MOUNTING ACCESSORY	
41	HF-100211	1	PLATE ASSY. _WALL MOUNTING ACCESSORY	
42	2C-200041	8	SCREW, 1/4-20 X 1/2 SLOT_WALL MOUNTING ACCESSORY	
NI	HA-120241	1	CORD SET ASSEMBLY QCS-1	350-120V, CUL15, 500B-120V
NI	HA-120242	1	CORDSET ASSY	CUL20
NI	HA-120244	1	CORDSET ASSY	QCS1-230CE
NI	HA-120245	1	CORDSET ASSY NEMA 6-20P	230V
NI	HA-120328	1	CORD SET ASSY Q1-AUS	230AU
NI	1L-Z12397	1	CHAIN LUB, 1oz TRIBOLUBE GREASE (80°F TO 400°F)	
NI	2K-Y3240	1	BUSHING HEYCO SR 17-2, CORD	
NI	2K-200464	1	BUSHING, WIRE RING 7/8"	
ACCESSORIES (Not necessarily sold with unit)				
43	WMK-QCS		KIT-QCS WALL MOUNT	
44	KLK-QCS1		QCS-1 LOCKING KIT	

STAR INTERNATIONAL HOLDINGS INC. COMPANY

Star - Holman - Lang - Wells - Bloomfield - Toastmaster

10 Sunnen Drive, St. Louis, MO 63143 U.S.A.

(314) 678-6303

www.star-mfg.com