

Spare Parts List

COUNTERTOP FRYERS - ITEM NUMBERS 40709, 40709-C, 40710, 40710-C

Callout	Part Number	Description
1	FFEB400	Fryer Head Assembly, 220V (includes Ref. No. 2, 3, 4, 5, 6, 7, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18)
2	XAA0002	Pilot Light, 220V, Red
3	N/A	Control Panel Insert
4	XAA0009	Control Panel Facia
5	N/A	Element Box
6	XFFA0004	Thermostat Control Knob
7	XFFA0013	Temperature Safety Switch Cover
8	N/A	Temperature Safety Switch Label
9	XFFA0008	Thermostat
10	XFFA8008	Temperature Safety Switch Sensor (Over Temperature Safety Thermostat)
11	XFFA5010	Micro Switch
12	N/A	Element Head Locating Pin
13	N/A	Back Plate
14	XCOA1013	Power Cord Restraint
15	XAA0006	Power Cord, 220V, NEMA 6-15P Plug
16	N/A	Element Cover
17	XFFA8001	Heating Element, 220V ~ 3000 Watt
18	XFFA8030	Relay
19	40711	Basket, Small
20	40712	Basket, Large
21	N/A	Food Screen
22	N/A	Fryer Body, Single
23	N/A	Fryer Body, Double
24	XFFA8011	Foot, Rubber
25	XFFA8027	Night Cover
26	XFFA8002	Drain Valve Assembly (includes Ref. No. 29)
27	N/A	Trim Ring
28	XFFA8100	White Plastic Plug to Activate Safety Switch
29	XFFA8102	Drain Valve Handle

Exploded View

