



ADDENDUM

SDC CONTROLS FOR HDWO1, HDWO1D, HDWO3, & HDWO3D DECK OVENS


This addendum is a supplement to the instruction manual. For detailed information about the use and care of this equipment, see F36711.

⚠ WARNING The oven and its parts are hot. Use care when operating, cleaning or servicing the oven. The baking compartment contains live steam. Stay clear when opening door.

SDC CONTROLS

There is a control panel for each oven deck. When the oven is turned on, the oven will begin to heat to the set temperature of both the Top and Bottom Heat. The timer does not control the oven. Each control panel has three numeric display windows. They are:

- **TOP HEAT WINDOW** - Displays the current top heat temperature. The temperature range is 85°F to 550°F.
- **BOTTOM HEAT WINDOW** - Displays the current bottom heat temperature. The temperature range is 85°F to 550°F.
- **TIMER/STEAM WINDOW** - Displays the timer or steam timer setting. The range is 00 to 99 minutes for the timer and is 00 to 30 seconds for the steam timer.

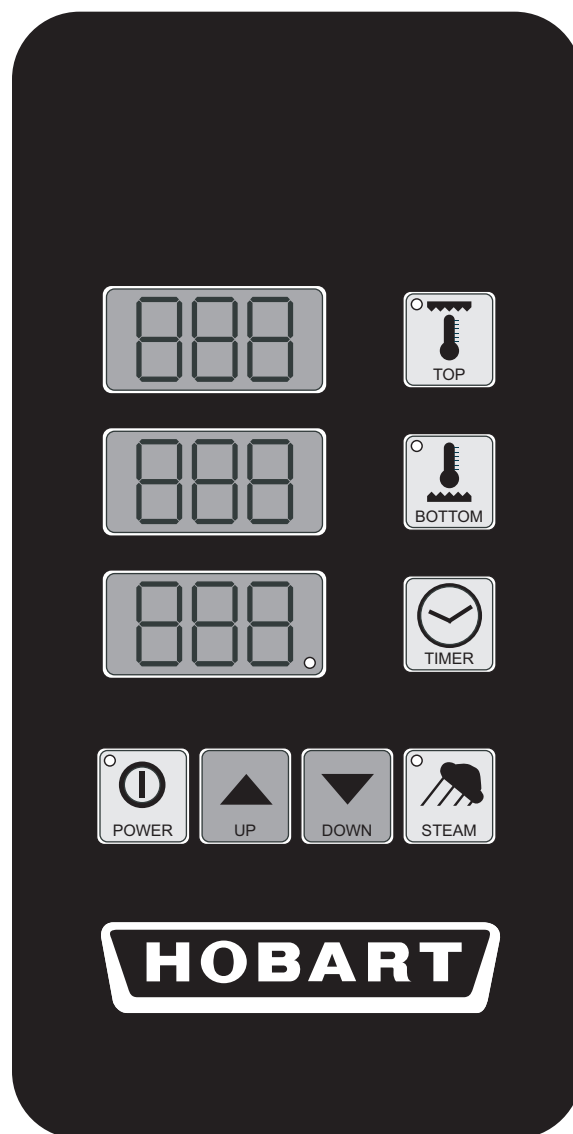

SDC CONTROL PANEL BUTTONS		
	ON/OFF Button	Use this button to turn the oven on or off. The button light is illuminated when the oven is in standby mode.
	Arrow UP Button	Use this button to increase setting feature such as temperature or time.
	Arrow DOWN Button	Use this button to decrease setting feature such as temperature or time.
	Top Heat Button	Range: 85°F to 550°F. Use this button with the arrow buttons to set the temperature.
	Bottom Heat Button	Range: 85°F to 550°F. Use this button with the arrow buttons to set the temperature.
	Steam Button	Range of steam time: 00 to 30 seconds. Use this button with the arrow buttons to set the steam time. When the button light is illuminated the steam generator is heating up and NOT ready to steam. Light must be off to steam.
	Timer Button	Range: 00 to 90 minutes. Use this button with the arrow buttons to set the timer. The display LED flashes when the timer is running.

TURNING ON/OFF THE OVEN

NOTE: The oven has power when the light is illuminated.

1. Press the POWER button to turn the oven on. The button light will be off and the baking compartment light will illuminate to indicate that the oven is operational. The actual temperatures will appear in the display windows.
2. Press the POWER button to turn the oven off. The button light will be illuminated to indicate that the oven has power to it.




SETTING THE TOP HEAT

1. Press the TOP button to adjust the top heat setting. The top heat setting will flash in the top heat window. The operating range is 200°F to 550°F.
2. Press the UP or DOWN ARROW buttons to adjust the set point.

NOTE: The display will increment by 1° each time the arrow button is pressed.

3. After pressing the ARROW button, wait 10 seconds to allow the new top heat setting to save. The light will stop flashing and the new saved top heat setting will be set and the oven will display the TOP HEAT temperature.

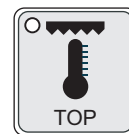


SETTING THE BOTTOM HEAT

1. Press the BOTTOM button to adjust the bottom heat setting. The bottom heat setting will flash in the bottom heat window. The operating range is 200°F to 550°F.
2. Press the UP or DOWN ARROW buttons to adjust the set point.

NOTE: The display will increment by 1° each time the arrow button is pressed.

3. After pressing the ARROW button, wait 10 seconds to allow the new bottom heat setting to save. The light will stop flashing and the new saved bottom heat setting will be set and the oven will display the BOTTOM HEAT temperature.

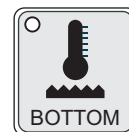

SETTING THE TIMER

1. Press the TIMER button to set the timer. The timer setting will flash in the timer window.
2. Press the UP or DOWN ARROW buttons to adjust the timer.

NOTE: The display will increment by 1 minute each time the arrow button is pressed. If you hold down the arrow button for more than 1 second, the display will increment quickly until released.

3. The time will continue to flash until the TIMER button is pressed. It will then start a countdown and the display light will flash indicating timer is being used.

NOTE: When the timer reaches 00 the buzzer will sound and the display will show OFF. To silence buzzer and clear OFF press the TIMER button. The timer does not control the oven functions.

SETTING THE STEAMING TIMER

1. Press and hold the STEAM button to set the steam timer. The steam timer setting will flash in the steam/timer window.
2. Press the UP or DOWN ARROW buttons to adjust the steam timer.

NOTE: The display will increment by 1 second each time the arrow button is pressed. If you hold down the arrow button for more than 1 second, the display will increment quickly until released.

3. Release the STEAM button. The steaming function begins and the timer counts down. If the steam indicator is illuminated, no steam will be produced.

TURNING ON/OFF THE STEAM FUNCTION

1. Press the STEAM button to start the steam function. The steam timer setting will flash in the steam/timer window. The steaming function begins and the timer counts down. If the steam ready indicator is not illuminated, no steam will be produced.
2. To turn the steam function off, press and hold the STEAM button.
3. Press the DOWN ARROW button until OFF appears in the steam/timer window.
4. Release the STEAM button. The steaming function is now off.

CONTROL PANEL FLASHING

⚠ WARNING If all the display windows are flashing the oven is malfunctioning. Turn off oven and disconnect from power supply. Contact an approved servicer.

NOTE: When all the display windows flash, the control panel compartment has exceeded the operating temperature for the components in the controls area. Turn the oven off and allow to cool. You may try to return the oven to service after it has cooled down. If the problem continues contact an approved servicer.

