


WATERPROOF THIN TIP THERMOMETER

-40 to +572°F/-40 to +300°C

FOR THIN CUTS OF MEAT AND GENERAL PURPOSE COOKING

- NSF[®] Certified
- 4 second response
- 1.5 mm thin tip
- 3.5"/8.9 cm stem
- Waterproof (IPX7: protected from water up to 3 feet/1 meter for 30 minutes)
- Field calibration
- High heat
- Max/min
- Data-hold
- Big digit
- 180° rotating display
- On/off button
- Auto-off after 10 minutes
- Food-safe ABS plastic with BioCote[®]
- 304 stainless steel stem
- Temperature guide on thermometer
- 2-way mounting: pocket clip/hook
- Two 1.5V IEC LR44 button alkaline batteries (included)

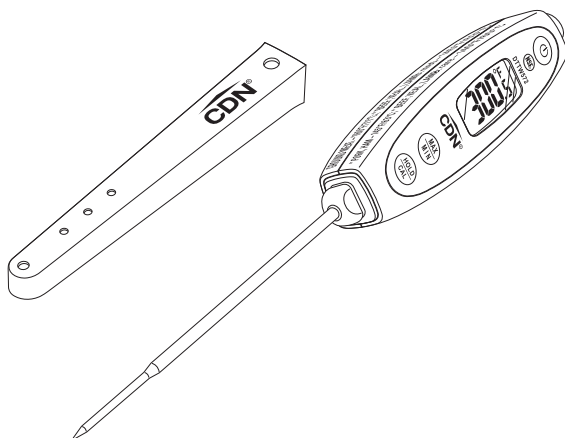

Note: Remove label from display before initial use.
Clean the thermometer stem before each use.

Pro
Accurate[®]  
Quick-Read[®]

Note: In the following instructions, names of the control buttons are shown in CAPS. Function information that appears on the display is shown in **BOLD CAPS**.

BATTERY INSTALLATION

Replace batteries when LCD becomes dim.
“---” flashes on the display when the batteries need to be replaced.

1. Power off the unit before installing the batteries. A malfunction may occur if the power is on when the batteries are installed. If a malfunction occurs, restart the device.
2. Using a small Phillips screwdriver, remove the screw on the back by the pocket clip by turning it counter clockwise.
Note: Be careful to use a properly-sized screwdriver as a screwdriver too large will strip the screwtops.
3. Remove the cover completely.
4. Install two LR44 batteries with positive (+) sides up.
5. Replace the battery cover.
Important: THE WATER RESISTANT FEATURE REQUIRES MAINTAINING THE RUBBER GASKET EVENLY WITHIN THE GROOVE.
6. Fasten the screw on the back by turning it clockwise, being careful not to over-turn.

OPERATING INSTRUCTIONS

A. On/Off

1. Press the POWER button (⏻) to turn the thermometer on.
2. The DTTW572 will automatically turn off after 10 minutes of inactivity.
3. Press the POWER button (⏻) again to turn the thermometer off and conserve battery life.

B. Temperature Scale

To select temperature reading in Fahrenheit or Celsius:

1. Using a paperclip, press the °F/°C button on the back to change the scale.
2. The °F or °C symbol changes on the display.

C. Display Rotation

While the DTTW572 is on, press and hold the MAX/MIN button to rotate the display orientation 180 degrees.

Note: Pressing and holding the MAX/MIN button in the Max or Min mode will clear the values.



D. Temperature Measurement

Important: THE PROBE MAY BE DAMAGED IF MEASUREMENT TEMPERATURE IS LOWER THAN -40°F/-40°C OR HIGHER THAN +572°F/+300°C.

Note: The DTTW572 is intended for food service use — do not use for safety related applications.

1. Insert the probe at least 0.25"/6.3 mm into the food.
2. The current cooking temperature appears on the display.
CAUTION: Probe may be HOT after use. Always wear a heat resistant glove to touch the stainless steel probe during or just after cooking. Do not touch with bare hands.

E. Data-Hold

Before withdrawing the DTTW572 from the food, press the HOLD/CAL button. This will “hold” the reading until pressed again. **h** flashes in the upper left corner of the display.

F. Max/Min Mode

Max/Min Mode is always working behind the scenes, continually storing the highest and lowest temperatures.

1. **Before using Max/Min Mode, clear the stored MAX/MIN values by pressing and holding the MAX/MIN button in Max or Min mode to clear the respective stored MAX/MIN value.**
2. Press the MAX/MIN button to display the highest temperature. **H** appears on the display.
3. Press the MAX/MIN button twice to display the lowest temperature. **L** appears on the display.
4. The display automatically returns to the temperature mode after a few seconds.
5. While in Max mode, press and hold the MAX/MIN button to clear the MAX value.
6. While in Min mode, press and hold the MAX/MIN button to clear the MIN value.

G. Field Calibration

1. Fill a 1 cup measuring container with a slurry of ice water using 3 parts crushed ice to 1 part water.
Note: It is very difficult to get a 32°F/0°C ice water temperature. It will probably be closer to 34°F/1°C.
2. Allow to stand for 3-5 minutes.
3. Immerse the probe into the middle of the ice slurry to a depth of at least 2 inches. **Do not let the stem touch the bottom of container.**
4. Press and hold the HOLD/CAL button. **CO** appears on the display for 3 seconds and then the current temperature appears on the display.
5. Press the HOLD/CAL button again to calibrate to 32.0°F/0°C.
6. **CAL** appears on the display for 5 seconds and then returns to the current temperature.
Note: To avoid accidental recalibration, this function only works when the water temperature is 30 to 34°F/-1 to +1°C.
Err will appear for 2 seconds if the water is not within this range and then return to the temperature display mode.

H. Battery Status

1. The display flashes when the voltage on the batteries is low.
2. “---” flashes on the display when the batteries need to be replaced.

Important: DO NOT LEAVE THERMOMETER CASE IN HOT OVEN. CASE IS NOT HEAT RESISTANT. HAND WASH AND DRY.

Note: Remove label from display before initial use. Clean the thermometer probe before each use.

Note for Induction Cooktops: Sometimes, the induction cooktop magnetic field may interfere with digital thermometers. If there is interference, briefly turn off the induction cooktop to get a digital thermometer reading or use a dial thermometer.

Tip: Meat should be allowed to “rest” for 10 to 15 minutes after it is removed from oven. This allows time for the meat’s internal temperature to stabilize and the juices to redistribute. This will result in a roast that is both juicier and easier to carve.

CARE OF YOUR PRODUCT

- Wipe clean with a damp cloth.
- Store the thermometer at room temperature between -4 to +149°F/ -20 to +65°C.

PRECAUTIONS

- Always wear a heat resistant glove to touch the stainless steel probe during or just after cooking.
Do not touch with bare hands.
- Dispose of used batteries promptly and keep the batteries and thermometer away from children.
- Avoid subjecting the probe or thermometer to an open flame on the BBQ.
- Avoid subjecting the probe and/or thermometer to temperatures over 572°F/300°C.
- Clean the probe and thermometer with warm soapy water and dry thoroughly after use.
- Avoid cleaning the unit with an abrasive or corrosive compound, which may scratch the plastic parts and corrode the electronic circuits.
- Avoid subjecting the thermometer to excessive force, shock, dust, temperature, direct sunlight or humidity. This may result in thermometer malfunction, shorter electronic life span, battery damage and/or distort parts.
- Avoid tampering with the thermometer’s internal components, which may cause battery damage and distort parts.
- Do not use the thermometer in microwave oven.
- Always read the user manual thoroughly before operating.

SPECIFICATIONS

Measurement Range	-40 to +572°F/-40 to +300°C
Unit of Measure	°F/°C
Resolution	0.1°F/0.1°C
Operating Range	32 to 104°F/0 to 40°C/≤90% RH
Water Resilience	IPX7 – protected from water up to 3 feet/1 meter for 30 minutes
Accuracy	-40 to +392°F/-40 to +200°C: ±0.7°F/±0.4°C; above 392°F/200°C: ±1.8°F/±1°C (@ ambient temperature 73°F: ±3.6°F/23°C: ±2°C)
Power Supply	Two 1.5V IEC LR44 alkaline batteries, included
Product Dimensions	0.87 W x 7.24 H x 0.89 D (in)/ 2.22 W x 18.4 H x 2.25 D (cm)
Weight	1.8 oz / 45 g (including battery)

USDA SAFE FOOD TEMPERATURES

- * Beef, Veal, Lamb – well 160°F . . 71°C
 - * Beef, Veal, Lamb – medium. . . 145°F . . 63°C
 - * Beef, Veal, Lamb – rare 140°F . . 60°C
 - Poultry 165°F . . 74°C
 - * Pork/Ham – pre-cooked 145°F . . 63°C
 - Ground Meat 160°F . . 71°C
- * 3 minutes rest time

OIL TEMPERATURE GUIDE

325–375°F/163–190°C is the normal desired temperature for deep fry cooking.

Note: When food is added to hot oil, the temperature of the oil immediately drops at least 50°F/28°C. You will need to bring the oil temperature back to the desired cooking temperature. Frying at lower temperatures results in lighter color, less flavor development and increased oil absorption.

DEEP FRY TEMPERATURE GUIDE

Deep Fry Lo	325–340°F	163–170°C
Deep Fry Hi	340–365°F	170–185°C
Shrimp	350°F	177°C
Chicken	355°F	180°C
Onions	370°F	188°C
Fish	375°F	191°C
Doughnuts/Fritters	375°F	191°C
French Fries	380°F	193°C

CE Note: This device could be sensitive to electrostatic discharge. If electrostatic discharge or malfunctioning occurs, please re-install the battery to reset this unit.

CANDY TEMPERATURE GUIDE

Jelly	220°F	104°C
Thread	230–234°F	110–112°C
Soft Ball	234–240°F	112–115°C
Firm Ball	244–248°F	118–120°C
Hard Ball	250–266°F	121–130°C
Soft Crack	270–290°F	132–143°C
Hard Crack	300–310°F	149–154°C
Caramelize	316–338°F	158–170°C

HIGH ALTITUDE ADJUSTMENT FOR CANDY-MAKING

STAGE	2,000 feet	5,000 feet	7,500 feet
Soft Ball	230–236°F	224–230°F	219–225°F
Firm Ball	238–244°F	232–238°F	227–233°F
Hard Ball	246–264°F	240–258°F	235–253°F
Soft Crack	266–286°F	260–286°F	255–275°F
Hard Crack	296–306°F	290–300°F	285–295°F



Antimicrobial properties are built-in to inhibit the growth of bacteria that may affect this product. According to EPA guidelines we cannot claim that the antimicrobial properties in this product protect users or others against bacteria, viruses, germs, or other disease organisms.

This product does not protect users or others against food-borne bacteria. Always clean and wash this product thoroughly before and after each use.

The information in this document has been reviewed and is believed to be accurate. However, neither the manufacturer nor its affiliates assume any responsibility for inaccuracies, errors or omissions that may be contained herein. In no event will the manufacturer or its affiliates be liable for direct, indirect, special, incidental or consequential damages arisen by using this product or resulting from any defect/omission in this document, even if advised of the possibility of such damages. The manufacturer and its affiliates reserve the right to make improvements or changes to this document and the products and services described at any time, without notice or obligation.



5-Year Limited Warranty: Any instrument that proves to be defective in material or workmanship (excluding batteries) within five years of original purchase will be repaired or replaced without charge upon receipt of the unit prepaid at: CDN, PO Box 10947, Portland, OR 97296-0947 USA. This warranty does not cover damage in shipment or failure caused by failure to adhere to the accompanying instructions, inadequate maintenance, normal wear and tear, tampering, accident, misuse, unauthorized modification, obvious carelessness or abuse. CDN shall not be liable for any consequential or incidental damages whatsoever.

For more detailed information on our products, please visit CDNmeasurement.com or call 800-338-5594.

