



COMPACT BOOSTER Electric Water Heaters

C Series


| | | |
|-------------|-------------|-------------|
| <i>C-4</i> | <i>C-13</i> | <i>C-30</i> |
| <i>C-5</i> | <i>C-15</i> | <i>C-36</i> |
| <i>C-6</i> | <i>C-17</i> | <i>C-39</i> |
| <i>C-7</i> | <i>C-18</i> | <i>C-45</i> |
| <i>C-9</i> | <i>C-24</i> | <i>C-54</i> |
| <i>C-12</i> | <i>C-27</i> | <i>C-58</i> |

**REPLACEMENT
PARTS LIST**

HATCO COMPACT ELECTRIC BOOSTER HEATER C SERIES 4KW-58KW

Model Designation

C-XX
 C = Compact
 X = Kilowatts

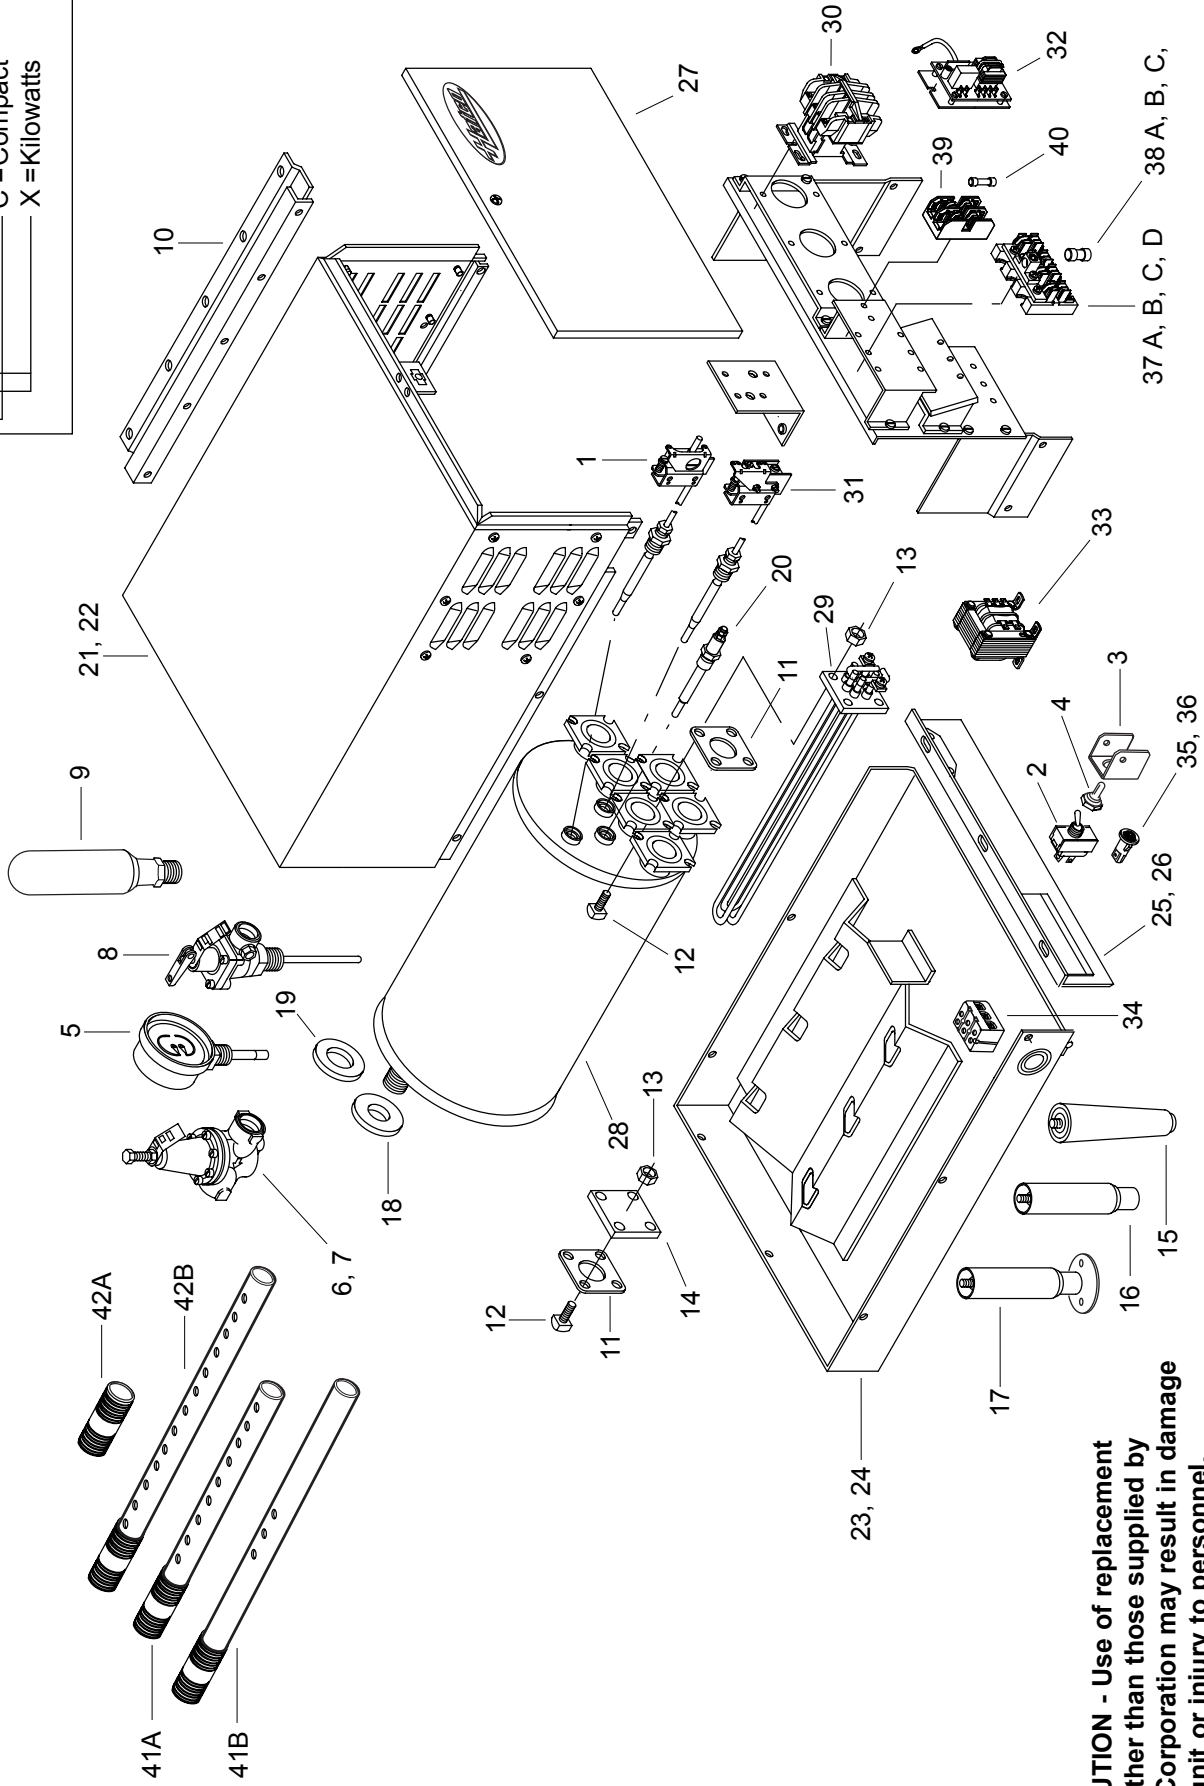

CAUTION - Use of replacement parts other than those supplied by Hatco Corporation may result in damage to the unit or injury to personnel.

**PARTS COMMON TO ALL
COMPACT BOOSTER MODELS
4KW-58KW**

| ITEM | DESCRIPTION | PART NO. | QTY. |
|------|--|----------------|------|
| 1 | High Limit, Thermostat | 02.16.116.00 | 1 |
| 2 | On/Off Toggle Switch | R02.19.008A.00 | 1 |
| 3 | Guard, Toggle Switch | 04.01.038.00 | 1 |
| 4 | Toggle Switch Boot, Rubber | 02.20.040.00 | 1 |
| 5 | Temperature/Pressure Gauge | 03.01.003.00 | 2 |
| 6 | Pressure Reducing Valve, Iron | 03.02.004.00 | 1 |
| 7 | Pressure Reducing Valve, Brass (Optional) | 03.02.015.00 | 1 |
| 8 | Temperature/Pressure Relief Valve | 03.02.022.00 | 1 |
| 9 | Shock Absorber (Optional) | 03.40.057.00 | 1 |
| 10 | Booster Slide Bracket Set | R04.20.030.00 | 1 |
| 11 | Gasket, Heating Element | 02.11.012.00 | 1-6 |
| 12 | Bolt, Element Mounting | 05.04.022.00 | 4-24 |
| 13 | Nut, Element Mounting | 05.04.028.00 | 4-24 |
| 14 | Blank Element Flange with Gasket and Hardware | R02.11.013.00 | 1 |
| 15 | Leg, Plastic | 05.30.069.00* | 4 |
| 16 | Leg, S.S. (Optional) | 05.30.070.00* | 4 |
| 17 | Deck Mount Legs, S.S. (Optional) | 05.30.073.00* | 4 |
| 18 | Ring Seal, In/Out Pipe | 05.06.006.00 | 2 |
| 19 | Ring Seal, Relief Valve | 05.06.017.00 | 1 |
| 20 | Probe, Low Water Cut Off | 02.40.001.00 | 1 |

* 4-18KW units manufactured with serial number 1021059907 or lower use part number 05.30.008.00 for the plastic leg, 04.01.013.00 for the S.S. leg and 04.01.014.00 for the S.S. deck mount leg. 24-58KW units manufactured with serial number 1017179907 or lower use part number 05.30.008.00 for the plastic leg, 4.01.013.00 for the S.S. leg and 04.01.014.00 for the S.S. deck mount leg.

NOTE: S.S. is an abbreviation for stainless steel.

**COMPACT BOOSTER
SHEET METAL BODY PARTS**

| ITEM | DESCRIPTION | 4KW-18KW | 24KW-58KW |
|------|---------------------------------|----------------|----------------|
| 21 | Jacket, Painted | R04.01.032.00 | R04.01.220.00 |
| 22 | Jacket, S.S. (Optional) | R04.01.034.00 | R04.01.254.00 |
| 23 | Base, Painted | R04.01.020P.00 | R04.01.201P.00 |
| 24 | Base, S.S. (Optional) | R04.01.022.00 | R04.01.251.00 |
| 25 | Base, Front, Painted | R04.01.033.00 | R04.01.233.00 |
| 26 | Base, Front, S.S. (Optional) | R04.01.035.00 | R04.01.255.00 |
| 27 | Front Cover, S.S. | R04.01.036.00 | R04.01.221.00 |

NOTE: Part numbers listed for sheet metal body parts apply only to units manufactured during or after October 1996. Consult factory with model and serial number for units manufactured before October 1996.

PARTS SPECIFIC TO MODEL C-4

| ITEM | DESCRIPTION | 208V | | 240V | | 480V | | 208V | | 240V | | 480V | | 208V | | 240V | |
|------|---|---------------|---------------|---------------|---------------|---------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|---------------|--------------|-------------|
| | | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase |
| 28 | Tank with Gaskets | R01.02.002.00 | R01.02.003.00 | R01.02.002.00 | R01.02.003.00 | R01.02.002.00 | | | | | | | | | R01.02.002.00 | | |
| 29 | Heating Element with Gasket Quantity | R02.04.400.00 | R02.04.400.00 | R02.04.401.00 | R02.04.401.00 | R02.04.404.00 | | | | | | | | | R02.04.400.00 | | |
| 30 | Contactor Quantity | 1 | 3 | 1 | 3 | 1 | | | | | | | | 1 | | | |
| 31 | Thermostat Control | 02.01.010.00 | 02.01.015.00 | 02.01.010.00 | 02.01.015.00 | 02.01.015.00 | | | | | | | | | 02.01.008.00 | | |
| 32 | Low Water Cut Off Board | 1 | 1 | 1 | 1 | 1 | | | | | | | | 1 | | | |
| 33 | Transformer, Step Down | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | | | | | | | | | 02.16.024.00 | | |
| 34 | Terminal Block | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | | | | | | | | | 02.01.001.00 | | |
| 35 | Indicator Light, Red | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | 02.17.005.00 | | | | | | | | | | | |
| 36 | Indicator Light, Green | R02.15.045.00 | R02.15.046.00 | R02.15.045.00 | R02.15.046.00 | | | | | | | | | | | | |
| 37A | Power Fuse Block Quantity | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | | | | | | | | | R02.15.045.00 | | |
| 37B | Power Fuse Block Quantity | | | | | | | | | | | | | | 02.19.151.00 | | |
| 37C | Power Fuse Block Quantity | | | | | | | | | | | | | | 02.19.150.00 | | |
| 37D | Power Fuse Block Quantity | | | | | | | | | | | | | | | | |
| 38A | Power Fuse (2 Pack) Quantity | | | | | | | | | | | | | | | | |
| 38B | Power Fuse (2 Pack) Quantity | | | | | | | | | | | | | | | | |
| 38C | Power Fuse (2 Pack) Quantity | | | | | | | | | | | | | | | | |
| 39 | Control Fuse Block | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | 02.03.023.00 | | | | | | | | | 02.03.004.00 | | |
| 40 | Control Fuse (2 Pack) | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | R02.03.013.02 | | | | | | | | | R02.03.001.02 | | |
| 41A | Tube, Inlet Water | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | | | | | | | | | 03.30.004.00 | | |
| 41B | Tube, Inlet Water | | | | | | | | | | | | | | | | |
| 42A | Nipple, Outlet Water | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | | | | | | | | | 03.11.008.00 | | |
| 42B | Tube, Outlet Water | | | | | | | | | | | | | | | | |
| | Electrical Diagram | HC1-2451 | HS1-1541 | HC1-2451 | HS1-1541 | HC1-2451 | | | | | | | | | HC1-392 | | |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-4

| ITEM | DESCRIPTION | 240V Three Phase | 380V Three Phase | 415V Three Phase | 480V Three Phase | 600V Three Phase | 380-400V CE 3 Wire | 400-415V CE 3 Wire | 380-400V CE 4 Wire | 400-415V CE 4 Wire |
|------|---|---------------------|---------------------|---------------------|---------------------|---------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 28 | Tank with Gaskets | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 29 | Heating Element with Gasket Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 30 | Contactors Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 31 | Thermostat Control | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 32 | Low Water Cut Off Board | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 33 | Transformer, Step Down | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 34 | Terminal Block | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 35 | Indicator Light, Red | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 36 | Indicator Light, Green | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 40 | Control Fuse (2 Pack) | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41A | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41B | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Tube, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| | Electrical Diagram | --- | --- | --- | --- | --- | --- | --- | --- | --- |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-5

| ITEM | DESCRIPTION | 208V | | 240V | | 480V | | 208V | | 240V | | 480V | |
|------|---|--------------------|--------------------|--------------------|--------------------|--------------------|-------------|--------------------|-------------|--------------|-------------|--------------|-------------|
| | | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase |
| 28 | Tank with Gaskets | R01.02.002.00 | R01.02.003.00 | R01.02.002.00 | R01.02.003.00 | R01.02.002.00 | | R01.02.002.00 | | | | | |
| 29 | Heating Element with Gasket Quantity | R02.04.500.00 1 | R02.04.500.00 3 | R02.04.501.00 1 | R02.04.501.00 3 | R02.04.502.00 1 | | R02.04.500.00 1 | | | | | |
| 30 | Contactor Quantity | 02.01.010.00 1 | 02.01.015.00 1 | 02.01.010.00 1 | 02.01.015.00 1 | 02.01.015.00 1 | | 02.01.008.00 1 | | | | | |
| 31 | Thermostat Control | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | | 02.16.024.00 | | | | | |
| 32 | Low Water Cut Off Board | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | | 02.01.001.00 | | | | | |
| 33 | Transformer, Step Down | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | 02.17.005.00 | | | | | | | |
| 34 | Terminal Block | R02.15.045.00 | R02.15.046.00 | R02.15.045.00 | R02.15.046.00 | | | R02.15.045.00 | | | | | |
| 35 | Indicator Light, Red | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | | 02.19.151.00 | | | | | |
| 36 | Indicator Light, Green | | | | | | | 02.19.150.00 | | | | | |
| 37A | Power Fuse Block Quantity | | | | | | | | | | | | |
| 37B | Power Fuse Block Quantity | | | | | | | | | | | | |
| 37C | Power Fuse Block Quantity | | | | | | | | | | | | |
| 37D | Power Fuse Block Quantity | | | | | | | | | | | | |
| 38A | Power Fuse (2 Pack) Quantity | | | | | | | | | | | | |
| 38B | Power Fuse (2 Pack) Quantity | | | | | | | | | | | | |
| 38C | Power Fuse (2 Pack) Quantity | | | | | | | | | | | | |
| 39 | Control Fuse Block | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | 02.03.023.00 | | 02.03.004.00 | | | | | |
| 40 | Control Fuse (2 Pack) | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | R02.03.013.02 | | R02.03.001.02 | | | | | |
| 41A | Tube, Inlet Water | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | | 03.30.004.00 | | | | | |
| 41B | Tube, Inlet Water | | | | | | | | | | | | |
| 42A | Nipple, Outlet Water | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | | 03.11.008.00 | | | | | |
| 42B | Tube, Outlet Water | | | | | | | | | | | | |
| | Electrical Diagram | HC1-2451 | HS1-1541 | HC1-2451 | HS1-1541 | HC1-2451 | | HC1-392 | | | | | |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-5

| ITEM | DESCRIPTION | 240V Three Phase | 380V Three Phase | 415V Three Phase | 480V Three Phase | 600V Three Phase | 380-400V CE 3 Wire | 400-415V CE 3 Wire | 380-400V CE 4 Wire | 400-415V CE 4 Wire |
|------|---|---------------------|---------------------|---------------------|---------------------|---------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 28 | Tank with Gaskets | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 29 | Heating Element with Gasket Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 30 | Contactors Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 31 | Thermostat Control | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 32 | Low Water Cut Off Board | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 33 | Transformer, Step Down | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 34 | Terminal Block | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 35 | Indicator Light, Red | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 36 | Indicator Light, Green | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 40 | Control Fuse (2 Pack) | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41A | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41B | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Tube, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| | Electrical Diagram | --- | --- | --- | --- | --- | --- | --- | --- | --- |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-6

| ITEM | DESCRIPTION | 208V | | 240V | | 480V | | 208V | | 240V | | 480V | | 208V | | 240V | |
|------|---|--------------------|--------------------|--------------------|--------------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------------|--------------------|--------------------|--------------------|
| | | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase |
| 28 | Tank with Gaskets | R01.02.002.00 | R01.02.002.00 | R01.02.002.00 | R01.02.002.00 | --- | --- | --- | --- | --- | --- | --- | --- | R01.02.002.00 | R01.02.002.00 | R01.02.002.00 | R01.02.002.00 |
| 29 | Heating Element with Gasket Quantity | R02.04.302.00 2 | R02.04.302.00 2 | R02.04.303.00 2 | R02.04.303.00 2 | --- | --- | --- | --- | --- | --- | --- | --- | R02.04.302.00 2 | R02.04.302.00 2 | R02.04.302.00 2 | R02.04.303.00 2 |
| 30 | Contactors Quantity | 02.01.015.00 1 | 02.01.015.00 1 | 02.01.015.00 1 | 02.01.015.00 1 | --- | --- | --- | --- | --- | --- | --- | --- | 02.01.015.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 1 |
| 31 | Thermostat Control | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 |
| 32 | Low Water Cut Off Board | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.01.006.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 |
| 33 | Transformer, Step Down | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.17.005.00 | --- | --- | --- |
| 34 | Terminal Block | R02.15.046.00 | R02.15.046.00 | R02.15.046.00 | R02.15.046.00 | --- | --- | --- | --- | --- | --- | --- | --- | --- | R02.15.046.00 | R02.15.046.00 | R02.15.046.00 |
| 35 | Indicator Light, Red | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.19.154.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 |
| 36 | Indicator Light, Green | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.03.023.00 | 02.03.004.00 | 02.03.004.00 | 02.03.004.00 |
| 40 | Control Fuse (2 Pack) | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | --- | --- | --- | --- | --- | --- | --- | --- | R02.03.013.02 | R02.03.001.02 | R02.03.001.02 | R02.03.001.02 |
| 41A | Tube, Inlet Water | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | --- | --- | --- | --- | --- | --- | --- | --- | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 |
| 41B | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | --- | --- | --- | --- | --- | --- | --- | --- | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 |
| 42B | Tube, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| | Electrical Diagram | HC1-2455 | HC1-2455 | HC1-2455 | HC1-2455 | --- | --- | --- | --- | --- | --- | --- | --- | HC1-2455 | HC1-391 | HC1-391 | HC1-391 |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-6

| ITEM | DESCRIPTION | 240V Three Phase | 380V Three Phase | 415V Three Phase | 480V Three Phase | 600V Three Phase | 380-400V CE 3 Wire | 400-415V CE 3 Wire | 380-400V CE 4 Wire | 400-415V CE 4 Wire |
|------|---|---------------------|---------------------|---------------------|---------------------|---------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 28 | Tank with Gaskets | R01.02.002.00 | R01.02.003.00 | R01.02.003.00 | R01.02.002.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 |
| 29 | Heating Element with Gasket Quantity | R02.04.303.00 2 | R02.04.510.00 3 | R02.04.452.00 3 | R02.04.305.00 2 | R02.04.404.00 3 | R02.04.202.00 3 | R02.04.202.00 3 | R02.04.202.00 3 | R02.04.202.00 3 |
| 30 | Contactor Quantity | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 |
| 31 | Thermostat Control | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.01.024.00 | 02.16.024.00 | 02.16.024.00 |
| 32 | Low Water Cut Off Board | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 |
| 33 | Transformer, Step Down | --- | R02.17.003.00 | R02.17.002.00 | R02.17.002.00 | 02.17.009.00 | 02.17.043.00 | 02.17.043.00 | --- | --- |
| 34 | Terminal Block | R02.15.046.00 | --- | --- | --- | --- | R02.15.035.00 | R02.15.035.00 | 02.15.044.00 | 02.15.044.00 |
| 35 | Indicator Light, Red | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | --- | --- | --- | --- |
| 36 | Indicator Light, Green | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.004.00 | --- | --- | --- | --- | --- | --- | --- | --- |
| 40 | Control Fuse (2 Pack) | R02.03.001.02 | R02.03.005.02 | R02.03.005.02 | R02.03.005.02 | R02.03.021.02 | --- | --- | --- | --- |
| 41A | Tube, Inlet Water | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 |
| 41B | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 |
| 42B | Tube, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| | Electrical Diagram | HC1-391 | HC1-396 | HC1-396 | HC1-397 | HC1-396 | HS1-4931 | HS1-4931 | HS1-4718 | HS1-4718 |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-7

| ITEM | DESCRIPTION | 208V | | 240V | | 480V | | 208V | | 240V | | 480V | | 208V | | 240V | |
|------|---|--------------------|--------------------|--------------------|--------------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|--------------------|--------------------|--------------------|
| | | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase |
| 28 | Tank with Gaskets | R01.02.002.00 | R01.02.002.00 | R01.02.002.00 | R01.02.002.00 | --- | --- | --- | --- | --- | --- | --- | --- | --- | R01.02.002.00 | R01.02.002.00 | R01.02.002.00 |
| 29 | Heating Element with Gasket Quantity | R02.04.350.00 2 | R02.04.350.00 2 | R02.04.351.00 2 | R02.04.351.00 2 | --- | --- | --- | --- | --- | --- | --- | --- | --- | R02.04.352.00 2 | R02.04.350.00 2 | R02.04.351.00 2 |
| 30 | Contactors Quantity | 02.01.015.00 1 | 02.01.015.00 1 | 02.01.015.00 1 | 02.01.015.00 1 | --- | --- | --- | --- | --- | --- | --- | --- | --- | 02.01.015.00 1 | 02.01.016.00 1 | 02.01.016.00 1 |
| 31 | Thermostat Control | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | --- | --- | --- | --- | --- | --- | --- | --- | --- | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 |
| 32 | Low Water Cut Off Board | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | --- | --- | --- | --- | --- | --- | --- | --- | --- | 02.01.006.00 | 02.01.001.00 | 02.01.001.00 |
| 33 | Transformer, Step Down | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | --- | --- | --- | --- | --- | --- | --- | --- | --- | 02.17.005.00 | --- | --- |
| 34 | Terminal Block | R02.15.046.00 | R02.15.046.00 | R02.15.046.00 | R02.15.046.00 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | R02.15.046.00 | R02.15.046.00 |
| 35 | Indicator Light, Red | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | --- | --- | --- | --- | --- | --- | --- | --- | --- | 02.19.154.00 | 02.19.151.00 | 02.19.151.00 |
| 36 | Indicator Light, Green | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | 02.19.150.00 | 02.19.150.00 |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | --- | --- | --- | --- | --- | --- | --- | --- | --- | 02.03.023.00 | 02.03.004.00 | 02.03.004.00 |
| 40 | Control Fuse (2 Pack) | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | --- | --- | --- | --- | --- | --- | --- | --- | --- | R02.03.013.02 | R02.03.001.02 | R02.03.001.02 |
| 41A | Tube, Inlet Water | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | --- | --- | --- | --- | --- | --- | --- | --- | --- | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 |
| 41B | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | --- | --- | --- | --- | --- | --- | --- | --- | --- | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 |
| 42B | Tube, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| | Electrical Diagram | HC1-2455 | HC1-2455 | HC1-2455 | HC1-2455 | --- | --- | --- | --- | --- | --- | --- | --- | --- | HC1-391 | HC1-391 | HC1-391 |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-7

| ITEM | DESCRIPTION | 240V Three Phase | 380V Three Phase | 415V Three Phase | 480V Three Phase | 600V Three Phase | 380-400V CE 3 Wire | 400-415V CE 3 Wire | 380-400V CE 4 Wire | 400-415V CE 4 Wire |
|------|---|---------------------|---------------------|---------------------|---------------------|---------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 28 | Tank with Gaskets | R01.02.002.00 | R01.02.003.00 | R01.02.003.00 | R01.02.002.00 | --- | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 |
| 29 | Heating Element with Gasket Quantity | R02.04.351.00 2 | R02.04.303.00 3 | R02.04.510.00 3 | R02.04.352.00 2 | --- | R02.04.307.00 3 | R02.04.307.00 3 | R02.04.307.00 3 | R02.04.307.00 3 |
| 30 | Contactors Quantity | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | --- | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 |
| 31 | Thermostat Control | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | --- | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 |
| 32 | Low Water Cut Off Board | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | --- | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 |
| 33 | Transformer, Step Down | --- | R02.17.003.00 | R02.17.002.00 | R02.17.002.00 | --- | 02.17.043.00 | 02.17.043.00 | --- | --- |
| 34 | Terminal Block | R02.15.046.00 | --- | --- | --- | --- | R02.15.035.00 | R02.15.035.00 | 02.15.044.00 | 02.15.044.00 |
| 35 | Indicator Light, Red | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | --- | --- | --- | --- | --- |
| 36 | Indicator Light, Green | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | --- | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.004.00 | --- | --- | --- | --- | --- | --- | --- | --- |
| 40 | Control Fuse (2 Pack) | R02.03.001.02 | R02.03.005.02 | R02.03.005.02 | R02.03.005.02 | --- | --- | --- | --- | --- |
| 41A | Tube, Inlet Water | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | --- | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 |
| 41B | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | --- | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 |
| 42B | Tube, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| | Electrical Diagram | HC1-391 | HC1-396 | HC1-396 | HC1-393 | --- | HS1-4931 | HS1-4931 | HS1-4718 | HS1-4718 |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-9

| ITEM | DESCRIPTION | 208V | | 240V | | 480V | | 208V | | 240V | | 480V | | 208V | | 240V | |
|------|---|--------------------|--------------------|--------------------|--------------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------------|--------------------|--------------------|--------------------|
| | | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase |
| 28 | Tank with Gaskets | R01.02.002.00 | R01.02.002.00 | R01.02.002.00 | R01.02.002.00 | --- | --- | --- | --- | --- | --- | --- | --- | R01.02.002.00 | R01.02.002.00 | R01.02.002.00 | R01.02.002.00 |
| 29 | Heating Element with Gasket Quantity | R02.04.450.00 2 | R02.04.450.00 2 | R02.04.451.00 2 | R02.04.451.00 2 | --- | --- | --- | --- | --- | --- | --- | --- | R02.04.453.00 2 | R02.04.450.00 2 | R02.04.450.00 2 | R02.04.451.00 2 |
| 30 | Contactors Quantity | 02.01.015.00 1 | 02.01.015.00 1 | 02.01.015.00 1 | 02.01.015.00 1 | --- | --- | --- | --- | --- | --- | --- | --- | 02.01.015.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 1 |
| 31 | Thermostat Control | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 |
| 32 | Low Water Cut Off Board | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.01.006.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 |
| 33 | Transformer, Step Down | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.17.005.00 | --- | --- | --- |
| 34 | Terminal Block | R02.15.046.00 | R02.15.046.00 | R02.15.046.00 | R02.15.046.00 | --- | --- | --- | --- | --- | --- | --- | --- | --- | R02.15.046.00 | R02.15.046.00 | R02.15.046.00 |
| 35 | Indicator Light, Red | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.19.154.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 |
| 36 | Indicator Light, Green | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.03.023.00 | 02.03.004.00 | 02.03.004.00 | 02.03.004.00 |
| 40 | Control Fuse (2 Pack) | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | --- | --- | --- | --- | --- | --- | --- | --- | R02.03.013.02 | R02.03.001.02 | R02.03.001.02 | R02.03.001.02 |
| 41A | Tube, Inlet Water | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | --- | --- | --- | --- | --- | --- | --- | --- | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 |
| 41B | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | --- | --- | --- | --- | --- | --- | --- | --- | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 |
| 42B | Tube, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| | Electrical Diagram | HC1-2455 | HC1-2455 | HC1-2455 | HC1-2455 | --- | --- | --- | --- | --- | --- | --- | --- | HC1-2455 | HC1-391 | HC1-391 | HC1-391 |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-9

| ITEM | DESCRIPTION | 240V Three Phase | 380V Three Phase | 415V Three Phase | 480V Three Phase | 600V Three Phase | 380-400V CE 3 Wire | 400-415V CE 3 Wire | 380-400V CE 4 Wire | 400-415V CE 4 Wire |
|------|---|---------------------|---------------------|---------------------|---------------------|---------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 28 | Tank with Gaskets | R01.02.002.00 | R01.02.003.00 | R01.02.003.00 | R01.02.002.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 |
| 29 | Heating Element with Gasket Quantity | R02.04.451.00 2 | R02.04.351.00 3 | R02.04.303.00 3 | R02.04.453.00 2 | R02.04.304.00 3 | R02.04.303.00 3 | R02.04.303.00 3 | R02.04.303.00 3 | R02.04.303.00 3 |
| 30 | Contactor Quantity | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 |
| 31 | Thermostat Control | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.01.024.00 | 02.16.024.00 | 02.16.024.00 |
| 32 | Low Water Cut Off Board | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 |
| 33 | Transformer, Step Down | --- | 02.17.003.00 | 02.17.002.00 | 02.17.002.00 | 02.17.009.00 | 02.17.043.00 | 02.17.043.00 | --- | --- |
| 34 | Terminal Block | R02.15.046.00 | --- | --- | --- | --- | R02.15.035.00 | R02.15.035.00 | 02.15.044.00 | 02.15.044.00 |
| 35 | Indicator Light, Red | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | --- | --- | --- | --- |
| 36 | Indicator Light, Green | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.004.00 | --- | --- | --- | --- | --- | --- | --- | --- |
| 40 | Control Fuse (2 Pack) | R02.03.001.02 | R02.03.005.02 | R02.03.005.02 | R02.03.005.02 | R02.03.021.02 | --- | --- | --- | --- |
| 41A | Tube, Inlet Water | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 |
| 41B | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 |
| 42B | Tube, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| | Electrical Diagram | HC1-391 | HC1-396 | HC1-396 | HC1-393 | HC1-396 | HS1-4931 | HS1-4931 | HS1-4718 | HS1-4718 |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-12

| ITEM | DESCRIPTION | 208V | | 240V | | 480V | | 208V | | 240V | | 480V | | 208V | | 240V | |
|------|--|--------------------|--------------------|--------------------|--------------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------------|--------------------|--------------------|--------------------|
| | | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase |
| 28 | Tank with Gaskets | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | --- | --- | --- | --- | --- | --- | --- | --- | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 |
| 29 | Heating Element with Gasket Quantity | R02.04.400.00 3 | R02.04.400.00 3 | R02.04.401.00 3 | R02.04.401.00 3 | --- | --- | --- | --- | --- | --- | --- | --- | R02.04.404.00 3 | R02.04.400.00 3 | R02.04.401.00 3 | R02.04.401.00 3 |
| 30 | Contactors Quantity | 02.01.017.00 1 | 02.01.015.00 1 | 02.01.017.00 1 | 02.01.015.00 1 | --- | --- | --- | --- | --- | --- | --- | --- | 02.01.015.00 1 | 02.01.018.00 1 | 02.01.018.00 1 | 02.01.018.00 1 |
| 31 | Thermostat Control | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 |
| 32 | Low Water Cut Off Board | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.01.006.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 |
| 33 | Transformer, Step Down | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.17.005.00 | --- | --- | --- |
| 34 | Terminal Block | --- | R02.15.046.00 | --- | R02.15.046.00 | --- | --- | --- | --- | --- | --- | --- | --- | --- | R02.15.046.00 | R02.15.046.00 | R02.15.046.00 |
| 35 | Indicator Light, Red | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.19.154.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 |
| 36 | Indicator Light, Green | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 |
| 37A | Power Fuse Block Quantity | 02.41.005.00 1 | --- | 02.41.005.00 1 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) (35 Amp) Quantity | R02.03.030.02 1 | --- | R02.03.030.02 1 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) (50 Amp) Quantity | R02.03.032.02 1 | --- | R02.03.032.02 1 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.03.023.00 | 02.03.004.00 | 02.03.004.00 | 02.03.004.00 |
| 40 | Control Fuse (2 Pack) | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | --- | --- | --- | --- | --- | --- | --- | --- | R02.03.013.02 | R02.03.001.02 | R02.03.001.02 | R02.03.001.02 |
| 41A | Tube, Inlet Water | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | --- | --- | --- | --- | --- | --- | --- | --- | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 |
| 41B | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | --- | --- | --- | --- | --- | --- | --- | --- | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 |
| 42B | Tube, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| | Electrical Diagram | HS1-2073 | HC1-2465 | HS1-2073 | HC1-2465 | --- | --- | --- | --- | --- | --- | --- | --- | HC1-2465 | HC1-390 | HC1-390 | HC1-390 |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-12

| ITEM | DESCRIPTION | 240V Three Phase | 380V Three Phase | 415V Three Phase | 480V Three Phase | 600V Three Phase | 380-400V CE 3 Wire | 400-415V CE 3 Wire | 380-400V CE 4 Wire | 400-415V CE 4 Wire |
|------|---|---------------------|---------------------|---------------------|---------------------|---------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 28 | Tank with Gaskets | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 |
| 29 | Heating Element with Gasket Quantity | R02.04.401.00 3 | R02.04.501.00 3 | R02.04.401.00 3 | R02.04.404.00 3 | R02.04.402.00 3 | R02.04.401.00 3 | R02.04.401.00 3 | R02.04.401.00 3 | R02.04.401.00 3 |
| 30 | Contactor Quantity | 02.01.018.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 |
| 31 | Thermostat Control | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.01.024.00 | 02.16.024.00 | 02.16.024.00 |
| 32 | Low Water Cut Off Board | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 |
| 33 | Transformer, Step Down | --- | R02.17.003.00 | R02.17.002.00 | R02.17.002.00 | 02.17.009.00 | 02.17.043.00 | 02.17.043.00 | --- | --- |
| 34 | Terminal Block | R02.15.046.00 | --- | --- | --- | --- | R02.15.035.00 | R02.15.035.00 | 02.15.044.00 | 02.15.044.00 |
| 35 | Indicator Light, Red | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | --- | --- | --- | --- |
| 36 | Indicator Light, Green | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.004.00 | --- | --- | --- | --- | --- | --- | --- | --- |
| 40 | Control Fuse (2 Pack) | R02.03.001.02 | R02.03.005.02 | R02.03.005.02 | R02.03.005.02 | R02.03.021.02 | --- | --- | --- | --- |
| 41A | Tube, Inlet Water | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 |
| 41B | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 |
| 42B | Tube, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Electrical Diagram | HC1-390 | HC1-396 | HC1-396 | HC1-395 | HC1-396 | HS1-4931 | HS1-4931 | HS1-4718 | HS1-4718 |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-13

| ITEM | DESCRIPTION | 208V | | 240V | | 480V | | 208V | | 240V | | 480V | |
|------|--|--------------------|--------------------|--------------------|--------------------|--------------|-------------|--------------------|--------------------|--------------------|--------------------|--------------|-------------|
| | | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase |
| 28 | Tank with Gaskets | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | --- | --- | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | --- | --- |
| 29 | Heating Element with Gasket Quantity | R02.04.450.00 3 | R02.04.450.00 3 | R02.04.451.00 3 | R02.04.451.00 3 | --- | --- | R02.04.453.00 3 | R02.04.450.00 3 | R02.04.450.00 3 | R02.04.450.00 3 | --- | --- |
| 30 | Contactor Quantity | 02.01.017.00 1 | 02.01.015.00 1 | 02.01.017.00 1 | 02.01.015.00 1 | --- | --- | 02.01.015.00 1 | 02.01.018.00 1 | 02.01.018.00 1 | 02.01.018.00 1 | --- | --- |
| 31 | Thermostat Control | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | --- | --- | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | --- | --- |
| 32 | Low Water Cut Off Board | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | --- | --- | 02.01.006.00 | 02.01.006.00 | 02.01.001.00 | 02.01.001.00 | --- | --- |
| 33 | Transformer, Step Down | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | --- | --- | 02.17.005.00 | --- | --- | --- | --- | --- |
| 34 | Terminal Block | --- | R02.15.046.00 | --- | R02.15.046.00 | --- | --- | --- | R02.15.046.00 | R02.15.046.00 | R02.15.046.00 | --- | --- |
| 35 | Indicator Light, Red | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | --- | --- | 02.19.154.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | --- | --- |
| 36 | Indicator Light, Green | --- | --- | --- | --- | --- | --- | --- | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | --- | --- |
| 37A | Power Fuse Block Quantity | 02.41.005.00 1 | --- | 02.41.005.00 1 | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) (35 Amp) Quantity | R02.03.030.02 1 | --- | R02.03.030.02 1 | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) (60 Amp) Quantity | R02.03.033.02 1 | --- | R02.03.033.02 1 | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | --- | --- | 02.03.023.00 | 02.03.004.00 | 02.03.004.00 | 02.03.004.00 | --- | --- |
| 40 | Control Fuse (2 Pack) | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | --- | --- | R02.03.013.02 | R02.03.001.02 | R02.03.001.02 | R02.03.001.02 | --- | --- |
| 41A | Tube, Inlet Water | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | --- | --- | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | --- | --- |
| 41B | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | --- | --- | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | --- | --- |
| 42B | Tube, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| | Electrical Diagram | HS1-2073 | HC1-2465 | HS1-2073 | HC1-2465 | --- | --- | HC1-2465 | HC1-390 | HC1-390 | HC1-390 | --- | --- |

Shaded area reflects **export models only**.

PARTS SPECIFIC TO MODEL C-13

| ITEM | DESCRIPTION | 240V Three Phase | 380V Three Phase | 415V Three Phase | 480V Three Phase | 600V Three Phase | 380-400V CE 3 Wire | 400-415V CE 3 Wire | 380-400V CE 4 Wire | 400-415V CE 4 Wire |
|------|---|---------------------|---------------------|---------------------|---------------------|---------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 28 | Tank with Gaskets | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 |
| 29 | Heating Element with Gasket Quantity | R02.04.451.00 3 | R02.04.451.00 3 | R02.04.451.00 3 | R02.04.453.00 3 | R02.04.353.00 3 | R02.04.451.00 3 | R02.04.451.00 3 | R02.04.451.00 3 | R02.04.451.00 3 |
| 30 | Contactor Quantity | 02.01.018.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 |
| 31 | Thermostat Control | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.01.024.00 | 02.16.024.00 | 02.16.024.00 |
| 32 | Low Water Cut Off Board | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 |
| 33 | Transformer, Step Down | --- | R02.17.003.00 | R02.17.002.00 | R02.17.002.00 | 02.17.009.00 | 02.17.043.00 | 02.17.043.00 | --- | --- |
| 34 | Terminal Block | R02.15.046.00 | --- | --- | --- | --- | R02.15.035.00 | 02.15.044.00 | 02.15.044.00 | 02.15.044.00 |
| 35 | Indicator Light, Red | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | --- | --- | --- | --- |
| 36 | Indicator Light, Green | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.151.00 | 02.19.151.00 |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.004.00 | --- | --- | --- | --- | --- | --- | --- | --- |
| 40 | Control Fuse (2 Pack) | R02.03.001.02 | R02.03.005.02 | R02.03.005.02 | R02.03.005.02 | R02.03.021.02 | --- | --- | --- | --- |
| 41A | Tube, Inlet Water | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 |
| 41B | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 |
| 42B | Tube, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Electrical Diagram | HC1-390 | HC1-396 | HC1-396 | HC1-395 | HC1-396 | HS1-4931 | HS1-4931 | HS1-4718 | HS1-4718 |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-15

| ITEM | DESCRIPTION | 208V | | 240V | | 480V | | 208V | | 240V | | 480V | |
|------|--|--------------------|--------------------|--------------------|--------------------|--------------|-------------|--------------------|--------------------|--------------------|--------------------|--------------|-------------|
| | | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase |
| 28 | Tank with Gaskets | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | --- | --- | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | --- | --- |
| 29 | Heating Element with Gasket Quantity | R02.04.500.00 3 | R02.04.500.00 3 | R02.04.501.00 3 | R02.04.501.00 3 | --- | --- | R02.04.502.00 3 | R02.04.500.00 3 | R02.04.500.00 3 | R02.04.500.00 3 | --- | --- |
| 30 | Contactor Quantity | 02.01.017.00 1 | 02.01.015.00 1 | 02.01.017.00 1 | 02.01.015.00 1 | --- | --- | 02.01.015.00 1 | 02.01.018.00 1 | 02.01.018.00 1 | 02.01.018.00 1 | --- | --- |
| 31 | Thermostat Control | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | --- | --- | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | --- | --- |
| 32 | Low Water Cut Off Board | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | --- | --- | 02.01.006.00 | 02.01.006.00 | 02.01.001.00 | 02.01.001.00 | --- | --- |
| 33 | Transformer, Step Down | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | --- | --- | 02.17.005.00 | --- | --- | --- | --- | --- |
| 34 | Terminal Block | --- | R02.15.046.00 | --- | R02.15.046.00 | --- | --- | --- | R02.15.046.00 | R02.15.046.00 | R02.15.046.00 | --- | --- |
| 35 | Indicator Light, Red | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | --- | --- | 02.19.154.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | --- | --- |
| 36 | Indicator Light, Green | --- | --- | --- | --- | --- | --- | --- | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | --- | --- |
| 37A | Power Fuse Block Quantity | 02.41.005.00 1 | --- | 02.41.005.00 1 | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) (35 Amp) Quantity | R02.03.030.02 1 | --- | R02.03.030.02 1 | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) (60 Amp) Quantity | R02.03.033.02 1 | --- | R02.03.033.02 1 | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | --- | --- | 02.03.023.00 | 02.03.004.00 | 02.03.004.00 | 02.03.004.00 | --- | --- |
| 40 | Control Fuse (2 Pack) | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | --- | --- | R02.03.013.02 | R02.03.001.02 | R02.03.001.02 | R02.03.001.02 | --- | --- |
| 41A | Tube, Inlet Water | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | --- | --- | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | --- | --- |
| 41B | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | --- | --- | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | --- | --- |
| 42B | Tube, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| | Electrical Diagram | HS1-2073 | HC1-2465 | HS1-2073 | HC1-2465 | --- | --- | HC1-2465 | HC1-390 | HC1-390 | HC1-390 | --- | --- |

Shaded area reflects **export models only**.

PARTS SPECIFIC TO MODEL C-15

| ITEM | DESCRIPTION | 240V Three Phase | 380V Three Phase | 415V Three Phase | 480V Three Phase | 600V Three Phase | 380-400V CE 3 Wire | 400-415V CE 3 Wire | 380-400V CE 4 Wire | 400-415V CE 4 Wire |
|------|---|---------------------|---------------------|---------------------|---------------------|---------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 28 | Tank with Gaskets | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 |
| 29 | Heating Element with Gasket Quantity | R02.04.501.00 3 | R02.04.603.00 3 | R02.04.501.00 3 | R02.04.502.00 3 | R02.04.510.00 3 | R02.04.501.00 3 | R02.04.501.00 3 | R02.04.501.00 3 | R02.04.501.00 3 |
| 30 | Contactor Quantity | 02.01.018.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 |
| 31 | Thermostat Control | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.01.024.00 | 02.16.024.00 | 02.16.024.00 |
| 32 | Low Water Cut Off Board | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 |
| 33 | Transformer, Step Down | --- | R02.17.003.00 | R02.17.002.00 | R02.17.002.00 | 02.17.009.00 | 02.17.043.00 | 02.17.043.00 | --- | --- |
| 34 | Terminal Block | R02.15.046.00 | --- | --- | --- | --- | R02.15.035.00 | R02.15.035.00 | 02.15.044.00 | 02.15.044.00 |
| 35 | Indicator Light, Red | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | --- | --- | --- | --- |
| 36 | Indicator Light, Green | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.004.00 | --- | --- | --- | --- | --- | --- | --- | --- |
| 40 | Control Fuse (2 Pack) | R02.03.001.02 | R02.03.005.02 | R02.03.005.02 | R02.03.005.02 | R02.03.021.02 | --- | --- | --- | --- |
| 41A | Tube, Inlet Water | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 |
| 41B | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 |
| 42B | Tube, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Electrical Diagram | HC1-390 | HC1-396 | HC1-396 | HC1-395 | HC1-396 | HS1-4931 | HS1-4931 | HS1-4718 | HS1-4718 |

Shaded area reflects **export models only**.

PARTS SPECIFIC TO MODEL C-17

| ITEM | DESCRIPTION | 208V | | 240V | | 480V | | 208V | | 208V | |
|------|---|--------------|-------------------|--------------|-------------|--------------|-------------|--------------|-------------|-------------------|-------------|
| | | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase |
| 28 | Tank with Gaskets | --- | R01.02.003.00 | --- | --- | --- | --- | --- | --- | R01.02.003.00 | --- |
| 29 | Heating Element with Gasket Quantity | --- | R02.04.600.00 | --- | --- | --- | --- | --- | --- | R02.04.600.00 | --- |
| 30 | Contactors Quantity | --- | 3 02.01.015.00 | --- | --- | --- | --- | --- | --- | 3 02.01.018.00 | --- |
| 31 | Thermostat Control | --- | 1 02.16.024.00 | --- | --- | --- | --- | --- | --- | 1 02.16.024.00 | --- |
| 32 | Low Water Cut Off Board | --- | 02.01.006.00 | --- | --- | --- | --- | --- | --- | 02.01.001.00 | --- |
| 33 | Transformer, Step Down | --- | 02.17.004.00 | --- | --- | --- | --- | --- | --- | --- | --- |
| 34 | Terminal Block | --- | R02.15.046.00 | --- | --- | --- | --- | --- | --- | R02.15.046.00 | --- |
| 35 | Indicator Light, Red | --- | 02.19.154.00 | --- | --- | --- | --- | --- | --- | 02.19.151.00 | --- |
| 36 | Indicator Light, Green | --- | --- | --- | --- | --- | --- | --- | --- | 02.19.150.00 | --- |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | --- | 02.03.022.00 | --- | --- | --- | --- | --- | --- | 02.03.004.00 | --- |
| 40 | Control Fuse (2 Pack) | --- | R02.03.014.02 | --- | --- | --- | --- | --- | --- | R02.03.001.02 | --- |
| 41A | Tube, Inlet Water | --- | 03.30.004.00 | --- | --- | --- | --- | --- | --- | 03.30.004.00 | --- |
| 41B | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | --- | 03.11.008.00 | --- | --- | --- | --- | --- | --- | 03.11.008.00 | --- |
| 42B | Tube, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| | Electrical Diagram | --- | HC1-2465 | --- | --- | --- | --- | --- | --- | HC1-390 | --- |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-17

| ITEM | DESCRIPTION | 240V Three Phase | 380V Three Phase | 415V Three Phase | 480V Three Phase | 600V Three Phase | 380-400V CE 3 Wire | 400-415V CE 3 Wire | 380-400V CE 4 Wire | 400-415V CE 4 Wire |
|------|---|---------------------|---------------------|---------------------|---------------------|---------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 28 | Tank with Gaskets | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 29 | Heating Element with Gasket Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 30 | Contactors Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 31 | Thermostat Control | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 32 | Low Water Cut Off Board | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 33 | Transformer, Step Down | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 34 | Terminal Block | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 35 | Indicator Light, Red | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 36 | Indicator Light, Green | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 40 | Control Fuse (2 Pack) | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41A | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41B | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Tube, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| | Electrical Diagram | --- | --- | --- | --- | --- | --- | --- | --- | --- |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-18

| ITEM | DESCRIPTION | 208V | | 240V | | 480V | | 208V | | 240V | | 480V | | 208V | | 240V | |
|------|--|---------------------|-------------|--------------------|--------------------|--------------|--------------------|---------------------|-------------|--------------------|---------------------|--------------|--------------------|---------------------|-------------|--------------------|--------------------|
| | | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase |
| 28 | Tank with Gaskets | R01.02.003.00 | --- | R01.02.003.00 | R01.02.003.00 | --- | R01.02.003.00 | R01.02.003.00 | --- | R01.02.003.00 | R01.02.003.00 | --- | R01.02.003.00 | R01.02.003.00 | --- | R01.02.003.00 | R01.02.003.00 |
| 29 | Heating Element with Gasket Quantity | R02.04.600A.00 3 | --- | R02.04.603.00 3 | R02.04.603.00 3 | --- | R02.04.605.00 3 | R02.04.600A.00 3 | --- | R02.04.603.00 3 | R02.04.600A.00 3 | --- | R02.04.605.00 3 | R02.04.600A.00 3 | --- | R02.04.603.00 3 | R02.04.603.00 3 |
| 30 | Contactors Quantity | 02.01.015.00 2 | --- | 02.01.015.00 2 | 02.01.015.00 1 | --- | 02.01.015.00 1 | 02.01.018.00 1 | --- | 02.01.015.00 1 | 02.01.018.00 1 | --- | 02.01.015.00 1 | 02.01.018.00 1 | --- | 02.01.018.00 1 | 02.01.018.00 1 |
| 31 | Thermostat Control | 02.16.024.00 | --- | 02.16.024.00 | 02.16.024.00 | --- | 02.16.024.00 | 02.16.024.00 | --- | 02.16.024.00 | 02.16.024.00 | --- | 02.16.024.00 | 02.16.024.00 | --- | 02.16.024.00 | 02.16.024.00 |
| 32 | Low Water Cut Off Board | 02.01.006.00 | --- | 02.01.006.00 | 02.01.006.00 | --- | 02.01.006.00 | 02.01.006.00 | --- | 02.01.006.00 | 02.01.006.00 | --- | 02.01.006.00 | 02.01.001.00 | --- | 02.01.001.00 | 02.01.001.00 |
| 33 | Transformer, Step Down | 02.17.004.00 | --- | 02.17.004.00 | 02.17.004.00 | --- | 02.17.004.00 | 02.17.004.00 | --- | 02.17.004.00 | 02.17.004.00 | --- | 02.17.005.00 | --- | --- | --- | --- |
| 34 | Terminal Block | --- | --- | --- | R02.15.046.00 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | R02.15.046.00 |
| 35 | Indicator Light, Red | 02.19.154.00 | --- | 02.19.154.00 | 02.19.154.00 | --- | 02.19.154.00 | 02.19.154.00 | --- | 02.19.154.00 | 02.19.154.00 | --- | 02.19.154.00 | 02.19.151.00 | --- | 02.19.151.00 | 02.19.151.00 |
| 36 | Indicator Light, Green | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | 02.19.150.00 |
| 37A | Power Fuse Block Quantity | 02.41.010.00 2 | --- | 02.41.010.00 2 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) (40 Amp) Quantity | R02.03.031.02 3 | --- | R02.03.031.02 3 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.022.00 | --- | 02.03.022.00 | 02.03.022.00 | --- | 02.03.022.00 | 02.03.022.00 | --- | 02.03.022.00 | 02.03.022.00 | --- | 02.03.023.00 | 02.03.004.00 | --- | 02.03.004.00 | 02.03.004.00 |
| 40 | Control Fuse (2 Pack) | R02.03.014.02 | --- | R02.03.014.02 | R02.03.014.02 | --- | R02.03.014.02 | R02.03.014.02 | --- | R02.03.014.02 | R02.03.014.02 | --- | R02.03.013.02 | R02.03.001.02 | --- | R02.03.001.02 | R02.03.001.02 |
| 41A | Tube, Inlet Water | 03.30.004.00 | --- | 03.30.004.00 | 03.30.004.00 | --- | 03.30.004.00 | 03.30.004.00 | --- | 03.30.004.00 | 03.30.004.00 | --- | 03.30.004.00 | 03.30.004.00 | --- | 03.30.004.00 | 03.30.004.00 |
| 41B | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | 03.11.008.00 | --- | 03.11.008.00 | 03.11.008.00 | --- | 03.11.008.00 | 03.11.008.00 | --- | 03.11.008.00 | 03.11.008.00 | --- | 03.11.008.00 | 03.11.008.00 | --- | 03.11.008.00 | 03.11.008.00 |
| 42B | Tube, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| | Electrical Diagram | HC1-2469 | --- | HC1-2469 | HC1-2465 | --- | HC1-2465 | HC1-2465 | --- | HC1-2469 | HC1-2465 | --- | HC1-2465 | HC1-390 | --- | HC1-390 | HC1-390 |

Shaded area reflects **export models only**.

PARTS SPECIFIC TO MODEL C-18

| ITEM | DESCRIPTION | 240V Three Phase | 380V Three Phase | 415V Three Phase | 480V Three Phase | 600V Three Phase | 380-400V CE 3 Wire | 400-415V CE 3 Wire | 380-400V CE 4 Wire | 400-415V CE 4 Wire |
|------|---|---------------------|---------------------|---------------------|---------------------|---------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 28 | Tank with Gaskets | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 | R01.02.003.00 |
| 29 | Heating Element with Gasket Quantity | R02.04.603.00 3 | R02.04.601.00 3 | R02.04.603.00 3 | R02.04.605.00 3 | R02.04.604.00 3 | R02.04.603.00 3 | R02.04.603.00 3 | R02.04.603.00 3 | R02.04.603.00 3 |
| 30 | Contactor Quantity | 02.01.018.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 1 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 |
| 31 | Thermostat Control | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 | 02.16.024.00 |
| 32 | Low Water Cut Off Board | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 |
| 33 | Transformer, Step Down | --- | R02.17.003.00 | R02.17.002.00 | R02.17.002.00 | 02.17.009.00 | 02.17.043.00 | 02.17.043.00 | --- | --- |
| 34 | Terminal Block | R02.15.046.00 | --- | --- | --- | --- | R02.15.035.00 | R02.15.035.00 | 02.15.044.00 | 02.15.044.00 |
| 35 | Indicator Light, Red | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | --- | --- | --- | --- |
| 36 | Indicator Light, Green | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.004.00 | --- | --- | --- | --- | --- | --- | --- | --- |
| 40 | Control Fuse (2 Pack) | R02.03.001.02 | R02.03.005.02 | R02.03.005.02 | R02.03.005.02 | R02.03.021.02 | --- | --- | --- | --- |
| 41A | Tube, Inlet Water | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 | 03.30.004.00 |
| 41B | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 | 03.11.008.00 |
| 42B | Tube, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Electrical Diagram | HC1-390 | HC1-396 | HC1-396 | HC1-395 | HC1-396 | HS1-4931 | HS1-4931 | HS1-4718 | HS1-4718 |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-24

| ITEM | DESCRIPTION | 208V | | 240V | | 480V | | 208V | | 240V | | 480V | | 208V | | 240V | |
|------|--|--------------------------|--------------------------|--------------------------|--------------------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------------------|--------------------------|--------------------------|--------------------------|
| | | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase |
| 28 | Tank with Gaskets | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | --- | --- | --- | --- | --- | --- | --- | --- | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 |
| 29 | Heating Element with Gasket Quantity | R02.04.400.00 6 | R02.04.400.00 6 | R02.04.401.00 6 | R02.04.401.00 6 | --- | --- | --- | --- | --- | --- | --- | --- | R02.04.404.00 6 | R02.04.400.00 6 | R02.04.401.00 6 | R02.04.401.00 6 |
| 30 | Contactor Quantity | 02.01.015.00 2 | 02.01.015.00 2 | 02.01.015.00 2 | 02.01.015.00 2 | --- | --- | --- | --- | --- | --- | --- | --- | 02.01.015.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 |
| 31 | Thermostat Control | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 |
| 32 | Low Water Cut Off Board | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.01.006.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 |
| 33 | Transformer, Step Down | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.17.005.00 | --- | --- | --- |
| 34 | Terminal Block | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 35 | Indicator Light, Red | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | --- | --- | --- | --- | --- | --- | --- | --- | R02.15.046.00 | 02.15.021.00 | 02.15.021.00 | 02.15.021.00 |
| 36 | Indicator Light, Green | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | 02.19.154.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 |
| 37A | Power Fuse Block Quantity | 02.41.010.00 2 | --- | 02.41.010.00 2 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | 02.41.001.00 1 | --- | 02.41.001.00 1 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | 02.41.005.00 1 | --- | 02.41.005.00 1 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) (60 Amp) Quantity | R02.03.033.02 3 | --- | R02.03.033.02 3 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) (50 Amp) Quantity | --- | R02.03.032.02 3 | --- | R02.03.032.02 3 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.03.023.00 | 02.03.004.00 | 02.03.004.00 | 02.03.004.00 |
| 40 | Control Fuse (2 Pack) | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | --- | --- | --- | --- | --- | --- | --- | --- | R02.03.013.02 | R02.03.001.02 | R02.03.001.02 | R02.03.001.02 |
| 41A | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41B | Tube, Inlet Water | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | --- | --- | --- | --- | --- | --- | --- | --- | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 |
| 42A | Nipple, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Tube, Outlet Water Electrical Diagram | 03.30.009.00 HC1-2471 | 03.30.009.00 HC1-2481 | 03.30.009.00 HC1-2471 | 03.30.009.00 HC1-2481 | --- | --- | --- | --- | --- | --- | --- | --- | 03.30.009.00 HC1-2475 | 03.30.009.00 HC1-1183 | 03.30.009.00 HC1-1183 | 03.30.009.00 HC1-1183 |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-24

| ITEM | DESCRIPTION | 240V Three Phase | 380V Three Phase | 415V Three Phase | 480V Three Phase | 600V Three Phase | 380-400V CE 3 Wire | 400-415V CE 3 Wire | 380-400V CE 4 Wire | 400-415V CE 4 Wire |
|------|---|---------------------|---------------------|---------------------|---------------------|---------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 28 | Tank with Gaskets | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 |
| 29 | Heating Element with Gasket Quantity | R02.04.401.00 6 | R02.04.501.00 6 | R02.04.401.00 6 | R02.04.404.00 6 | R02.04.402.00 6 | R02.04.401.00 6 | R02.04.401.00 6 | R02.04.401.00 6 | R02.04.401.00 6 |
| 30 | Contactor Quantity | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 |
| 31 | Thermostat Control | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 |
| 32 | Low Water Cut Off Board | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 |
| 33 | Transformer, Step Down | --- | R02.17.003.00 | R02.17.002.00 | R02.17.002.00 | R02.17.009.00 | 02.17.043.00 | 02.17.043.00 | --- | --- |
| 34 | Terminal Block | 02.15.021.00 | R02.15.046.00 | R02.15.046.00 | 02.15.021.00 | R02.15.046.00 | R02.15.035.00 | R02.15.035.00 | 02.15.044.00 | 02.15.044.00 |
| 35 | Indicator Light, Red | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | --- | --- | --- | --- |
| 36 | Indicator Light, Green | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.004.00 | --- | --- | --- | 02.03.016.00 | 02.03.016.00 | 02.03.016.00 | --- | --- |
| 40 | Control Fuse (2 Pack) | R02.03.001.02 | R02.03.005.02 | R02.03.005.02 | R02.03.005.02 | R02.03.021.02 | R02.03.021.00 | R02.03.021.02 | --- | --- |
| 41A | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41B | Tube, Inlet Water | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 |
| 42A | Nipple, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Tube, Outlet Water | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 |
| 42B | Electrical Diagram | HC1-1183 | HS1-3887 | HS1-3887 | HC1-2177 | HS1-3887 | HS1-4932 | HS1-4932 | HS1-4918 | HS1-4918 |

Shaded area reflects **export models only**.

PARTS SPECIFIC TO MODEL C-27

| ITEM | DESCRIPTION | 208V | | 240V | | 480V | | 208V | | 240V | | 480V | | 208V | | 240V | |
|------|--|--------------------------|--------------------------|--------------------------|--------------------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------------------|--------------------------|--------------------------|--------------------------|
| | | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase |
| 28 | Tank with Gaskets | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | --- | --- | --- | --- | --- | --- | --- | --- | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 |
| 29 | Heating Element with Gasket Quantity | R02.04.450.00 6 | R02.04.450.00 6 | R02.04.451.00 6 | R02.04.451.00 6 | --- | --- | --- | --- | --- | --- | --- | --- | R02.04.453.00 6 | R02.04.450.00 6 | R02.04.451.00 6 | R02.04.451.00 6 |
| 30 | Contactor Quantity | 02.01.015.00 2 | 02.01.015.00 2 | 02.01.015.00 2 | 02.01.015.00 2 | --- | --- | --- | --- | --- | --- | --- | --- | 02.01.015.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 |
| 31 | Thermostat Control | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 |
| 32 | Low Water Cut Off Board | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.01.006.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 |
| 33 | Transformer, Step Down | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.17.005.00 | --- | --- | --- |
| 34 | Terminal Block | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 35 | Indicator Light, Red | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | --- | --- | --- | --- | --- | --- | --- | --- | R02.15.046.00 | 02.15.021.00 | 02.15.021.00 | 02.15.021.00 |
| 36 | Indicator Light, Green | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | 02.19.154.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 |
| 37A | Power Fuse Block Quantity | 02.41.010.00 2 | --- | 02.41.010.00 2 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | 02.41.001.00 1 | --- | 02.41.001.00 1 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | 02.41.005.00 1 | --- | 02.41.005.00 1 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) (60 Amp) Quantity | R02.03.033.02 3 | --- | R02.03.033.02 3 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) (50 Amp) Quantity | --- | R02.03.032.02 3 | --- | R02.03.032.02 3 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.03.023.00 | 02.03.004.00 | 02.03.004.00 | 02.03.004.00 |
| 40 | Control Fuse (2 Pack) | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | --- | --- | --- | --- | --- | --- | --- | --- | R02.03.013.02 | R02.03.001.02 | R02.03.001.02 | R02.03.001.02 |
| 41A | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41B | Tube, Inlet Water | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | --- | --- | --- | --- | --- | --- | --- | --- | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 |
| 42A | Nipple, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Tube, Outlet Water Electrical Diagram | 03.30.009.00 HC1-2471 | 03.30.009.00 HC1-2481 | 03.30.009.00 HC1-2471 | 03.30.009.00 HC1-2481 | --- | --- | --- | --- | --- | --- | --- | --- | 03.30.009.00 HC1-2475 | 03.30.009.00 HC1-1183 | 03.30.009.00 HC1-1183 | 03.30.009.00 HC1-1183 |

Shaded area reflects **export models only**.

PARTS SPECIFIC TO MODEL C-27

| ITEM | DESCRIPTION | 240V Three Phase | 380V Three Phase | 415V Three Phase | 480V Three Phase | 600V Three Phase | 380-400V CE 3 Wire | 400-415V CE 3 Wire | 380-400V CE 4 Wire | 400-415V CE 4 Wire |
|------|---|---------------------|---------------------|---------------------|---------------------|---------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 28 | Tank with Gaskets | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 |
| 29 | Heating Element with Gasket Quantity | R02.04.451.00 6 | R02.04.501.00 6 | R02.04.451.00 6 | R02.04.453.00 6 | R02.04.452.00 6 | R02.04.451.00 6 | R02.04.451.00 6 | R02.04.451.00 6 | R02.04.451.00 6 |
| 30 | Contactor Quantity | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 |
| 31 | Thermostat Control | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 |
| 32 | Low Water Cut Off Board | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 |
| 33 | Transformer, Step Down | --- | R02.17.003.00 | R02.17.002.00 | R02.17.002.00 | R02.17.009.00 | 02.17.043.00 | 02.17.043.00 | --- | --- |
| 34 | Terminal Block | 02.15.021.00 | R02.15.046.00 | R02.15.046.00 | 02.15.021.00 | R02.15.046.00 | R02.15.035.00 | R02.15.035.00 | 02.15.044.00 | 02.15.044.00 |
| 35 | Indicator Light, Red | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | --- | --- | --- | --- |
| 36 | Indicator Light, Green | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.004.00 | --- | --- | --- | 02.03.016.00 | 02.03.016.00 | 02.03.016.00 | 02.03.016.00 | 02.03.016.00 |
| 40 | Control Fuse (2 Pack) | R02.03.001.02 | R02.03.005.02 | R02.03.005.02 | R02.03.005.02 | R02.03.021.02 | R02.03.021.00 | R02.03.021.02 | R02.03.021.02 | R02.03.021.00 |
| 41A | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41B | Tube, Inlet Water | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 |
| 42A | Nipple, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Tube, Outlet Water | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 |
| 42B | Electrical Diagram | HC1-1183 | HS1-3887 | HS1-3887 | HC1-2177 | HS1-3887 | HS1-4932 | HS1-4932 | HS1-4918 | HS1-4918 |

Shaded area reflects **export models only**.

PARTS SPECIFIC TO MODEL C-30

| ITEM | DESCRIPTION | 208V | | 240V | | 480V | | 208V | | 240V | | 480V | | 208V | | 240V | |
|------|--|--------------------------|--------------------------|--------------------------|--------------------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------------------|--------------------------|--------------------------|--------------------------|
| | | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase |
| 28 | Tank with Gaskets | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | --- | --- | --- | --- | --- | --- | --- | --- | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 |
| 29 | Heating Element with Gasket Quantity | R01.04.500.00 6 | R02.04.500.00 6 | R02.04.501.00 6 | R02.04.501.00 6 | --- | --- | --- | --- | --- | --- | --- | --- | R02.04.502.00 6 | R02.04.500.00 6 | R02.04.501.00 6 | R02.04.501.00 6 |
| 30 | Contactor Quantity | 02.01.015.00 2 | 02.01.015.00 2 | 02.01.015.00 2 | 02.01.015.00 2 | --- | --- | --- | --- | --- | --- | --- | --- | 02.01.015.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 |
| 31 | Thermostat Control | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 |
| 32 | Low Water Cut Off Board | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.01.006.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 |
| 33 | Transformer, Step Down | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.17.005.00 | --- | --- | --- |
| 34 | Terminal Block | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | R02.15.046.00 | 02.15.021.00 | 02.15.021.00 | 02.15.021.00 |
| 35 | Indicator Light, Red | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.19.154.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 |
| 36 | Indicator Light, Green | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 |
| 37A | Power Fuse Block Quantity | 02.41.010.00 2 | --- | 02.41.010.00 2 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | 02.41.001.00 1 | --- | 02.41.001.00 1 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | 02.41.005.00 1 | --- | 02.41.005.00 1 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) (60 Amp) Quantity | R02.03.033.02 3 | R02.03.033.02 3 | R02.03.033.02 3 | R02.03.033.02 3 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.022.00 | 02.03.022.00 | 02.03.002.00 | 02.03.022.00 | --- | --- | --- | --- | --- | --- | --- | --- | 02.03.023.00 | 02.03.004.00 | 02.03.004.00 | 02.03.004.00 |
| 40 | Control Fuse (2 Pack) | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | --- | --- | --- | --- | --- | --- | --- | --- | R02.03.013.02 | R02.03.001.02 | R02.03.001.02 | R02.03.001.02 |
| 41A | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41B | Tube, Inlet Water | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | --- | --- | --- | --- | --- | --- | --- | --- | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 |
| 42A | Nipple, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Tube, Outlet Water Electrical Diagram | 03.30.009.00 HC1-2471 | 03.30.009.00 HC1-2481 | 03.30.009.00 HC1-2471 | 03.30.009.00 HC1-2481 | --- | --- | --- | --- | --- | --- | --- | --- | 03.30.009.00 HC1-2475 | 03.30.009.00 HC1-1183 | 03.30.009.00 HC1-1183 | 03.30.009.00 HC1-1183 |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-30

| ITEM | DESCRIPTION | 240V Three Phase | 380V Three Phase | 415V Three Phase | 480V Three Phase | 600V Three Phase | 380-400V CE 3 Wire | 400-415V CE 3 Wire | 380-400V CE 4 Wire | 400-415V CE 4 Wire |
|------|---|---------------------|---------------------|---------------------|---------------------|---------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 28 | Tank with Gaskets | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 |
| 29 | Heating Element with Gasket Quantity | R02.04.501.00 6 | R02.04.611.00 6 | R02.04.501.00 6 | R02.04.502.00 6 | R02.04.510.00 6 | R02.04.501.00 6 | R02.04.501.00 6 | R02.04.501.00 6 | R02.04.501.00 6 |
| 30 | Contactor Quantity | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 |
| 31 | Thermostat Control | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 |
| 32 | Low Water Cut Off Board | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 | 02.01.164.00 |
| 33 | Transformer, Step Down | --- | R02.17.003.00 | R02.17.002.00 | R02.17.002.00 | 02.17.009.00 | 02.17.043.00 | 02.17.043.00 | --- | --- |
| 34 | Terminal Block | 02.15.021.00 | R02.15.046.00 | R02.15.046.00 | 02.15.021.00 | R02.15.046.00 | R02.15.035.00 | R02.15.035.00 | 02.15.044.00 | 02.15.044.00 |
| 35 | Indicator Light, Red | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | --- | --- | --- | --- |
| 36 | Indicator Light, Green | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.004.00 | --- | --- | --- | 02.03.016.00 | 02.03.016.00 | 02.03.016.00 | --- | --- |
| 40 | Control Fuse (2 Pack) | R02.03.001.02 | R02.03.005.02 | R02.03.005.02 | R02.03.005.02 | R02.03.021.02 | R02.03.021.00 | R02.03.021.02 | --- | --- |
| 41A | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41B | Tube, Inlet Water | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 |
| 42A | Nipple, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Tube, Outlet Water | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 |
| 42B | Electrical Diagram | HC1-1183 | HS1-3887 | HS1-3887 | HC1-2177 | HS1-3887 | HS1-4932 | HS1-4932 | HS1-4918 | HS1-4918 |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-36

| ITEM | DESCRIPTION | 208V | | 240V | | 480V | | 208V | | 240V | | 480V | |
|------|--|--------------------|--------------------|--------------------|--------------------|--------------|--------------------|--------------|--------------------|--------------|--------------------|--------------|--------------------|
| | | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase |
| 28 | Tank with Gaskets | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | --- | R01.02.031.00 | --- | R01.02.031.00 | --- | R01.02.031.00 | --- | R01.02.031.00 |
| 29 | Heating Element with Gasket Quantity | R02.04.610.00 6 | R02.04.610.00 6 | R02.04.611.00 6 | R02.04.611.00 6 | --- | R02.04.613.00 6 | --- | R02.04.613.00 6 | --- | R02.04.611.00 6 | --- | R02.04.611.00 6 |
| 30 | Contactors Quantity | 02.01.017.00 3 | 02.01.017.00 3 | 02.01.017.00 3 | 02.01.015.00 2 | --- | 02.01.015.00 2 | --- | 02.01.015.00 2 | --- | 02.01.018.00 3 | --- | 02.01.016.00 2 |
| 31 | Thermostat Control | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | --- | 02.16.003.00 | --- | 02.16.003.00 | --- | 02.16.003.00 | --- | 02.16.003.00 |
| 32 | Low Water Cut Off Board | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | --- | 02.01.006.00 | --- | 02.01.006.00 | --- | 02.01.006.00 | --- | 02.01.001.00 |
| 33 | Transformer, Step Down | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | --- | 02.17.005.00 | --- | 02.17.005.00 | --- | --- | --- | --- |
| 34 | Terminal Block | 02.15.007.00 | --- | 02.15.007.00 | --- | --- | R02.15.046.00 | --- | R02.15.046.00 | --- | 02.15.021.00 | --- | 02.15.021.00 |
| 35 | Indicator Light, Red | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | --- | 02.19.154.00 | --- | 02.19.154.00 | --- | 02.19.151.00 | --- | 02.19.151.00 |
| 36 | Indicator Light, Green | --- | --- | --- | --- | --- | --- | --- | --- | --- | 02.19.150.00 | --- | 02.19.150.00 |
| 37A | Power Fuse Block Quantity | 02.41.010.00 4 | --- | 02.41.010.00 4 | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | 02.41.015.00 3 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | 02.41.001.00 1 | --- | --- | --- | 02.41.001.00 1 | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | 02.41.005.00 1 | --- | --- | --- | 02.41.005.00 1 | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) (40 Amp) Quantity | R02.03.031.02 6 | R02.03.031.02 6 | R02.03.031.02 6 | R02.03.031.02 | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) (60 Amp) Quantity | --- | --- | --- | R02.03.033.02 3 | --- | --- | --- | R02.03.033.02 3 | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | --- | 02.03.023.00 | --- | 02.03.023.00 | --- | 02.03.004.00 | --- | 02.03.004.00 |
| 40 | Control Fuse (2 Pack) | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | --- | R02.03.013.02 | --- | R02.03.013.02 | --- | R02.03.001.02 | --- | R02.03.001.02 |
| 41A | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41B | Tube, Inlet Water | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | --- | 03.30.007.00 | --- | 03.30.007.00 | --- | 03.30.007.00 | --- | 03.30.007.00 |
| 42A | Nipple, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Tube, Outlet Water | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | --- | 03.30.009.00 | --- | 03.30.009.00 | --- | 03.30.009.00 | --- | 03.30.009.00 |
| | Electrical Diagram | HC1-2477 | HC1-2479 | HC1-2477 | HC1-2481 | --- | HC1-2475 | --- | HC1-2475 | --- | HC1-1181 | --- | HC1-1183 |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-36

| ITEM | DESCRIPTION | 240V Three Phase | 380V Three Phase | 415V Three Phase | 480V Three Phase | 600V Three Phase | 380-400V CE 3 Wire | 400-415V CE 3 Wire | 380-400V CE 4 Wire | 400-415V CE 4 Wire |
|------|---|---------------------|---------------------|---------------------|---------------------|---------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 28 | Tank with Gaskets | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | --- | --- | --- | --- |
| 29 | Heating Element with Gasket Quantity | R02.04.611.00 6 | R02.04.601.00 6 | R02.04.611.00 6 | R02.04.613.00 6 | R02.04.612.00 6 | --- | --- | --- | --- |
| 30 | Contactors Quantity | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | --- | --- | --- | --- |
| 31 | Thermostat Control | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | --- | --- | --- | --- |
| 32 | Low Water Cut Off Board | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | --- | --- | --- | --- |
| 33 | Transformer, Step Down | --- | R02.17.003.00 | R02.17.002.00 | R02.17.002.00 | R02.17.009.00 | --- | --- | --- | --- |
| 34 | Terminal Block | 02.15.021.00 | R02.15.046.00 | R02.15.046.00 | 02.15.021.00 | R02.15.046.00 | --- | --- | --- | --- |
| 35 | Indicator Light, Red | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | --- | --- | --- | --- |
| 36 | Indicator Light, Green | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | --- | --- | --- | --- |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.004.00 | --- | --- | --- | 02.03.016.00 | --- | --- | --- | --- |
| 40 | Control Fuse (2 Pack) | R02.03.001.02 | R02.03.005.02 | R02.03.005.02 | R02.03.005.02 | R02.03.021.02 | --- | --- | --- | --- |
| 41A | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41B | Tube, Inlet Water | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Tube, Outlet Water | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | --- | --- | --- | --- |
| | Electrical Diagram | HC1-1183 | HS1-3887 | HS1-3887 | HC1-2177 | HS1-3887 | --- | --- | --- | --- |

Shaded area reflects **export models only**.

PARTS SPECIFIC TO MODEL C-39

| ITEM | DESCRIPTION | 208V | | 240V | | 480V | | 208V | | 240V | | 480V | |
|------|--|--------------------|--------------------|--------------------|--------------------|--------------|--------------------|--------------|--------------------|--------------|--------------------|--------------|-------------|
| | | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase |
| 28 | Tank with Gaskets | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | --- | R01.02.031.00 | --- | R01.02.031.00 | --- | R01.02.031.00 | --- | --- |
| 29 | Heating Element with Gasket Quantity | R01.04.650.00 6 | R02.04.650.00 6 | R02.04.653.00 6 | R02.04.653.00 6 | --- | R02.04.655.00 6 | --- | R02.04.655.00 6 | --- | R02.04.655.00 6 | --- | --- |
| 30 | Contactor Quantity | 02.01.017.00 3 | 02.01.017.00 3 | 02.01.017.00 3 | 02.01.015.00 2 | --- | 02.01.015.00 2 | --- | 02.01.015.00 2 | --- | 02.01.015.00 2 | --- | --- |
| 31 | Thermostat Control | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | --- | 02.16.003.00 | --- | 02.16.003.00 | --- | 02.16.003.00 | --- | --- |
| 32 | Low Water Cut Off Board | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | --- | 02.01.006.00 | --- | 02.01.006.00 | --- | 02.01.006.00 | --- | --- |
| 33 | Transformer, Step Down | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | --- | 02.17.004.00 | --- | 02.17.004.00 | --- | 02.17.004.00 | --- | --- |
| 34 | Terminal Block | 02.15.007.00 | --- | 02.15.007.00 | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 35 | Indicator Light, Red | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | --- | 02.19.154.00 | --- | 02.19.154.00 | --- | 02.19.154.00 | --- | --- |
| 36 | Indicator Light, Green | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37A | Power Fuse Block Quantity | 02.41.010.00 4 | --- | 02.41.010.00 4 | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | 02.41.015.00 3 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | 02.41.001.00 1 | --- | --- | --- | 02.41.001.00 1 | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | 02.41.005.00 1 | --- | --- | --- | 02.41.005.00 1 | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) (40 Amp) Quantity | R02.03.031.02 6 | R02.03.031.02 6 | R02.03.031.02 6 | R02.03.031.02 | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) (60 Amp) Quantity | --- | --- | --- | R02.03.033.02 3 | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.002.00 | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | --- | 02.03.023.00 | --- | 02.03.023.00 | --- | 02.03.023.00 | --- | --- |
| 40 | Control Fuse (2 Pack) | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | --- | R02.03.013.02 | --- | R02.03.013.02 | --- | R02.03.013.02 | --- | --- |
| 41A | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41B | Tube, Inlet Water | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | --- | 03.30.007.00 | --- | 03.30.007.00 | --- | 03.30.007.00 | --- | --- |
| 42A | Nipple, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Tube, Outlet Water | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | --- | 03.30.009.00 | --- | 03.30.009.00 | --- | 03.30.009.00 | --- | --- |
| | Electrical Diagram | HC1-2477 | HC1-2479 | HC1-2477 | HC1-2481 | --- | HC1-2475 | --- | HC1-2475 | --- | HC1-2475 | --- | --- |

Shaded area reflects **export models only**.

PARTS SPECIFIC TO MODEL C-39

| ITEM | DESCRIPTION | 240V Three Phase | 380V Three Phase | 415V Three Phase | 480V Three Phase | 600V Three Phase | 380-400V CE 3 Wire | 400-415V CE 3 Wire | 380-400V CE 4 Wire | 400-415V CE 4 Wire |
|------|--|---------------------|---------------------|---------------------|---------------------|---------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 28 | Tank with Gaskets | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | --- | --- | --- | --- |
| 29 | Heating Element with Gasket Quantity 6 | R02.04.653.00 | R02.04.651.00 | R02.04.653.00 | R02.04.655.00 | R02.04.654.00 | --- | --- | --- | --- |
| 30 | Contactor Quantity 3 | 02.01.018.00 | 02.01.016.00 | 02.01.016.00 | 02.01.016.00 | 02.01.016.00 | --- | --- | --- | --- |
| 31 | Thermostat Control | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | --- | --- | --- | --- |
| 32 | Low Water Cut Off Board | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | --- | --- | --- | --- |
| 33 | Transformer, Step Down | --- | R02.17.003.00 | R02.17.002.00 | R02.17.002.00 | 02.17.009.00 | --- | --- | --- | --- |
| 34 | Terminal Block | 02.15.021.00 | R02.15.046.00 | R02.15.046.00 | 02.15.021.00 | R02.15.046.00 | --- | --- | --- | --- |
| 35 | Indicator Light, Red | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | --- | --- | --- | --- |
| 36 | Indicator Light, Green | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | --- | --- | --- | --- |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.004.00 | --- | --- | --- | 02.03.016.00 | --- | --- | --- | --- |
| 40 | Control Fuse (2 Pack) | R02.03.001.02 | R02.03.005.02 | R02.03.005.02 | R02.03.005.02 | R02.03.021.02 | --- | --- | --- | --- |
| 41A | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41B | Tube, Inlet Water | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Tube, Outlet Water | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | --- | --- | --- | --- |
| | Electrical Diagram | HC1-1183 | HS1-3887 | HS1-3887 | HC1-2177 | HS1-3887 | --- | --- | --- | --- |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-45

| ITEM | DESCRIPTION | 208V | | 240V | | 480V | | 208V | | 240V | | 480V | |
|------|--|--------------|--------------------|--------------------|--------------------|--------------|--------------------|--------------|--------------------|--------------|--------------------|--------------|--------------------|
| | | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase |
| 28 | Tank with Gaskets | --- | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | --- | R01.02.031.00 | --- | R01.02.031.00 | --- | R01.02.031.00 | --- | R01.02.031.00 |
| 29 | Heating Element with Gasket Quantity | --- | R02.04.700.00 6 | R02.04.701.00 6 | R02.04.701.00 6 | --- | R02.04.703.00 6 | --- | R02.04.700.00 6 | --- | R02.04.700.00 6 | --- | R02.04.700.00 6 |
| 30 | Contactor Quantity | --- | 02.01.017.00 3 | 02.01.017.00 3 | 02.01.017.00 3 | --- | 02.01.015.00 2 | --- | 02.01.017.00 3 | --- | 02.01.018.00 3 | --- | 02.01.018.00 3 |
| 31 | Thermostat Control | --- | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | --- | 02.16.003.00 | --- | 02.16.003.00 | --- | 02.16.003.00 | --- | 02.16.003.00 |
| 32 | Low Water Cut Off Board | --- | 02.01.006.00 | 02.01.006.00 | 02.01.006.00 | --- | 02.01.006.00 | --- | 02.01.006.00 | --- | 02.01.006.00 | --- | 02.01.001.00 |
| 33 | Transformer, Step Down | --- | 02.17.004.00 | 02.17.004.00 | 02.17.004.00 | --- | 02.17.005.00 | --- | 02.17.004.00 | --- | --- | --- | --- |
| 34 | Terminal Block | --- | --- | 02.15.007.00 | --- | --- | 02.15.021.00 | --- | 02.15.007.00 | --- | 02.15.021.00 | --- | 02.15.021.00 |
| 35 | Indicator Light, Red | --- | 02.19.154.00 | 02.19.154.00 | 02.19.154.00 | --- | 02.19.154.00 | --- | 02.19.154.00 | --- | 02.19.151.00 | --- | 02.19.151.00 |
| 36 | Indicator Light, Green | --- | --- | --- | --- | --- | --- | --- | --- | --- | 02.19.150.00 | --- | 02.19.150.00 |
| 37A | Power Fuse Block Quantity | --- | 02.41.015.00 3 | --- | 02.41.015.00 3 | --- | --- | --- | 02.41.015.00 3 | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | 02.41.010.00 4 | --- | --- | --- | --- | 02.41.010.00 4 | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | 02.41.030.00 2 | --- | --- | --- | 02.41.030.00 2 | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) (50 Amp) Quantity | --- | R02.03.032.02 6 | --- | --- | --- | --- | --- | R02.03.032.02 6 | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) (40 Amp) Quantity | --- | --- | R02.03.031.02 6 | R02.03.031.02 6 | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) (40 Amp) Quantity | --- | --- | --- | --- | --- | R02.03.011.02 3 | --- | --- | --- | R02.03.011.02 3 | --- | --- |
| 39 | Control Fuse Block | --- | 02.03.022.00 | 02.03.022.00 | 02.03.022.00 | --- | 02.03.023.00 | --- | 02.03.022.00 | --- | 02.03.004.00 | --- | 02.03.004.00 |
| 40 | Control Fuse (2 Pack) | --- | R02.03.014.02 | R02.03.014.02 | R02.03.014.02 | --- | R02.03.013.02 | --- | R02.03.014.02 | --- | R02.03.001.02 | --- | R02.03.001.02 |
| 41A | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41B | Tube, Inlet Water | --- | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | --- | 03.30.007.00 | --- | 03.30.007.00 | --- | 03.30.007.00 | --- | 03.30.007.00 |
| 42A | Nipple, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Tube, Outlet Water | --- | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | --- | 03.30.009.00 | --- | 03.30.009.00 | --- | 03.30.009.00 | --- | 03.30.009.00 |
| | Electrical Diagram | --- | HC1-2479 | HC1-2477 | HC1-2479 | --- | HC1-2481 | --- | HC1-2477 | --- | HC1-1181 | --- | HC1-1181 |

Shaded area reflects **export models only**.

PARTS SPECIFIC TO MODEL C-45

| ITEM | DESCRIPTION | 240V Three Phase | 380V Three Phase | 415V Three Phase | 480V Three Phase | 600V Three Phase | 380-400V CE 3 Wire | 400-415V CE 3 Wire | 380-400V CE 4 Wire | 400-415V CE 4 Wire |
|------|---|---------------------|---------------------|---------------------|---------------------|---------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 28 | Tank with Gaskets | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | --- | --- | --- | --- |
| 29 | Heating Element with Gasket Quantity | R02.04.701.00 6 | R02.04.711.00 6 | R02.04.701.00 6 | R02.04.703.00 6 | R02.04.704.00 6 | --- | --- | --- | --- |
| 30 | Contactors Quantity | 02.01.018.00 3 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | --- | --- | --- | --- |
| 31 | Thermostat Control | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | --- | --- | --- | --- |
| 32 | Low Water Cut Off Board | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | --- | --- | --- | --- |
| 33 | Transformer, Step Down | --- | R02.17.003.00 | R02.17.002.00 | R02.17.002.00 | R02.17.009.00 | --- | --- | --- | --- |
| 34 | Terminal Block | 02.15.021.00 | 02.15.021.00 | 02.15.021.00 | 02.15.021.00 | R02.15.046.00 | --- | --- | --- | --- |
| 35 | Indicator Light, Red | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | --- | --- | --- | --- |
| 36 | Indicator Light, Green | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | --- | --- | --- | --- |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.004.00 | --- | --- | --- | 02.03.016.00 | --- | --- | --- | --- |
| 40 | Control Fuse (2 Pack) | R02.03.001.02 | R02.03.005.02 | R02.03.005.02 | R02.03.005.02 | R02.03.021.02 | --- | --- | --- | --- |
| 41A | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41B | Tube, Inlet Water | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Tube, Outlet Water | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | --- | --- | --- | --- |
| | Electrical Diagram | HC1-1181 | HS1-3887 | HS1-3887 | HC1-2177 | HS1-3887 | --- | --- | --- | --- |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-54

| ITEM | DESCRIPTION | 208V | | 240V | | 480V | | 208V | | 240V | | 480V | |
|------|--|--------------|--------------------------|--------------|--------------------------|--------------|--------------------------|--------------|--------------------------|--------------|--------------------------|--------------|--------------------------|
| | | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase |
| 28 | Tank with Gaskets | --- | R01.02.031.00 | --- | R01.02.031.00 | --- | R01.02.031.00 | --- | R01.02.031.00 | --- | R01.02.031.00 | --- | R01.02.031.00 |
| 29 | Heating Element with Gasket Quantity | --- | R02.04.710.00 6 | --- | R02.04.711.00 6 | --- | R02.04.713.00 6 | --- | R02.04.710.00 6 | --- | R02.04.710.00 6 | --- | R02.04.710.00 6 |
| 30 | Contactors Quantity | --- | 02.01.017.00 2 | --- | 02.01.017.00 3 | --- | 02.01.015.00 2 | --- | 02.01.017.00 2 | --- | 02.01.015.00 2 | --- | 02.01.018.00 3 |
| 31 | Thermostat Control | --- | 02.16.003.00 | --- | 02.16.003.00 | --- | 02.16.003.00 | --- | 02.16.003.00 | --- | 02.16.003.00 | --- | 02.16.003.00 |
| 32 | Low Water Cut Off Board | --- | 02.01.006.00 | --- | 02.01.006.00 | --- | 02.01.006.00 | --- | 02.01.006.00 | --- | 02.01.006.00 | --- | 02.01.001.00 |
| 33 | Transformer, Step Down | --- | 02.17.004.00 | --- | 02.17.004.00 | --- | 02.17.005.00 | --- | 02.17.004.00 | --- | 02.17.005.00 | --- | --- |
| 34 | Terminal Block | --- | --- | --- | --- | --- | 02.15.021.00 | --- | --- | --- | 02.15.021.00 | --- | 02.15.021.00 |
| 35 | Indicator Light, Red | --- | 02.19.154.00 | --- | 02.19.154.00 | --- | 02.19.154.00 | --- | 02.19.154.00 | --- | 02.19.154.00 | --- | 02.19.151.00 |
| 36 | Indicator Light, Green | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | 02.19.150.00 |
| 37A | Power Fuse Block Quantity | --- | 02.41.020.00 1 | --- | 02.41.020.00 1 | --- | 02.41.020.00 | --- | 02.41.020.00 | --- | 02.41.020.00 | --- | --- |
| 37B | Power Fuse Block Quantity | --- | 02.41.022.00 2 | --- | 02.41.022.00 2 | --- | 02.41.022.00 | --- | 02.41.022.00 | --- | 02.41.022.00 | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | 02.41.030.00 | --- | --- | --- | 02.41.030.00 | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) (60 Amp) Quantity | --- | R02.03.033.02 6 | --- | R02.03.033.02 6 | --- | R02.03.033.02 | --- | R02.03.033.02 | --- | R02.03.033.02 | --- | --- |
| 38B | Power Fuse (2 Pack) (50 Amp) Quantity | --- | --- | --- | --- | --- | R02.03.012.02 3 | --- | --- | --- | R02.03.012.02 3 | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | --- | 02.03.022.00 | --- | 02.03.022.00 | --- | 02.03.023.00 | --- | 02.03.022.00 | --- | 02.03.023.00 | --- | 02.03.004.00 |
| 40 | Control Fuse (2 Pack) | --- | R02.03.014.02 | --- | R02.03.014.02 | --- | R02.03.013.02 | --- | R02.03.014.02 | --- | R02.03.013.02 | --- | R02.03.001.02 |
| 41A | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41B | Tube, Inlet Water | --- | 03.30.007.00 | --- | 03.30.007.00 | --- | 03.30.007.00 | --- | 03.30.007.00 | --- | 03.30.007.00 | --- | 03.30.007.00 |
| 42A | Nipple, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Tube, Outlet Water Electrical Diagram | --- | 03.30.009.00 HC1-2479 | --- | 03.30.009.00 HC1-2479 | --- | 03.30.009.00 HC1-2481 | --- | 03.30.009.00 HC1-2479 | --- | 03.30.009.00 HC1-2481 | --- | 03.30.009.00 HC1-1181 |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-54

| ITEM | DESCRIPTION | 240V Three Phase | 380V Three Phase | 415V Three Phase | 480V Three Phase | 600V Three Phase | 380-400V CE 3 Wire | 400-415V CE 3 Wire | 380-400V CE 4 Wire | 400-415V CE 4 Wire |
|------|--|---------------------|---------------------|---------------------|---------------------|---------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 28 | Tank with Gaskets | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | --- | --- | --- | --- |
| 29 | Heating Element with Gasket Quantity 6 | R02.04.711.00 6 | R02.04.721.00 6 | R02.04.711.00 6 | R02.04.713.00 6 | R02.04.714.00 6 | --- | --- | --- | --- |
| 30 | Contactor Quantity 3 | 02.01.018.00 3 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 1 | --- | --- | --- | --- |
| 31 | Thermostat Control | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | --- | --- | --- | --- |
| 32 | Low Water Cut Off Board | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | --- | --- | --- | --- |
| 33 | Transformer, Step Down | --- | R02.17.003.00 | R02.17.002.00 | R02.17.002.00 | R02.17.009.00 | --- | --- | --- | --- |
| 34 | Terminal Block | 02.15.021.00 | 02.15.021.00 | 02.15.021.00 | 02.15.021.00 | 02.15.021.00 | --- | --- | --- | --- |
| 35 | Indicator Light, Red | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | --- | --- | --- | --- |
| 36 | Indicator Light, Green | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | --- | --- | --- | --- |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.004.00 | --- | --- | --- | 02.03.016.00 | --- | --- | --- | --- |
| 40 | Control Fuse (2 Pack) | R02.03.001.02 | R02.03.005.02 | R02.03.005.02 | R02.03.005.02 | R02.03.021.02 | --- | --- | --- | --- |
| 41A | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41B | Tube, Inlet Water | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Tube, Outlet Water | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | --- | --- | --- | --- |
| | Electrical Diagram | HC1-1181 | HS1-3887 | HS1-3887 | HC1-2177 | HS1-3887 | --- | --- | --- | --- |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-58

| ITEM | DESCRIPTION | 208V | | 240V | | 480V | | 208V | | 240V | | 480V | | 208V | | 240V | |
|------|---|--------------|---------------|--------------|---------------|--------------|---------------|--------------|---------------|--------------|---------------|--------------|---------------|--------------|---------------|--------------|---------------|
| | | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase | Single Phase | Three Phase |
| 28 | Tank with Gaskets | --- | R01.02.031.00 | --- | R01.02.031.00 | --- | R01.02.031.00 | --- | R01.02.031.00 | --- | R01.02.031.00 | --- | R01.02.031.00 | --- | R01.02.031.00 | --- | R01.02.031.00 |
| 29 | Heating Element with Gasket Quantity | --- | R02.04.720.00 | --- | R02.04.721.00 | --- | R02.04.724.00 | --- | R02.04.720.00 | --- | R02.04.721.00 | --- | R02.04.724.00 | --- | R02.04.720.00 | --- | R02.04.720.00 |
| 30 | Contactors | --- | 6 | --- | 6 | --- | 6 | --- | 6 | --- | 6 | --- | 6 | --- | 6 | --- | 6 |
| | Quantity | --- | 02.01.017.00 | --- | 02.01.017.00 | --- | 02.01.015.00 | --- | 02.01.017.00 | --- | 02.01.017.00 | --- | 02.01.015.00 | --- | 02.01.018.00 | --- | 02.01.018.00 |
| 31 | Thermostat Control | --- | 3 | --- | 3 | --- | 2 | --- | 3 | --- | 3 | --- | 2 | --- | 3 | --- | 3 |
| 32 | Low Water Cut Off Board | --- | 02.16.003.00 | --- | 02.16.003.00 | --- | 02.16.003.00 | --- | 02.16.003.00 | --- | 02.16.003.00 | --- | 02.16.003.00 | --- | 02.16.003.00 | --- | 02.16.003.00 |
| 33 | Transformer, Step Down | --- | 02.01.006.00 | --- | 02.01.006.00 | --- | 02.01.006.00 | --- | 02.01.006.00 | --- | 02.01.006.00 | --- | 02.01.006.00 | --- | 02.01.001.00 | --- | 02.01.001.00 |
| 34 | Terminal Block | --- | 02.17.004.00 | --- | 02.17.004.00 | --- | 02.17.005.00 | --- | 02.17.004.00 | --- | 02.17.004.00 | --- | 02.17.005.00 | --- | --- | --- | --- |
| 35 | Indicator Light, Red | --- | --- | --- | --- | --- | 02.15.021.00 | --- | --- | --- | --- | --- | 02.15.021.00 | --- | 02.15.021.00 | --- | 02.15.021.00 |
| 36 | Indicator Light, Green | --- | 02.19.154.00 | --- | 02.19.154.00 | --- | 02.19.154.00 | --- | 02.19.154.00 | --- | 02.19.154.00 | --- | 02.19.154.00 | --- | 02.19.151.00 | --- | 02.19.151.00 |
| 37A | Power Fuse Block | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | 02.19.150.00 |
| | Quantity | --- | 02.41.020.00 | --- | 02.41.020.00 | --- | --- | --- | 02.41.020.00 | --- | 02.41.020.00 | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block | --- | 1 | --- | 1 | --- | --- | --- | 1 | --- | 1 | --- | --- | --- | --- | --- | --- |
| | Quantity | --- | 02.41.022.00 | --- | 02.41.022.00 | --- | --- | --- | 02.41.022.00 | --- | 02.41.022.00 | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block | --- | 2 | --- | 2 | --- | --- | --- | 2 | --- | 2 | --- | 02.41.030.00 | --- | --- | --- | --- |
| | Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| | Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) (60 Amp) | --- | R02.03.033.02 | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| | Quantity | --- | 6 | --- | --- | --- | --- | --- | 6 | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) (50 Amp) | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| | Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) (50 Amp) | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| | Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | --- | 02.03.022.00 | --- | 02.03.022.00 | --- | 02.03.023.00 | --- | 02.03.022.00 | --- | 02.03.022.00 | --- | 02.03.023.00 | --- | 02.03.004.00 | --- | 02.03.004.00 |
| 40 | Control Fuse (2 Pack) | --- | R02.03.014.02 | --- | R02.03.014.02 | --- | R02.03.013.02 | --- | R02.03.014.02 | --- | R02.03.014.02 | --- | R02.03.013.02 | --- | R02.03.001.02 | --- | R02.03.001.02 |
| 41A | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41B | Tube, Inlet Water | --- | 03.30.007.00 | --- | 03.30.007.00 | --- | 03.30.007.00 | --- | 03.30.007.00 | --- | 03.30.007.00 | --- | 03.30.007.00 | --- | 03.30.007.00 | --- | 03.30.007.00 |
| 42A | Nipple, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Tube, Outlet Water | --- | 03.30.009.00 | --- | 03.30.009.00 | --- | 03.30.009.00 | --- | 03.30.009.00 | --- | 03.30.009.00 | --- | 03.30.009.00 | --- | 03.30.009.00 | --- | 03.30.009.00 |
| | Electrical Diagram | --- | HC1-2479 | --- | HC1-2479 | --- | HC1-2481 | --- | HC1-2479 | --- | HC1-2479 | --- | HC1-2481 | --- | HC1-1181 | --- | HC1-1181 |

Shaded area reflects export models only.

PARTS SPECIFIC TO MODEL C-58

| ITEM | DESCRIPTION | 240V Three Phase | 380V Three Phase | 415V Three Phase | 480V Three Phase | 600V Three Phase | 380-400V CE 3 Wire | 400-415V CE 3 Wire | 380-400V CE 4 Wire | 400-415V CE 4 Wire |
|------|---|---------------------|---------------------|---------------------|---------------------|---------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 28 | Tank with Gaskets | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | R01.02.031.00 | --- | --- | --- | --- |
| 29 | Heating Element with Gasket Quantity 6 | R02.04.721.00 6 | R02.04.723.00 6 | R02.04.721.00 6 | R02.04.724.00 6 | R02.04.725.00 6 | --- | --- | --- | --- |
| 30 | Contactors Quantity 3 | 02.01.018.00 3 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 2 | 02.01.016.00 1 | --- | --- | --- | --- |
| 31 | Thermostat Control | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | 02.16.003.00 | --- | --- | --- | --- |
| 32 | Low Water Cut Off Board | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | 02.01.001.00 | --- | --- | --- | --- |
| 33 | Transformer, Step Down | --- | R02.17.003.00 | R02.17.002.00 | R02.17.002.00 | 02.17.009.00 | --- | --- | --- | --- |
| 34 | Terminal Block | 02.15.021.00 | 02.15.021.00 | 02.15.021.00 | 02.15.021.00 | 02.15.021.00 | --- | --- | --- | --- |
| 35 | Indicator Light, Red | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | 02.19.151.00 | --- | --- | --- | --- |
| 36 | Indicator Light, Green | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | 02.19.150.00 | --- | --- | --- | --- |
| 37A | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37B | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37C | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 37D | Power Fuse Block Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38A | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38B | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 38C | Power Fuse (2 Pack) Quantity | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 39 | Control Fuse Block | 02.03.004.00 | --- | --- | --- | 02.03.016.00 | --- | --- | --- | --- |
| 40 | Control Fuse (2 Pack) | R02.03.001.02 | R02.03.005.02 | R02.03.005.02 | R02.03.005.02 | R02.03.021.02 | --- | --- | --- | --- |
| 41A | Tube, Inlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 41B | Tube, Inlet Water | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | 03.30.007.00 | --- | --- | --- | --- |
| 42A | Nipple, Outlet Water | --- | --- | --- | --- | --- | --- | --- | --- | --- |
| 42B | Tube, Outlet Water | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | 03.30.009.00 | --- | --- | --- | --- |
| | Electrical Diagram | HC1-1181 | HS1-3887 | HS1-3887 | HC1-2177 | HS1-3887 | --- | --- | --- | --- |

Shaded area reflects export models only.

HATCO AUTHORIZED PARTS DISTRIBUTORS

ALABAMA

Jones McLeod Appl. Svc.
Birmingham 205-251-0159

ARIZONA

Auth. Comm. Food Equip.
Phoenix 602-234-2443
Byassee Equipment Co.
Phoenix 602-252-0402

CALIFORNIA

Industrial Electric
Huntington Beach 714-379-7100
Chapman Appl. Service
San Diego 619-298-7106
P & D Appliance
S. San Francisco 650-635-1900

COLORADO

Hawkins Commercial Appliance
Englewood 303-781-5548

DELAWARE

Food Equipment Service
Wilmington 302-996-9363

FLORIDA

Whaley Foodservice Repair
Jacksonville 904-725-7800
Nass Service Co., Inc.
Orlando 407-425-2681
B.G.S.I.
Pompano Beach 954-971-0456
Comm. Appliance Service
Tampa 813-663-0313

GEORGIA

Southeastern Rest. Svc.
Norcross 770-446-6177

HAWAII

Burney's Comm. Service, Inc.
Honolulu 808-848-1466
Food Equip Parts & Service
Honolulu 808-847-4871

ILLINOIS

Parts Town
Lombard 708-865-7278
Eichenauer Elec. Service
Decatur 217-429-4229
Midwest Elec. Appl. Service
Elmhurst 630-279-8000
Cone's Repair Service
Moline 309-797-5323

INDIANA

GCS Service
Indianapolis 317-545-9655

IOWA

Electric Motor Service Co.
Davenport 319-323-1823

KENTUCKY

GCS Service
Louisville 502-367-1788

LOUISIANA

Chandlers Parts & Service
Baton Rouge 225-272-6620
Bana Comm. Parts, Inc.
Shreveport 318-631-6550

MARYLAND

Electric Motor Service
Baltimore 410-467-8080
GCS Service
Silver Spring 301-585-7550

MASSACHUSETTS

Ace Service Co., Inc.
Needham 781-449-4220

MICHIGAN

Commercial Kitchen Service
Bay City 517-893-4561
Bildons Appliance Service
Detroit 248-478-3320

Midwest Food Equip. Service
Grandville 616-261-2000

MINNESOTA

GCS Service
Minneapolis 612-546-4221

MISSOURI

GCS Service
Kansas City 816-920-5999
Commercial Kitchen Services
St. Louis 314-890-0700

Kaemmerlen Parts & Service
St. Louis 314-535-2222

NEBRASKA

Anderson Electric
Omaha 402-341-1414

NEVADA

Burney's Commercial
Las Vegas 702-736-0006
Hi. Tech Commercial Service
N. Las Vegas 702-649-4616

NEW JERSEY

Jay Hill Repair
Fairfield 973-575-9145
Service Plus
Flanders 973-691-6300

NEW YORK

Acme American Repairs, Inc.
Brooklyn 718-456-6544
Alpro Service Co.
Brooklyn 718-386-2515

NEW YORK (continued)

Appliance Installation
Buffalo 716-884-7425
Northern Parts Dist.
Plattsburgh 518-563-3200
J. B. Brady, Inc.
Syracuse 315-422-9271

NORTH CAROLINA

Authorized Appliance
Charlotte 704-377-4501

OHIO

Akron/Canton Comm. Svc. Inc.
Akron 330-753-6635
Certified Service Center
Cincinnati 513-772-6600

GCS Service
Columbus 614-476-3225

Electrical Appl. Repair Service
Independence 216-459-8700

E. A. Wichman Co.
Toledo 419-385-9121

OKLAHOMA

Hagar Rest. Service, Inc.
Oklahoma City 405-235-2184
Krueger, Inc.
Oklahoma City 405-528-8883

OREGON

Bressie Electric Co.
Portland 503-231-7171

Ron's Service, Inc.
Portland 503-624-0890

PENNSYLVANIA

Authorized Factory Service
Coraopolis 412-262-2330
FAST Comm. Appl. Service
Philadelphia 215-288-4800

GCS Service
Pittsburgh 412-787-1970

K & D Service Co.
Harrisburg 717-236-9039

Elmer Schultz Services
Philadelphia 215-627-5401

Electric Repair Co.
Reading 610-376-5444

RHODE ISLAND

Marshall Electric Co.
Providence 401-331-1163

SOUTH CAROLINA

Whaley Foodservice Repair
W. Columbia 803-791-4420

TENNESSEE

Camp Electric
Memphis 901-527-7543

TEXAS

Stove Parts Supply
Fort Worth 817-831-0381

Armstrong Repair Service
Houston 713-666-7100

Commercial Kitchen Repair Co.
San Antonio 210-735-2811

San Antonio Rest. Equip.
San Antonio 210-532-1660

UTAH

GCS Service
Salt Lake City 801-487-3653

VIRGINIA

Daubers
Norfolk 757-855-4097

Daubers
Springfield 703-866-3600

WASHINGTON

Restaurant Appl. Service
Seattle 206-524-8200

WISCONSIN

A.S.C., Inc.
Madison 608-246-3160

A.S.C., Inc.
Milwaukee 414-543-6460

CANADA

BRITISH COLUMBIA

Key Food Equipment Service
Vancouver 604-433-4484

ONTARIO

R.G. Henderson Ltd.
Toronto 416-422-5580

Choquette CKS
Ottawa 613-739-8458

QUÉBEC

Choquette CKS
Montreal 514-722-2000

Choquette CKS
Québec City 418-681-3944

HATCO CORPORATION

P.O. Box 340500, Milwaukee, WI 53234-0500 U.S.A.

(800) 558-0607 (414) 671-6350

Parts & Service Fax (800) 690-2966 Int'l. Fax (414) 671-3976

www.hatcocorp.com