


WARING COMMERCIAL®

Single Spindle Drink Mixers

WDM120 WDM120GR / Grainger

Unit Information

	1.15 Amp.		
	3 Speeds with Pulse Option		
RPM's	16000	22000	25000
	Low	Med	High
Butterfly Agitator - soft ice cream			
Solid Agitator - hard ice cream			

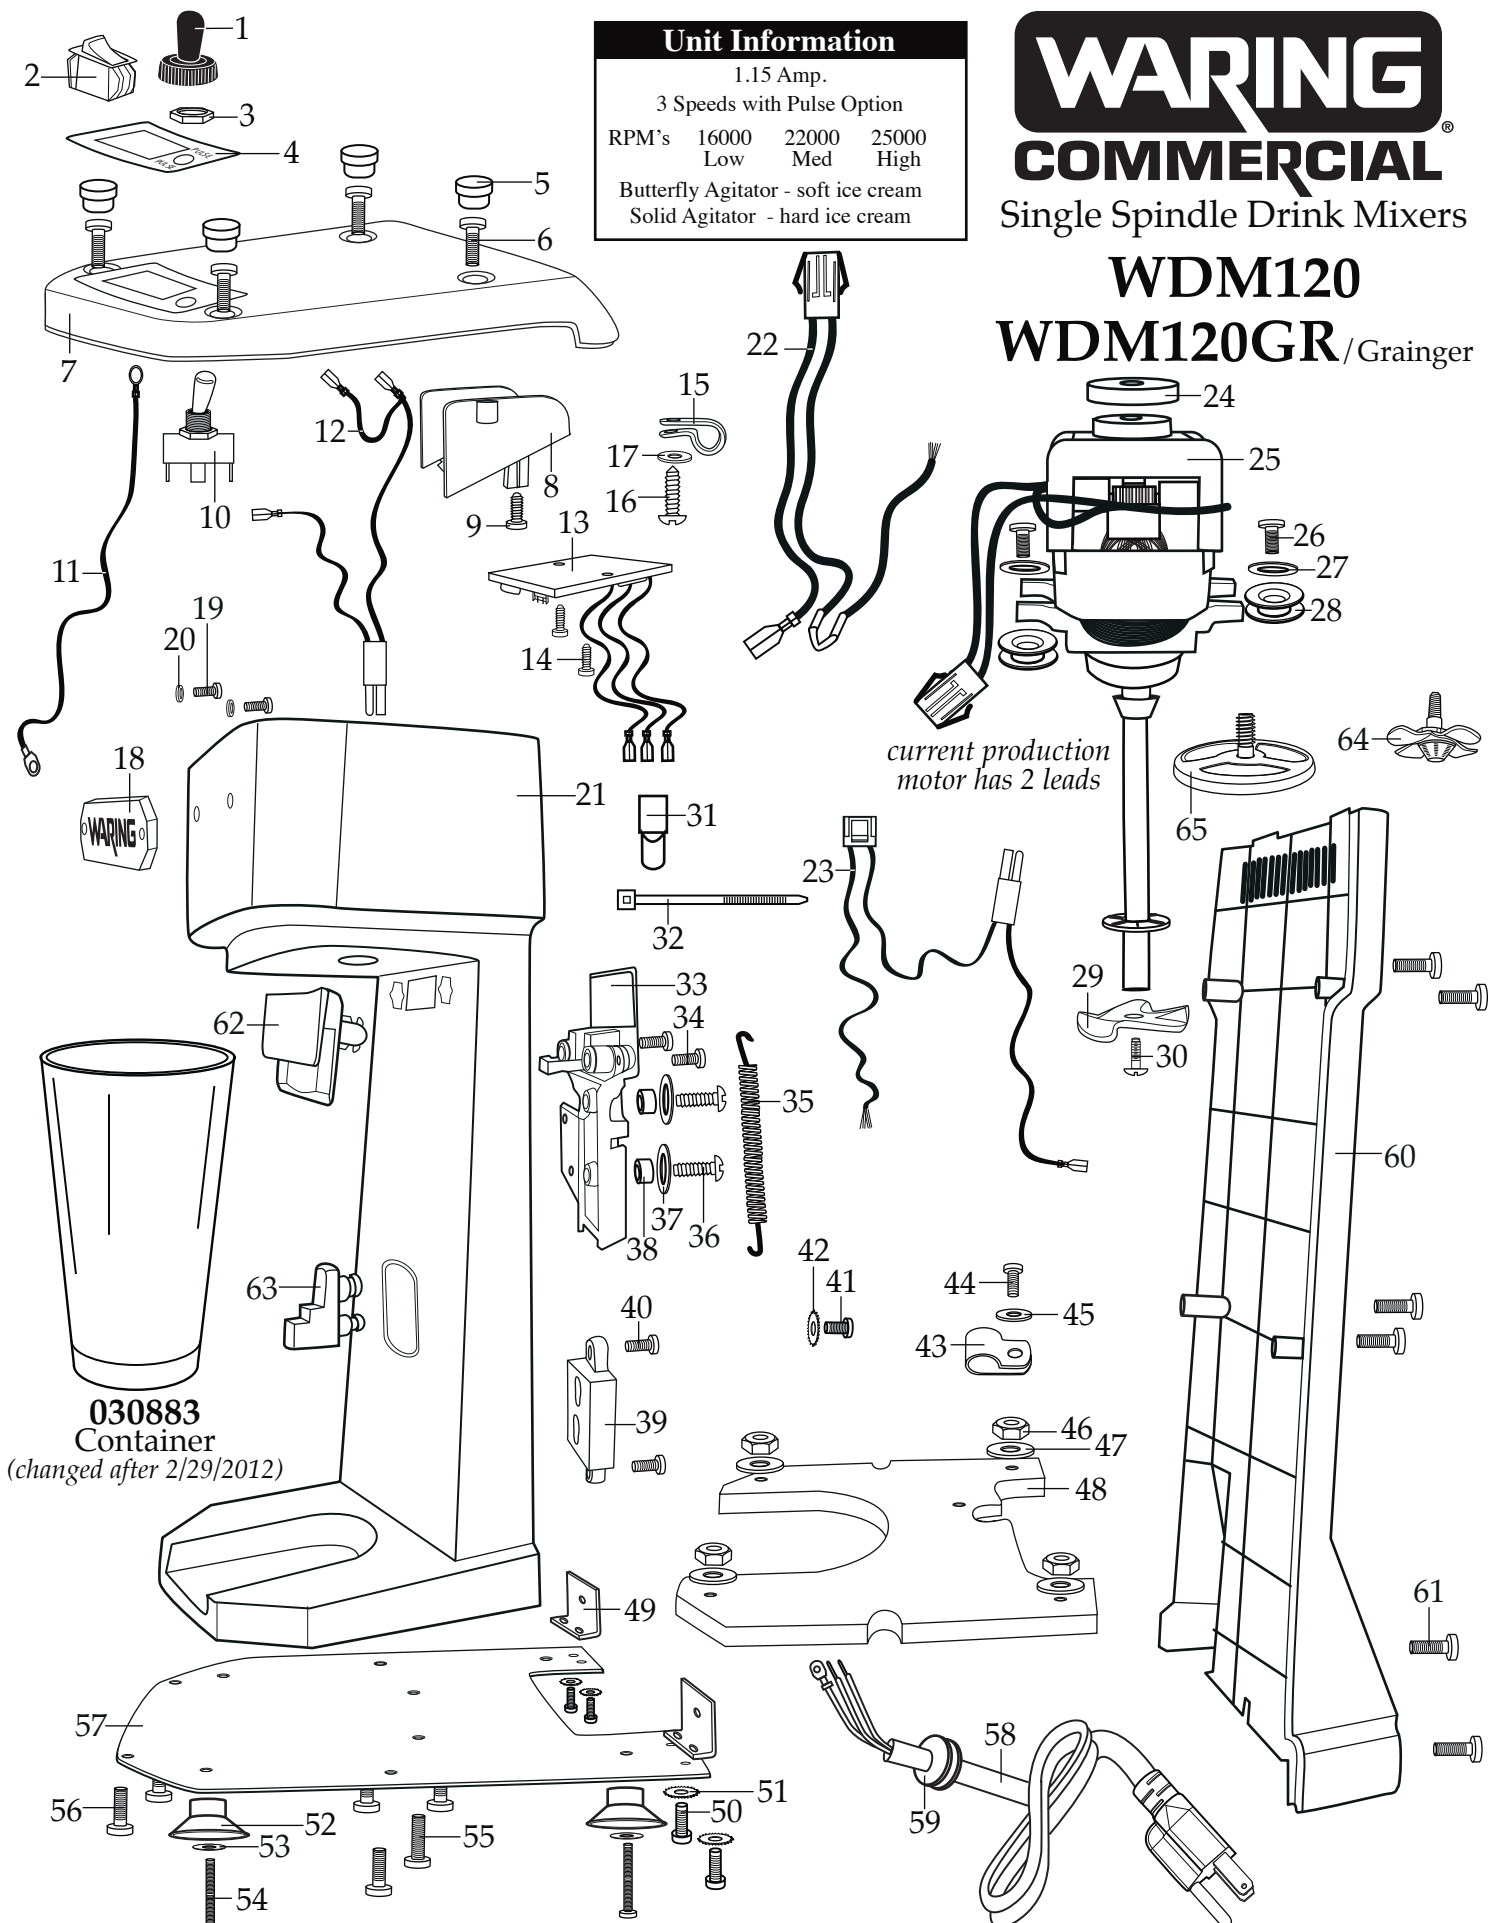

Illustration#	Part#	Description
1	030682	Switch Boot
2	030683	Rocker Switch
3	016236	Hex Nut
4	030684	Switch Plate
5	030685	Hole Plug (4 required)
6	033901	Screw (4 required <i>on units after 12/2012</i>)
	030686	Screw (4 required)
7	034298	Top Housing with PC Holder (<i>on units after 12/2012</i>)
	034297	Top Housing (<i>on units after 12/2012</i>)
	030687	Top Housing
8	034300	PC Holder
9	033886	PC Holder Screw
10	033899	Toggle Switch (<i>changed after 12/2012</i>)
11	034408	Green/ Yellow Ground Lead (<i>on units after 12/2012</i>)
12	033888	Toggle Switch Black Lead Harness (<i>on units after 12/2012</i>)
13	033889	PC Board (<i>on units after 12/2012</i>)
14	033890	PC Board Screw (2 required <i>on units after 12/2012</i>)
15	030708	5/ 16 Clamp (<i>on units after 12/2012</i>)
16	033900	Clamp Screw (<i>on units after 12/2012</i>)
17	030702	Clamp Washer (<i>on units after 12/2012</i>)
18	030689	Name Plate
19	030691	Nameplate Screw (2 required)
20	030690	Nameplate Washer (2 required)
21	030692	Front Housing
22	033891	Black & Brown Lead Harness
23	033892	Blue, White & Black Lead Harness
24	030694	Top Motor Mount
25	033893	Motor (<i>on units after 12/2012</i>)
	030695	Motor (obsolete)
26	030686	Motor Screw (2 required)
27	030696	Motor Washer (2 required)
28	030697	Side Motor Mounts (2 required)

Illustration #	Part #	Description
29	030716	Solid Agitator
30	029291	Solid Agitator Screw
31	012409	Crimp Connector (2 required)
32	013731	Wire Ties (4 required <i>on units after 12/2012</i>)
	013731	Wire Ties (3 required)
33	030699	Actuator Switch with Switch Bracket and Metal Plate
	031978	Actuator Switch with Switch Bracket
34	030700	Actuator Bracket Screw (2 required)
35	030701	Spring
36	030686	Actuator Switch Screw (2 required)
37	030702	Actuator Switch Washer (2 required)
38	030703	Actuator Switch Sleeve (2 required)
39	030704	Cup Support Locking Assembly
40	033901	Screw (2 required <i>on units after 12/2012</i>)
	030700	Screw (2 required)
41	030706	Ground Screw
42	030707	Ground Lock Washer
43	036039	1/4 Cord Clamp
44	030686	Clamp Screw (<i>on units after 12/2012</i>)
	030700	Clamp Screw
45	030702	Clamp Washer (<i>on units after 12/2012</i>)
46	033898	Hex Nut (4 required <i>on units after 12/2012</i>)
	030713	Hex Nut (4 required)
47	033897	Large Washer (4 required <i>on units after 12/2012</i>)
	030714	Spring Washer (4 required)
48	034306	Bottom Plate Weight (<i>on units after 12/2012</i>)
	030710	Large Plate Weight
49	033895	Bottom Plate Bracket (4 required <i>on units after 12/2012</i>)
	030711	Small Plate Weight (2 required)
50	033969	Screw (2 required for each bracket <i>on units after 12/2012</i>)
	030700	Screw (2 required for each small plate weight)
51	030707	Lock Washer (2 required for each bracket <i>on units after 12/2012</i>)
	030707	Lock Washer (2 required for each small plate weight)
52	030719	Foot (4 required)
53	030696	Foot Washer (4 required)

Illustration#	Part#	Description
54	030715	Foot Screw (4 required)
55	033969	Weight Plate Screw (2 required <i>on units after 12/2012</i>)
56	033901 030686	Bottom Plate Screw (4 required <i>on units after 12/2012</i>) Bottom Plate Screw (4 required)
57	034307 030712	Bottom Plate (<i>on units after 12/2012</i>) Bottom Plate
58	031985 030709	Cord (<i>on units after 12/2012</i>) Cord
59	031984	Strain Relief (<i>on units after 12/2012</i>)
60	030705	Back Housing
61	033901 030686	Back Housing Screw (6 required <i>on units after 12/2012</i>) Back Housing Screw (6 required)
62	030717	Cup Actuator
63	030718	Cup Support
64	029292	Butterfly Agitator
65	036627	Wheel Agitator



Parts of 030699

Parts No Longer Used

