

# Installation Manual

## Installation and Maintenance Instructions

### CONVOTHERM BY CLEVELAND

#### COMBI GAS MODELS



1333 East 179<sup>th</sup> Street  
Cleveland, Ohio 44110

Phone: (216) 481-4900  
Fax: (216) 481 3782  
[www.clevelandrange.com](http://www.clevelandrange.com)

 Cleveland

# FOR THE INSTALLER

## **FOR YOUR SAFETY**

Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

## **WARNING**

**Disconnect power before servicing.**

## **WARNING**

Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

## **IMPORTANT**

IT IS IMPORTANT TO POST INSTRUCTIONS WHICH ARE TO BE FOLLOWED IN THE EVENT THE USER SMELLS GAS. THESE INSTRUCTIONS MUST BE DISPLAYED IN A PROMINENT LOCATION, AND MUST BE FULLY UNDERSTOOD BY ALL USERS OF THIS EQUIPMENT. THIS INFORMATION SHOULD BE OBTAINED FROM YOUR LOCAL GAS SUPPLIER.

**ALL SERVICE MUST BE PERFORMED BY A QUALIFIED CLEVELAND RANGE AUTHORIZED TECHNICIAN.**

## **WARNING**

**Do not connect Combi steamer-oven drain connection to any drain material that cannot sustain 140° Fahrenheit.**

This Installation Manual is a part of your new Convotherm by Cleveland Combination oven steamer. You must keep and maintain it for the entire life span of your Combi and pass it on to the next owner of the unit.

**RETAIN THIS MANUAL FOR REFERENCE  
KEEP IT WHERE YOU CAN USE IT**

This manual may be subject to new technical developments, modifications, and unforeseen errors.

**DO NOT OPERATE OR ATTEMPT TO OPERATE THIS APPLIANCE OR ANY ACCESSORIES WITHOUT READING COMPLETELY AND FULLY UNDERSTANDING THIS MANUAL**

# Cleveland STATEMENT OF POLICIES

## LIMITED WARRANTY

CLEVELAND RANGE products are warranted to the original purchaser to be free from defects in materials and workmanship under normal use and service for the standard warranty period of one year from date of installation or 18 months from date of shipment, whichever ever comes first.

CLEVELAND RANGE agrees to repair or replace, at its option, f.o.b. factory, any part which proves to be defective due to defects in material or workmanship during the warranty period, providing the equipment has been unaltered, and has been PROPERLY INSTALLED, MAINTAINED, AND OPERATED IN ACCORDANCE WITH THE CLEVELAND RANGE OWNER'S MANUAL.

CLEVELAND RANGE agrees to pay any FACTORY AUTHORIZED EQUIPMENT SERVICE AGENCY (within the continental United States, and Hawaii) for reasonable labor required to repair or replace, at our option, f.o.b. factory, any part which proves to be defective due to defects in material or workmanship, during the labor warranty period. This warranty includes travel time not to exceed two hours and mileage not to exceed 50 miles (100 miles round-trip), BUT DOES NOT INCLUDE POST START-UP, TIGHTENING LOOSE FITTINGS, MINOR ADJUSTMENTS, MAINTENANCE, CLEANING OR DESCALING.

The standard labor warranty allows factory payment of reasonable labor required to repair or replace such defective parts. Cleveland Range will not reimburse the expense of labor required for the repair or replacement of parts after the standard warranty period, unless an Extended Labor Warranty Contract has been purchased to cover the equipment for the balance of the warranty period from the date of equipment installation, start-up, or demonstration.

PROPER INSTALLATION IS THE RESPONSIBILITY OF THE DEALER, THE OWNER-USER, OR INSTALLING CONTRACTOR, AND IS NOT COVERED BY THIS WARRANTY. Many local codes exist, and it is the responsibility of the owner and installer to comply with these codes. Cleveland Range equipment is built to comply with applicable standards for manufacturers, including UL, ANSI, NSF, ASME/Ntl. Bd., CSA, and others.

BOILER (Steam Generator) MAINTENANCE IS THE RESPONSIBILITY OF THE OWNER-USER AND IS NOT COVERED BY THIS WARRANTY. The use of good quality feed water is the responsibility of the Owner-User (see Water Quality Recommendations below). THE USE OF POOR QUALITY FEED WATER WILL VOID EQUIPMENT WARRANTIES. Boiler maintenance supplies, including boiler hand hole gaskets, are not warranted beyond the first 90 days after the date the equipment is placed into service. Preventive maintenance records must be available showing descaling per applicable Cleveland Operator Manual for Boiler Proration Program considerations.

### WATER QUALITY RECOMMENDATIONS

TOTAL DISSOLVED SOLIDS	less than	60 parts per million
TOTAL ALKALINITY	less than	20 parts per million
SILICA	less than	13 parts per million
CHLORIDE	less than	30 parts per million
pH FACTOR	greater than	7.5

The foregoing shall constitute the sole and exclusive remedy of original purchaser and the full liability of Cleveland Range for any breach of warranty. THE FOREGOING IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, WHETHER WRITTEN, ORAL, OR IMPLIED, INCLUDING ANY WARRANTY OF PERFORMANCE, MERCHANTABILITY, OR FITNESS FOR PURPOSE, AND SUPERSEDES AND EXCLUDES ANY ORAL WARRANTIES OR REPRESENTATIONS, OR WRITTEN WARRANTIES OR REPRESENTATIONS, NOT EXPRESSLY DESIGNATED IN WRITING AS A "WARRANTY" OR "GUARANTEE" OF CLEVELAND RANGE MADE OR IMPLIED IN ANY MANUAL, LITERATURE, ADVERTISING BROCHURE OR OTHER MATERIALS.

CLEVELAND RANGE'S liability on any claim of any kind, including negligence, with respect to the goods or services covered hereunder, shall in no case exceed the price of the goods or services, or part thereof, which gives rise to the claim. IN NO EVENT SHALL CLEVELAND RANGE BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, OR ANY DAMAGES IN THE NATURE OF PENALTIES.



# **Free Start-Up Program**

## **Get the most from your Cleveland Range equipment with Cleveland Range's "Free Start-Up."**

**Performance Check-Out:** Contact your Cleveland Range maintenance and repair center for your Performance Check-Out before starting your new Convothem by Cleveland Combination Oven-Steamer. The Performance Check-Out includes: inspection of installation, review of cleaning and maintenance instructions, and start of warranty protection.

**Equipment Demonstration:** After your Performance Check-Out, contact your Cleveland Range sales representative for your free demonstration of proper operation, optimal use, and correct care of your new equipment.

**Use and Care Video:** After your Equipment Demonstration, your sales representative will present and explain your free copy of the Cleveland Range Use and Care Video. (Combi video release expected in September 2005.)

Consult your Customer Service Directory or call Cleveland Range at 216-481-4900 to begin your free Start-Up Program.

### **Your "Combi" in Action**

You can cook a variety of foods in your Convothem by Cleveland Combination Oven-Steamer, or "Combi," using hot air, steam, and Combi hot air and superheated steam.

Your Combi is extremely versatile and can cook sous-vide as well as steam, blanch, poach, stew, boil, roast, braise, bake, grill, "fry," gratinate, rethermalize and defrost.

Just place food in containers or on wire racks, select the cooking program, and time, or core temperature and start cooking with your Combi.

**NOTICE:** Cleveland Range CONVOTHERM by Cleveland Combi Oven-Steamers (Combis) are intended for commercial use only.

**NOTICE:** The ambient temperature must be between 40°F and 95°F.

<b>Chapter</b>	<b>INSTALLATION AND MAINTENANCE Table of Contents</b>	<b>Page</b>
<b>1</b>	<b>GENERAL INFORMATION ABOUT CONVOTHERM BY CLEVELAND</b>	<b>1</b>
	GENERAL SAFETY GUIDELINES FOR INSTALLERS, USERS, AND SERVICE TECHNICIANS	1
	PRODUCT INFORMATION	2
	PRODUCT VIEWS	3
	CONTROL PANELS	4
<b>2</b>	<b>INSTALLATION INSTRUCTIONS</b>	<b>6</b>
	GENERAL	6
	INSTALLATION OF THE COMBI – Overview and General Instructions	7
	INSTALLATION OF THE COMBI – Selecting a Location for the Combi	9
	UTILITIES CONNECTIONS	10
	Install Electric Power Lines	10
	Electrical Connection Data	10
	Install Water Supply	10
	Install Free Air Vented Drain Lines	13
	Gas Supply	16
	Exhaust Hood Requirements	18
	Combustible Air Supply	18
	Moving a Combi to its Operating Location	19
	For ALL Combis	20
	For Stand Mounted Combis	20
	CHECKOUT and STARTUP	21
<b>3</b>	<b>STARTUP PROCEDURE AND OPERATIONAL TESTS</b>	<b>22</b>
	LIGHTING AND SHUTDOWN PROCEDURES	23
	START-UP PROCEDURE	24
	SET CONTROL PANEL OPTIONS	25
<b>4</b>	<b>TROUBLESHOOTING</b>	<b>31</b>
	Error Messages and Remedies	32
	These operating irregularities do not have error messages	33
<b>5</b>	<b>Emergency Operation</b>	<b>34</b>
	Operating Instructions for Emergency Operation	34
	The Combi will operate if these errors occur	35

# CHAPTER 1

## CONVOOTHERM BY CLEVELAND GENERAL INFORMATION

---

### A. GENERAL SAFETY GUIDELINES FOR INSTALLERS, USERS, AND SERVICE TECHNICIANS

1. Read, understand, and follow the instructions, and heed and obey the warnings of the Installation Manual and Operators Manual, and the labels on the Combi, accessories, and supporting products.
2. Improper installation, maintenance, cleaning, or modifications to the Combi can lead to injury or death of the operator(s), and equipment and property damage.
3. STEAM – To avoid steam burns, open the Combi door by turning the handle to the horizontal (“airing”) position and waiting for the steam and condensate to clear. Then stand back and to the hinge side of the door and slowly open the door. Never breathe steam, superheated steam, or hot air. Note: The cooking program is interrupted whenever the door is opened.
4. HEAT – The Combi, cooking containers, shelves, and inner door and anything else inside the cooking compartment are HOT, as are many of the component parts. Wear DRY heatproof gloves or mitts.
5. EXHAUST VENTS – The top of the Combi, and the gas and steam exhaust vents are very hot during operation and remain hot for some time. Never breathe gas or steam from the exhaust vents. Use extreme caution when working on or near this area and component parts.
6. SCALDS – Do not place containers with liquid contents or contents that become liquid on oven racks higher than you can see into the containers. Cover containers (individual or on trolleys) containing hot or hot liquid items to help prevent spills during transport. Observe and heed and obey the additional warnings and warning labels posted on the Combi
7. GREASE SPATTER – Hot grease will spatter and cause burns if sprayed with water. Locate fryers and similar appliances outside the range of the Combi hand shower.
8. ELECTRIC SHOCK – Use the hand shower only on the inside of the oven. Use of the hand shower, hoses, power cleaners, or pressure washers on the outside of the Combi can cause electric shock and / or damage electrical and electronic components.
9. CLEANING AND DAILY MAINTENANCE – Wait for the Combi to cool before cleaning and performing daily maintenance. Do NOT spray water in a hot cooking compartment. Do not use hoses, power cleaners or pressure washers, or harsh or abrasive cleaning agents inside OR outside the cooking compartment.
10. CLEANING AGENTS – Use only Convotherm by Cleveland cleaning and descaling products. Follow the instructions, and heed and obey the warnings on the labels. Other products can damage the Combi, cause injury, or present health hazards.
11. Wear BOOTS appropriate to the work area to help protect feet, and to help prevent slips and falls.
12. Use non-slip, draining, anti-fatigue FLOOR MATS (not included) rated for use in wet, greasy, and dry work areas to help prevent slipping and / or falling injuries. Obtain the best mats for your needs from your local supplier.

## B. PRODUCT INFORMATION

Cleveland Range, LLC assigns two product identification numbers to each Combi: a model number and a serial number. The model number identifies the product characteristics. The serial number identifies the individual unit.

### 1. Model Number

This manual covers the installation of OGB and OGS model gas fired Combis.

### 2. Serial Number and Equipment Record


During manufacture, Combis are assigned individual serial numbers. Please provide the following information when you contact Cleveland Range or a qualified Cleveland Range authorized service representative:

Serial  
Number \_\_\_\_\_

Model  
Number \_\_\_\_\_

### 3. Product Information Plate

The Product Information Plate on the left side of the unit lists the model and serial number as well as the power and wiring requirements of the steamer. Refer to Figure 1-2 or 1-3 for the location of the plate. Figure 1-1 illustrates a typical Product Information Plate.

<b>GAS - FIRED</b>	<b>Enodis®</b>	<b>CLEVELAND RANGE, LLC</b>			
		<b>CLEVELAND, OHIO</b>			
	MODEL NO	6.20 OGB			
	SERIAL NO	WC 62092-05F-02			
ANSI Z83 .11 <input type="checkbox"/> a	OVEN	68,000	BTU PER HR		
	STEAM GENERATOR	61,000	BTU PER HR		
• CSA 1.8 <input type="checkbox"/> a-2004	MANIFOLD PRESSURE	FACTORY SET W. C.			
		NATURAL GAS	1000 BTU PER CU FT		
FOOD SERVICE EQUIPMENT 16SY	FOR USE ON COMBUSTIBLE FLOORS, WITH THE FOLLOWING MINIMUM CLEARANCES TO COMBUSTIBLE AND NONCOMBUSTIBLE CONSTRUCTION.				
	BACK	2 IN	RIGHT SIDE 2 1/2 IN	LEFT SIDE 4 IN	
	VOLTS	120	PHASE 1	HZ 60	AMPS 11.7
	CAUTION: FOR SUPPLY CONNECTION USE ONLY COPPER WIRE SUITABLE FOR AT LEAST 160 °C				
	INTENDED FOR OTHER THAN HOUSEHOLD USE FOR INSTALLATION UNDER VENTILATION HOOD ONLY				

111532 A

Figure 1-1  
Typical Product Information Plate




## C. PRODUCT VIEWS

1. **Control Panel**
2. **Disappearing Door with Double Glass Panel**
3. **Door Handle**
  - Vertical: closed.
  - Horizontal: open.
  - To open the Combi door turn the handle to the horizontal (airing) position.
4. **Combi Supports**  
Adjustable height legs. (6" minimum.)
5. **Hand Shower**  
Adjustable flow.  
Convenient hanger.
6. **Shut-off Valve**  
Close when the Hand Shower is not in use
7. **Low-Pressure Failsafe Device**
8. **Infeed Assist Mechanism (floor models)**
9. **Rating Plate**  
Contains the following information:
  - Power Consumption.
  - Gas Type.
  - Voltage.
  - Number of Phases.
  - Frequency.
  - Model Number.
  - Serial Number.
10. **Side Wall**
  - Removable for service by qualified Cleveland Range authorized service representatives.
  - Disconnect power before servicing.
  - Electrical Diagrams located on the inside of the Side Wall.
11. **Door Drip Tray (located behind door)**  
Built-in, self-emptying.
12. **Door Switch**
13. **Oven light**

**⚠ WARNING**

**Anything in the path of the door will be crushed.  
KEEP HANDS CLEAR!**

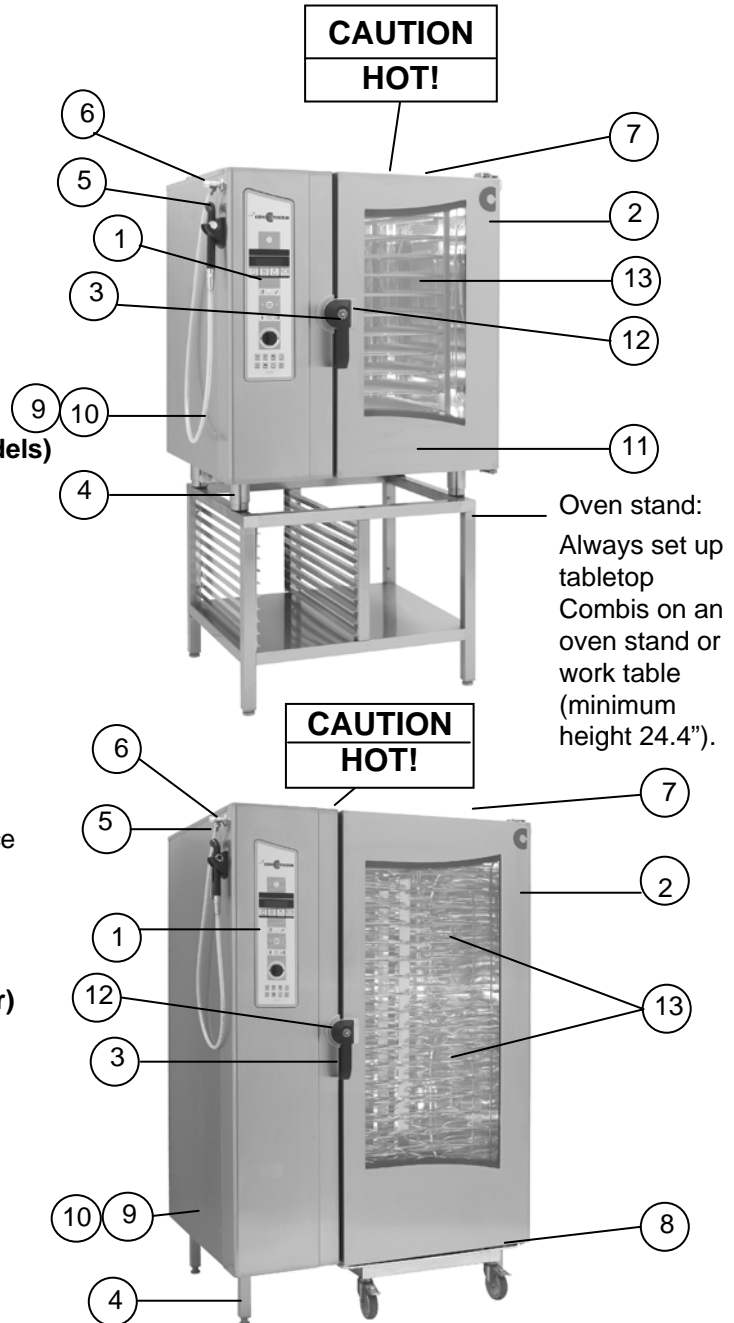

## D. Control Panel

FROM FIGURES 1-2 AND 1-3



### ON/OFF (1)

- When unit is turned ON:
  - Self-diagnosis is performed.
  - Oven light comes on.
  - Steam generator fills and heats (OEB and OGB models).



### “Steam” cooking mode (2)

- Oven temperature is continuously variable between 86°F and 248°F.



### “Combi Hot Air and Superheated Steam” cooking mode (3)

- Oven temperature is continuously variable between 212°F and 482°F.



### “Hot Air” cooking mode (4)

- Oven temperature is continuously variable between 86°F and 482°F.



### “Retherm” cooking mode (5)

- Oven temperature is continuously variable between 248°F and 320°F.



### Start/Stop (6)

- Start cooking programs, cooking ideas, and recipes from the Cookbook.
- Stop:
  - Stops the cooking activity.
  - Signal Tone sounds, confirming interruption of cooking activity.
  - Escape or Exit Smart Key functions



### Cookbook (7)

- Call up, exit cookbook.
- View a list of stored recipes in the display.



### Smart Key (8)


- Set extra functions.
- Set-up the Combi.
- Enter Sub-Menus.



### Write/Edit (9)

- Create, change, copy, and delete recipes.

Figure 1-4  
Control Panel

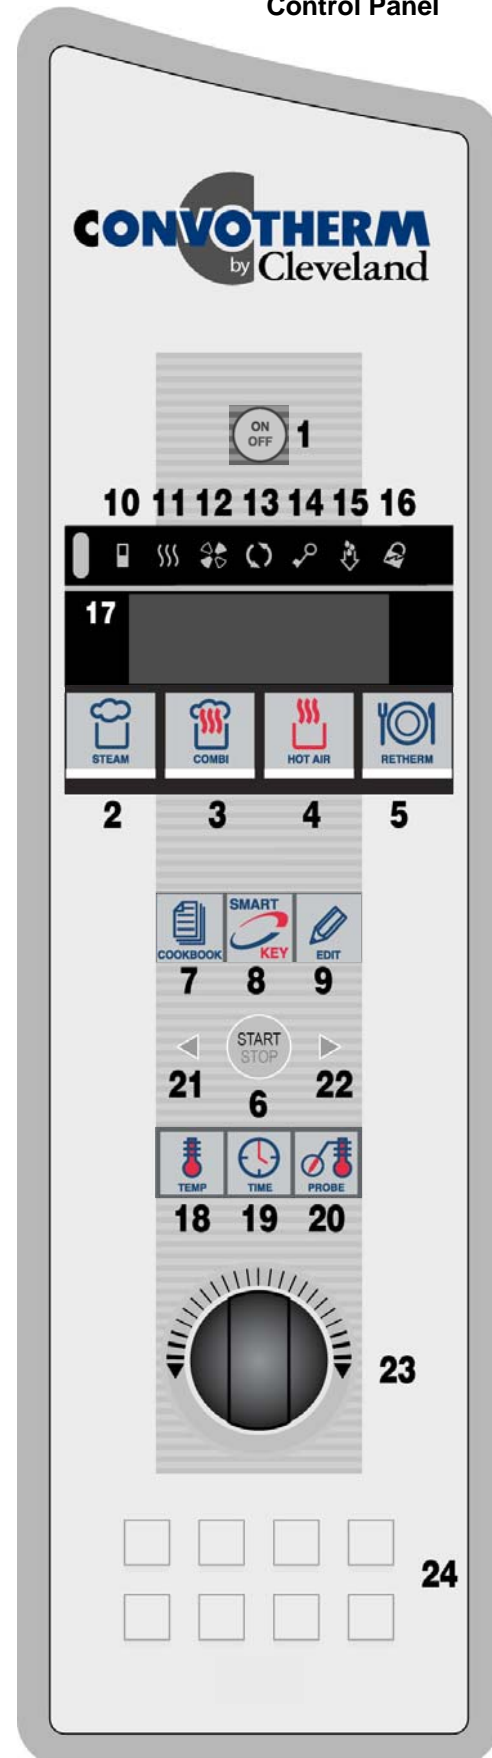

### Function and Operation Icons (10-16)

- Light up when function or activity is engaged:



**Reduced Power (10)** (optional feature for ELECTRIC models OEB & OES only).



**Burner or Electric Heater ON (11).**



**Reduced Fan Speed (12).**



**Cooking Mode Engaged (13).**



**Button Lock (14).**



**Crisp & Tasty (demoisturizing) Engaged (15).**



**Program Protection (16).**

- See elapsed cooking time when using Core Temperature mode.

### Display (17)

- Display in normal mode:
  - Date.
  - Time.
  - Oven Temperature.
  - Cooking Time
  - Core Probe Temperature.
- Display in programming mode:
  - Clear text.
  - Memory.
  - Symbols.



### Oven Temperature (18)

- Set the nominal oven temperature.
- View the actual or nominal oven temperature.



### Cooking Time (19)

- Set the cooking time from 1 min to 9 hrs 59 min.
- Set Continuous Mode
  1. At 9:59 or 0:01, release the Selector Dial.
  2. Turn the Selector Dial again to the left or right.
- See the actual or nominal cooking time.
- Pre-set start time.



### **Core Temperature (20).**

- Set the nominal core temperature.
- See the actual or nominal core temperature.
- See the actual core temperature during cooking time mode.



### **Paging / Scrolling to left or right (21/22).**

- Page / Scroll one step forwards or back in programming mode.



### **Selector Dial (23)**

- Set:
  - Oven Temperature.
  - Cooking Time.
  - Core Temperature.
  - Program Name.
  - Program Number.

- Select Smart Key functions and editing functions as well as Recipes in the Cookbook.

### **Press & Go (symbol) (24)**

(optional feature on OEB & OES)

- Start saved recipes with one key.
- LED below key lights up when corresponding recipe is started.

### **Notes:**

---

#### **Magnetic door switch**

If the oven door is opened during a program, the magnetic door switch automatically interrupts the cooking program. The timer stops. After closing the oven door, the Combi automatically continues the cooking program. If the oven door is opened when the Signal Tone sounds at the end of a program, the Signal Tone will stop.

Operate controls with hands only!

## CHAPTER 2


# INSTALLATION INSTRUCTIONS

---

### A. GENERAL

This equipment should be installed only by qualified, professional plumbers, pipe fitters, and electricians.

1. The installation of this Combi must conform with:
  - a. The Basic Plumbing Code of the Building Officials and Code Administrators International, Inc. (BOCA).
  - b. The National Fuel Gas Code, ANSI Z223.1 / NFPA 54 (latest edition) or the Natural Gas and Propane Installation Code CSA B1 49.1 as applicable.
  - c. The National Electrical Code, ANSI/NFPA 70 (latest edition), or the Canadian Electrical Code, CSA C22.2 as applicable.
  - d. The Food Service Sanitation Manual of the Food and Drug Administration (FDA).
  - e. All applicable national, state and local laws, codes, and regulations.
2. Installation instructions must be read in their entirety before starting installation of a Combi.

 **DANGER**

DEATH, INJURY, AND EQUIPMENT DAMAGE will result from the improper installation, adjustment, alteration, service, or maintenance of a Combi, or installation of a Combi damaged during shipment or storage. Also, any of these conditions will void the warranty.

DO NOT INSTALL a damaged Combi.

Install the Combi according to the policies and procedures outlined in this manual.

3. Inspect the Combi for shipping damage.
  - a. Check carton and packing for shipping damage.
  - b. Note any damage on the shipping paperwork as soon as the carton arrives.
  - c. Unpack the Combi and check for shipping damage.
  - d. If the Combi is damaged or damage is suspected:
    - 1) Inform your dealer at once.
    - 2) Inform Cleveland Range in writing within 3 days.
    - 3) Submit a Damage Claim to the Shipper.
4. General Safety
  - a. The Combi must be used only to cook food
  - b. Do not cook or reheat products in packages not specifically designed for this purpose.
  - c. Read, understand, and follow the instructions and heed and obey the warnings of the Installation Manual and Operator's Manual.
  - d. Read, understand, and follow the instructions and heed and obey the warnings of the labels on the Combi, accessories, and supporting products.
  - e. NEVER install or operate a damaged Combi.
  - f. Observe all local regulations, requirements, and standards.

---

## B. INSTALLATION OF THE COMBI – Overview and General Instructions

### DANGER

DEATH, INJURY, AND EQUIPMENT DAMAGE will result from improper lifting.  
Use enough workers with training and experience lifting heavy equipment to place the Combi on the supporting surface

1. Select the Combi's operating location.
2. Complete the drain, electric, and water lines before positioning and leveling the Combi.
3. Position and install the Combi.
4. Connect the utility lines after positioning and leveling the Combi.
5. After Setup and Checkout, the Combi should provide years of reliable operation.

### WARNING

All clearance requirements above, below, and around the Combi are the same for non-combustible locations as for combustible locations.

### CAUTION

Malfunctions and equipment damage will result from improper installation.  
Malfunctions and/or damage resulting from improper installation are **NOT** covered by warranty.  
Glass damage resulting from improper use or cleaning is **NOT** covered by warranty.  
Damage from improper use or cleaning, repair, maintenance, descaling, and failure to use appropriate cleaning products is **NOT** covered by warranty.  
Light bulbs, sealants, and consumable supplies in normal use are **NOT** covered by warranty

### DANGER

**A COMBI MUST BE LEVEL BOTH FRONT TO BACK AND  
SIDE TO SIDE IN ALL INSTALLATIONS.  
OPERATING A COMBI OUT OF LEVEL WILL CAUSE  
CATASTROPHIC DAMAGE.**

---

## C. INSTALLATION OF THE COMBI

### 1. Selecting a Location for the Combi

- a. For safe and efficient operation, observe the following criteria when selecting an operating location for a Combi
  - 1) **Passages and doors must be high enough and wide enough for a Combi and its pallet. See Table 2-1.**
  - 2) **Required Clearances:** Rear - 2", Left Side - 4", Right Side - 2 1/2"
    - a) Allow for sufficient safety distance if other heat sources (i.e. broiler) are located near this unit.
    - b) **Allow sufficient clearance on left side for service access** (contact the factory service department for recommendations).
    - c) Installation must comply with all local fire and health codes.
  - 3) Location selected must be capable of supporting a Combi. See Table 2-1.
  - 4) The area **MUST** be free from and clear of combustibile materials.
  - 5) **KEEP THE COMBI AREA FREE AND CLEAR FROM COMBUSTIBLES.**
  - 6) The operating surface must be level enough to allow leveling a Combi with its adjustable legs.
  - 7) A Combi **MUST** be level both front to back and side to side.
  - 8) Position the Combi so it will not tip or slide.
  - 9) The floor where the loading trolley rolls must be level and even.
  - 10) Level the floor if needed. (Fig. 7).
  - 11) The ambient temperature should be within 40° and 95° F.
  - 12) Proper air supply for combustion and ventilation is **REQUIRED** for and **CRITICAL** to safe, efficient operation of a Combi.
  - 13) Make sure there is no heat producing equipment near the air vents of a Combi.
  - 14) Do not install the Combi directly over a drain. Steam rising up out of the drain will adversely affect operation, hamper cooling air circulation, and damage electrical and electronic components.
  - 15) Make sure the air vents of the Combi are not blocked.

**TABLE 2-1 WEIGHTS AND DIMENSIONS INCLUDING PALLET AND CRATE**

STEAM GENERATOR MODEL	INJECTOR MODEL	WEIGHT IN POUNDS	WIDTH IN INCHES	DEPTH IN INCHES	HEIGHT IN INCHES
OGB-6.10	OGS-6.10	375	38	36	40
OGB-6.20	OGS-6.20	485	47	45	42
OGB-10.10	OGS-10.10	475	38	37	50
OGB-10.20	OGS-10.20	540	47	45	50
OGB-12.20	OGS-12.20	717*	48	46	64
OGB-20.10	OGS-20.10	750*	40	38	85
OGB-20.20	OGS-20.20	970*	52	46	85

- = including Loading Trolley

## D. UTILITIES CONNECTIONS FOR THE INSTALLATION OF THE COMBI

### 1. Install Electric Power Lines

The electrical supply must match all electrical and wiring requirements specified on the rating plate and must be made in accordance with the following requirements:

- a. The Combi must be properly grounded and have the electrical power lines installed in accordance with:
  - 1) The National Electric Code, ANSI/NFPA No. 70 LATEST EDITION (USA).
  - 2) Canadian Electrical Code, CSA C22.2.
  - 3) Any other applicable national, state, or local laws, codes, and regulations.
- b. Check the rating plate to make sure the Combi is compatible with the local electric supply.
- c. Note: the rating plate is located on the left side.
- d. Install a dedicated main disconnect switch and a separate fuse or breaker (per code) for each Combi. The fused or breakered disconnect switch is referred to as the “main external power switch.” (Fig. 9).
- e. Do **not** connect to a GFI. outlet.
- f. The main terminals are behind the removable left side cover in the service connection area.
- g. The wiring diagram and the spare parts list are in the service connection area.
- h. Check all cable and wire connections for size, location, and tightness before starting a Combi.
- i. The Combi must be electrically grounded by the installer.

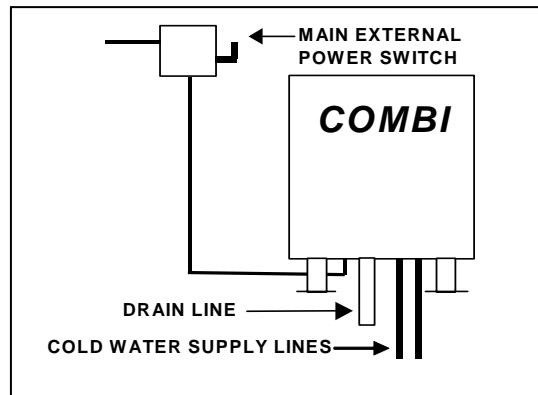


Figure 9  
Main External Power Switch

### 2. Electrical Connection Data

Model	OGB-6.10 OGS-6.10	OGB-6.20 OGS-6.20	OGB-10.10 OGS-10.10	OGB-10.20 OGS-10.20	OGB-12.20 OGS-12.20	OGB-20.10 OGS-20.10	OGB-20.20 OGS-20.20
Volts	120	120	120	120	120	120	120
Phase	1	1	1	1	1	1	1
Hz	60	60	60	60	60	60	60
kW	1.4	1.4	1.4	1.9	1.9	2.6	2.7
AMP	11.7	11.7	11.7	15.9	15.9	21.7	22.5
Wires	2+Ground	2+Ground	2+Ground	2+Ground	2+Ground	2+Ground	2+Ground
AWG, Cu, 90°C★	14	14	14	14	14	10	10

**Attention: always observe local ordinances!**

★Minimum American Wire Gauge size required for field connection




---

### 3. Install Water Supply

- a. Install the water supply before positioning the Combi.
- b. Water supply line(s) must be designed so the Combi can be moved for service.
- c. Construct all supply lines up to the point of installing the Combi.
- d. Flush the water supply lines before connecting the Combi to the water supply lines.

#### e. Water Supply Requirements

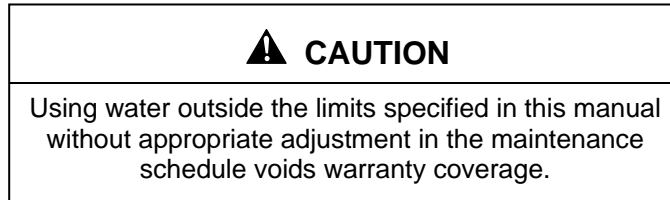

#### 1) Water Quality

- a. Check the quality of supply water (described below) before designing the water supply.
- b. Contact a local water treatment specialist for on-premises water analysis.
- c. Minimum feed water quality requirements are listed in Table 2-3.
- d. Poor water supply quality degrades Combi performance.
- e. Softened or chlorinated water damages the steam generator by increasing corrosion. Carbon type filters are required before water enters the steam generator if supply water is softened or chlorinated.
- f. If a water treatment system must be installed to achieve acceptable water quality, install it **BEFORE** connecting the water supply lines to a Combi.
- g. If analysis shows that supply water is below Minimum Water Quality:
  - 1) **EITHER** a water treatment system and/or carbon filter must be installed in the line feeding the steam generator,
  - 2) **OR** the frequency of maintenance, cleaning, and descaling must be increased beyond that recommended in the maintenance schedule.
  - 3) Contact your Cleveland Range sales representative for details on how to provide water per Minimum Water Quality in Table 2-3, or how to increase the frequency of maintenance, cleaning, and descaling.

**Table 2-3 Minimum Water Quality Requirements**

<u>Scale Forming Factors</u>	<u>Concentrations must be:</u>
Total Dissolved Solids	less than 60 parts per million
Silica	less than 13 parts per million
Alkalinity	less than 20 parts per million
<u>Corrosion-Causing Factors</u>	<u>Concentrations must be:</u>
Free Chlorine	less than 0.5 parts per million
Chloride	less than 30 parts per million
pH factor	greater than 7.5

## 2) Water Supply System Pressure Requirements

The water supply must provide:

- A minimum dynamic pressure of 35 psi (2.4 kg/cm<sup>2</sup>)
- A maximum static pressure of 60 psi (4.1 kg/cm<sup>2</sup>).

### a. Install Water Supply Lines


The Installer/Owner is responsible for the correct water connection of the Combi. When connecting water supply lines observe the following instructions, and any and all other applicable national, state, and local codes and regulations:

#### 1) Connect the Combi to COLD WATER


- 2) Never connect the Combi to HOT WATER! The Condenser system and the steam generator will not work properly if connected to HOT or WARM water.
- 3) The water supply must have a minimum dynamic (flow) pressure of 35 psi (2.4 kg/cm<sup>2</sup>) and a maximum static pressure of 60-psi (4.1 kg/cm<sup>2</sup>).
- 4) If the static pressure is above 60 psi, a pressure regulator must be used and set at approximately 50 psi. Pressure above 60 psi can damage solenoid valves.
- 5) Combis are supplied with two connection points for incoming water: condenser, and generator or spritzer.
- 6) If water supply meets requirements shown in Table 2-3 then the Single Water Supply Arrangement shown in Figure 2-10 may be used.
  - a) If the Single Water Supply arrangement is used: Supply piping to the Water Distributor (cold water supply splitter) (Order Number SPW), or similar tee fitting must be at least next largest size of pipe than the connection provided at the Combi.
- 7) If water supply fails to meet the requirements shown in table 2-3 then use the Separate Feed Water Supply Arrangement shown in figure 2-11.
- 8) Installation Requirements:
  - a) Apply non-hardening pipe sealant to all the threaded connections **except** the ¾" GHT Female (Garden Hose Thread or National Hose Thread) connections at the Water Connection. GHT or NHT connections do not require pipe sealant.
  - b) Install a manual water shut-off valve (not provided) between main cold water supply line(s) and Combi supply lines.
  - c) The National Sanitation Foundation (NSF) requires installation of a check-valve (or other approved anti-backflow / anti-siphon device) (not provided) in all supply lines in accordance with and as required by local, state, and national health, sanitation and plumbing codes.
  - d) Consult local codes to determine exactly what type of anti-backflow / anti-siphon device is necessary to meet local requirements.

### b. Testing Water Supply Lines

- 1) Check all connections for proper tightness.
- 2) Remove side panels to inspect water connections inside the Combi.
- 3) Open the water supply valves.
- 4) Check all lines and connections for leaks, both inside and outside the COMBI.
- 5) If Startup and Checkout will be performed next, leave side panel off; otherwise, replace the side panel and secure it to the Combi.

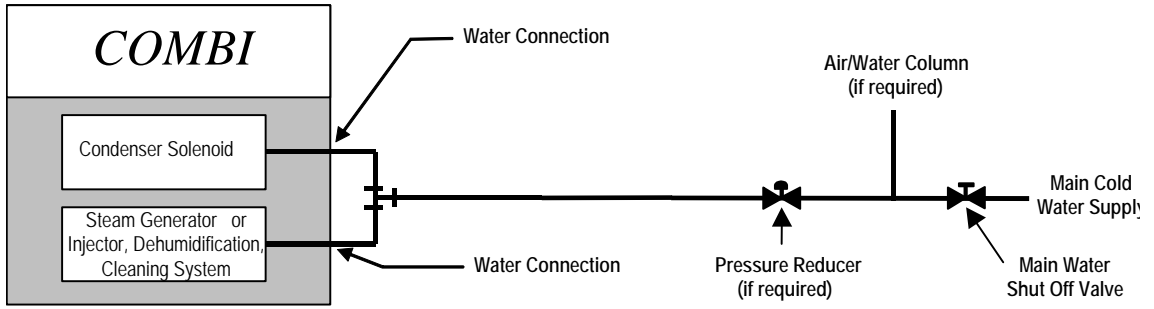

**Figure 2-10 Cleveland Range Single Water Supply Arrangement**

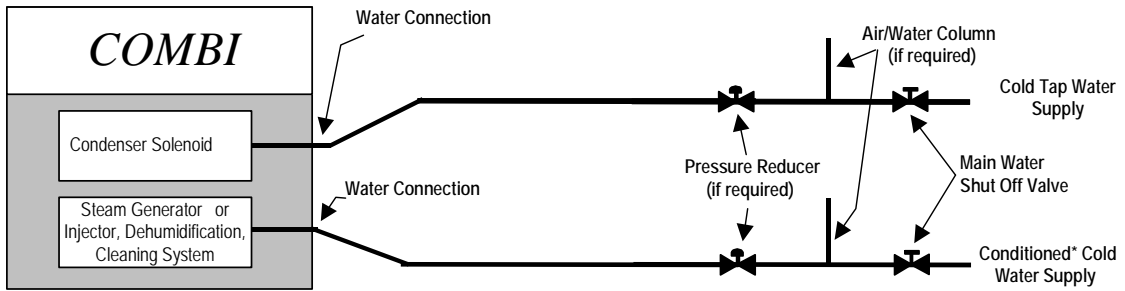

**Figure 2-11 Cleveland Range Separate Water Supply Arrangement**  
 \* "Conditioned" indicates water that has been filtered or treated by a Cleveland Range approved method to meet or exceed the water quality standards of Table 2-3

## DANGER

### **DEATH, INJURY, EQUIPMENT and PROPERTY DAMAGE will result from improper installation of drain outlet lines.**

The following restrictions are critical to the safety of personnel and equipment, and must not be violated under any circumstances:


- Do not connect the Combi drain connection to any drain material that cannot sustain 140° F.
- Do not connect drains from any other equipment to the drain line of the Combi.
- Do not connect the drain outlet extension line directly into a floor drain or a sewer line.
- The drain line must be free air vented, have gravity flow from the Combi, and terminate outside the perimeter of the Combi.
- Improper installation of these lines voids the Combi warranty.

---


#### **4. Install Free Air Vented Drain Lines**

Furnishing and installing drain lines is the responsibility of the Owner/Installer.

- a. The drain lines must be installed in compliance with the Basic Plumbing Code of the Building Officials and Code Administrators International, Inc. (BOCA), and the Food Service Sanitation Manual of the Food and Drug Administration (FDA) and any other applicable national, state, or local codes and regulations.
- b. Do not install the Combi directly over a drain. Steam rising up out of the drain will adversely affect operation, hamper cooling air circulation, and damage electrical and electronic components.
- c. The total length of pipe and number of bend fittings required to reach the open drain determines the pipe size used to extend the drain line to an open drain.
  - 1) If the drain outlet extension requires 6 feet or less of pipe, and no more than two elbows are required, 2 inch pipe and fittings are acceptable.
  - 2) If drain outlet extension requires 6 to 12 feet of pipe, or requires three elbows, then 2½ inch pipe and fittings are required.
  - 3) The drain line must have gravity flow from the Combi drain outlet to floor drain.
  - 4) Do not install a trap in the drain line.
- d. Free air venting requires minimum 1" clearance between the end of the drain line and the top of the floor drain.
- e. Do not connect the Combi drain directly to drains or to the plumbing of any other equipment
- f. Refer to Figure 2-12: Run (do not connect) the COMBI drain from the COMBI as described below:
  - 1) Use Drain Kit, Cleveland Range Part No. C3416730. See Figure 2-12 A
  - 2) Cut the 2" (50 mm) tubing to length.
  - 3) Run 2" tubing of appropriate type to the drain outlet.
  - 4) Leave minimum 1" clearance between end of the drain line and the top of floor drain.

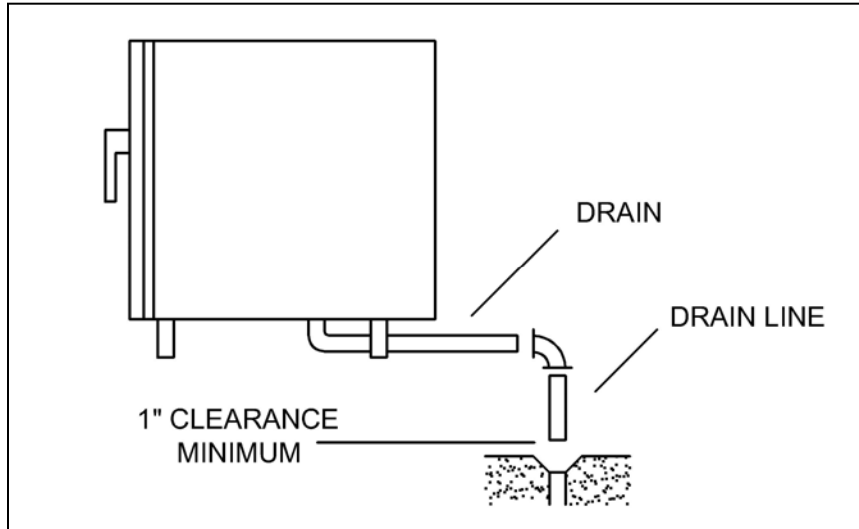

**Figure 2-12  
Typical Drain Layout**

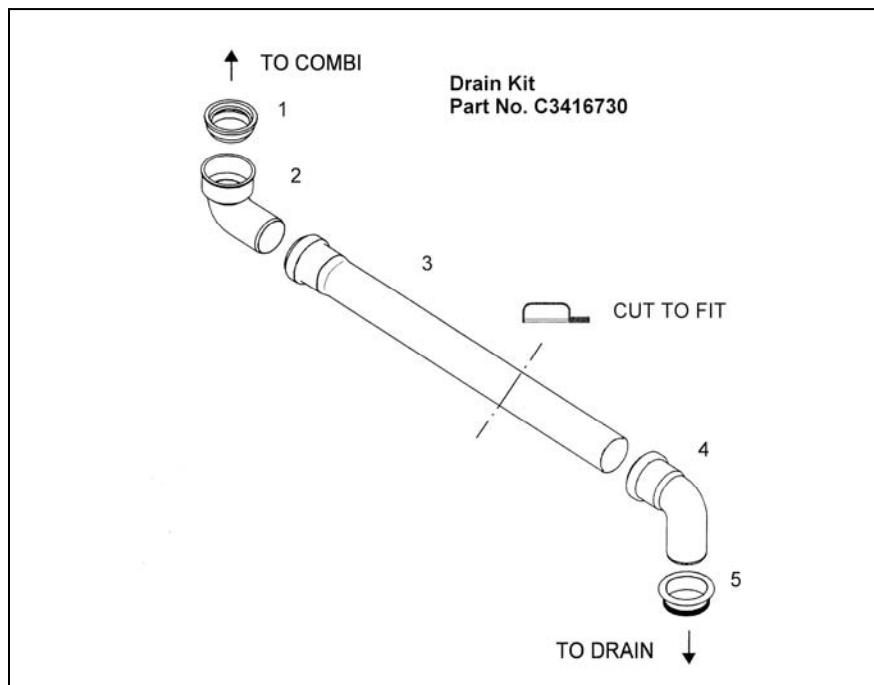

**Figure 2-12 A**

NUMBER, DESCRIPTION, AND PART NUMBER		
1	GASKET, INTERNAL, DRAIN TO ELBOW,	P/N C6015406
2	ELBOW, 87°,	P/N C6015402
3	PIPE, BELL END, 50mm x 500mm (2" x 19.685"),	P/N C6015403
4	ELBOW, DRAIN CONNECTION,	P/N C6015405
5	GASKET, EXTERNAL, ELBOW TO DRAIN PIPE,	P/N C6015243



**DANGER**

**FIRE OR EXPLOSION HAZARD**

**LEAKING GAS CAN CAUSE FIRE OR EXPLOSION. INJURY, DEATH, OR PROPERTY DAMAGE WILL RESULT.**

If the installer smells gas, or suspects there is a gas leak, immediately refer to the posted gas leak instructions. The posted instructions are provided by the local gas supplier, and supersede any other instructions.

Observe the following precautions in addition to the posted instructions:

- Do not light or start any appliance.
- Do not touch any electrical switch.
- Do not use any phone in the building.
- Immediately call the gas supplier from a phone away from the building. Follow the gas supplier's instructions.
- If the gas supplier cannot be reached, call the fire department.

---

**5. Gas Supply**

**a. Gas Supply Requirements**

- 1) Make sure gas supply type matches type of gas shown on rating plate
- 2) Make sure that gas supply pressure does not exceed 14" water column (1/2 psi), and falls within acceptable gas pressure range shown below:
  - a) Natural gas pressure must be between 5½" – 14" water column
  - b) Propane gas pressure must be between 11" – 14" water column


**b. Install Gas Supply Lines**

Installer / owner is responsible for furnishing and installing gas supply lines, valves, regulators, and accessories.

When installing gas supply lines and accessories, observe the following:

- 1). The installation must conform with local codes, or in absence of local codes, with National Fuel Gas Code, ANSI Z223.1 / NFPA 54 (or latest edition), or Natural Gas and Propane Installation Code, CSA B1 49.1, and any other applicable national, state, or local codes and regulations.
- 2). **GAS SUPPLY PRESSURE TO THE COMBI MUST NEVER EXCEED 14" WATER COLUMN (½ psi).** If the gas supply pressure exceeds 14" water column; a pressure regulator must be installed in gas supply plumbing to reduce pressure to the Combi.
- 3). Refer to Figure 2-18 for the recommended layout of the gas supply lines.
- 4). The ¾" NPT gas inlet is on the bottom of the Combi.
- 5). Install main manual shut off valve between gas supply and the Combi. See Figure 2-13.
- 6). This valve is the Main Manual Gas Valve.
- 7). Install sediment trap (drip leg) in gas supply line. See Figure 2-13.
- 8). Use a pipe sealant resistant to LP gas.

Figure 2-13  
Gas Supply Line Layout

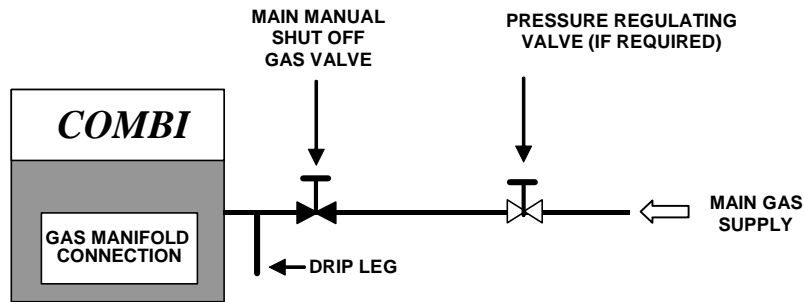

### c. Test Gas Supply Lines

#### 1). Leak Test Gas Supply

- a) Before turning on gas to the Combi or after any service to gas supply:
  - (1) Test all pipe joints for leaks with soap and water solution.
  - (2) All leaks must be corrected before attempting to operate the Combi.

#### 2). Pressure Testing the Gas Supply Lines

If any pressure testing is required; the Combi must be isolated from the gas supply system during any pressure testing as follows:

- a) **HIGH PRESSURE TESTING:** The Combi and its main manual shut-off valve must be **disconnected** from the gas supply piping system during any pressure testing of that system at test pressures in excess of 14" Water Column (1/2 psi or 3.45kPa). Leak test all joints and fittings with a soap and water solution after reconnecting gas supply
- b) **LOW PRESSURE TESTING:** The COMBI must be **isolated** from the gas supply piping system by closing its main manual shut-off valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 14" water column (1/2 psi or 3.45kPa). Leak test all joints and fittings with a soap and water solution after opening the main manual shut-off valve.

## 6. Exhaust Hood Requirements

- a. Combi gas models **MUST** be installed under an exhaust hood.
- b. Combi gas models equipped with the optional Flue Diverter (flue deflector) **MUST** be installed under an exhaust hood.

Combi Models and Flue Diverter Part Numbers							
Model	OGB-6.10 OGS-6.10	OGB-6.20 OGS-6.20	OGB-10.10 OGS-10.10	OGB-10.20 OGS-10.20	OGB-12.20 OGS-12.20	OGB-20.10 OGS-20.10	OGB-20.20 OGS-20.20
P/N	C2616551	C2616564	C2616551	C2616567	C2616567	C2616571	C2616567

- c. The exhaust hood must extend over the gas flue opening and meet the following requirements:
  - 1) Combi gas models must be vented in accordance with all local, state and national codes for venting gas fired appliances.
  - 2) The exhaust hood must be sized for the cumulative ventilation requirements of all the gas-fired appliances in the area under the hood, including the Combi.
  - 3) If an existing hood cannot be used, a new one must be constructed over the Combi.

Model Number, BTU/HR, and Height, Depth, and Width in inches for calculating hood dimensions and ventilation capacity requirements.							
Model	OGB-6.10 OGS-6.10	OGB-6.20 OGS-6.20	OGB-10.10 OGS-10.10	OGB-10.20 OGS-10.20	OGB-12.20 OGS-12.20	OGB-20.10 OGS-20.10	OGB-20.20 OGS-20.20
<b>BTU/HR</b>	<b>41,000</b>	<b>68,000</b>	<b>68,000</b>	<b>109,000</b>	<b>136,000</b>	<b>136,000</b>	<b>239,000</b>
<b>Height</b>	<b>34"</b>	<b>36"</b>	<b>44"</b>	<b>44"</b>	<b>56"</b>	<b>77"</b>	<b>77"</b>
<b>Depth</b>	<b>32"</b>	<b>41"</b>	<b>32"</b>	<b>41"</b>	<b>42"</b>	<b>34"</b>	<b>42"</b>
<b>Width</b>	<b>37"</b>	<b>48"</b>	<b>37"</b>	<b>48"</b>	<b>49"</b>	<b>38"</b>	<b>49"</b>

## 7. Combustible Air Supply

- a. Keep all air intake vents clear, clean, and free of obstruction.
- b. Observe all applicable codes for ventilation and combustion supply air.



## 8. Moving a Combi to its Operating Location

- a. Transport the Combi on a pallet.
- b. Keep the Combi UPRIGHT.
- c. The packing list is under the top of the packing carton (1 on Fig. 1).
- d. Remove all cartons, packing material, documents, shelves, loading trolley, etc. from the oven chamber.
- e. Remove the Combi from the pallet.
  - 1) Note the weight of the units in Table 2-1.
  - 2) **Be sure the lifting forks of a forklift or low lift truck are in the correct position before picking up the Combi. See Figure 2 and Figure 3.**
  - 3) To lift units with a forklift, low lift truck, or hand truck: place wooden spacers between the feet of the Combi (Fig. 3).
  - 4) Stay to the right of the Drain (A) and the Overflow (B) on Figure 3. See Table 2-2.
  - 5) **Keep the Combi level! Do not tip!**

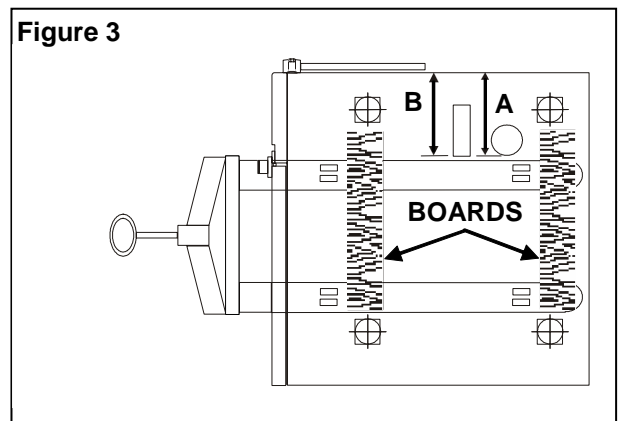
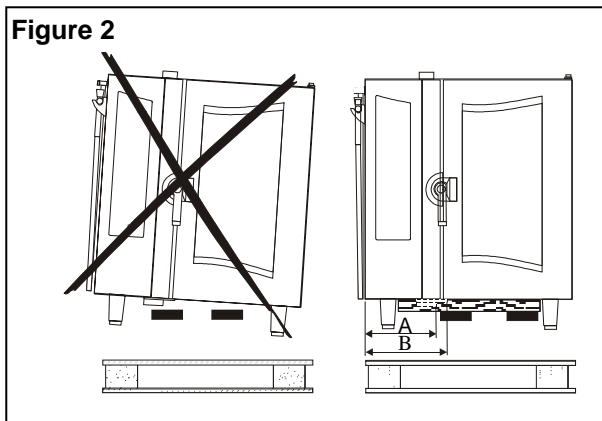
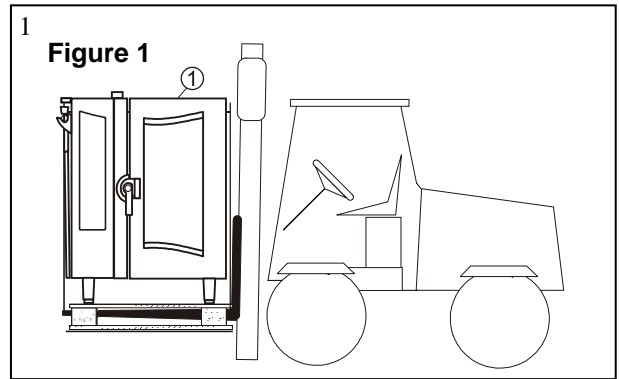


TABLE 2-2 B AND A FROM HAND SHOWER SIDE			
STEAM GENERATOR MODEL	INJECTOR MODEL	DIMENSION B FROM HAND SHOWER SIDE IN INCHES	DIMENSION A FROM HAND SHOWER SIDE IN INCHES
OGB-6.10	OGS-6.10	13 5/16	11 1/4
OGB-6.20	OGS-6.20	14 3/4	12 3/4
OGB-10.10	OGS-10.10	13 5/16	11 1/4
OGB-10.20	OGS-10.20	14 3/4	12 3/4
OGB-12.20	OGS-12.20	14 3/4	12 3/4
OGB-20.10	OGS-20.10	13 5/16	11 1/4
OGB-20.20	OGS-20.20	14 3/4	12 3/4

---

## 9. For ALL Combis

 **WARNING****Out-of-level Combis can TIP OVER!**

Do not operate, or attempt to operate an out-of-level Combi:  
Tipping over and/or other catastrophic failure can result.  
Combis must be level front-to-back and side-to-side.  
Operating an out-of-level Combi voids the Warranty.


- a. Keep the vents on the bottom and top of the Combi clear, clean, and free of obstruction.
- b. The floor where the loading trolley rolls must be level and even.
- c. Level the floor if needed. (Fig. 7).
- d. The trolley must stand level in the Combi.
- e. A roll-in ramp, (not provided), may be used. Maximum angle of the roll-in ramp is 4 degrees (Fig. 8).
- f. If there is a drain grid in front of the Combi, place or affix flat material on the drain grid so the trolley can roll smoothly over it (Fig. 7).
- g. Do not store anything on top of a Combi.
- h. **Required Clearances:** Rear - 2", Left Side - 4". Right Side 2 1/2"
  - 1) Allow for sufficient distance if a "high heat source" (i.e. Broiler) is located next to the unit
  - 2) Allow for sufficient clearance on left side for service access (contact the factory service department for recommendations)
  - 3) Installation must comply with all local fire and health codes.
- i. Keep the vents on the top and bottom of the Combi clear, clean, and free of obstruction.
- j. Level the Combi from the bottom: Use the height adjustable legs of the Combi and a level to so the Combi is level front-to-back and side-to-side (Fig. 6).

---



## 10. For Stand Mounted, Stacked, and Caster Equipped Combis

- a. Follow the separate instructions included with the Stand, Stacking Kit, or Caster Kit.
- b. Use only genuine Convotherm by Cleveland Stacking Kits, Caster Kits, and replacement parts.
- c. Use of Stands, Stacking Kits, Caster Kits, and replacement parts other than genuine Convotherm by Cleveland Stands, Stacking Kits, and Caster Kits can result in injury and / or catastrophic equipment failure.
- d. Use of Stands, Stacking Kits, Caster Kits, and replacement parts other than genuine Convotherm by Cleveland Stands, Stacking Kits, and Caster Kits will void the Warranty.

**Figure 4**

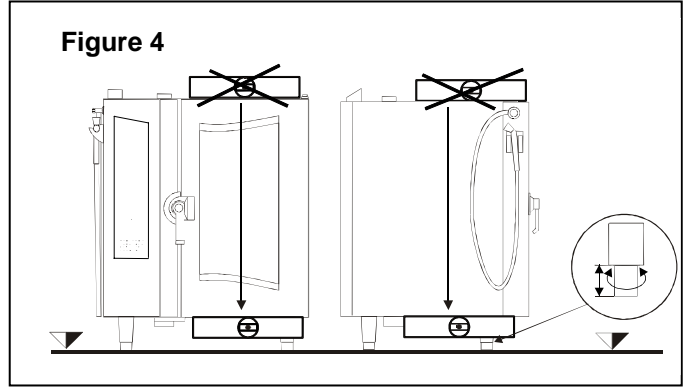

**Figure 5**

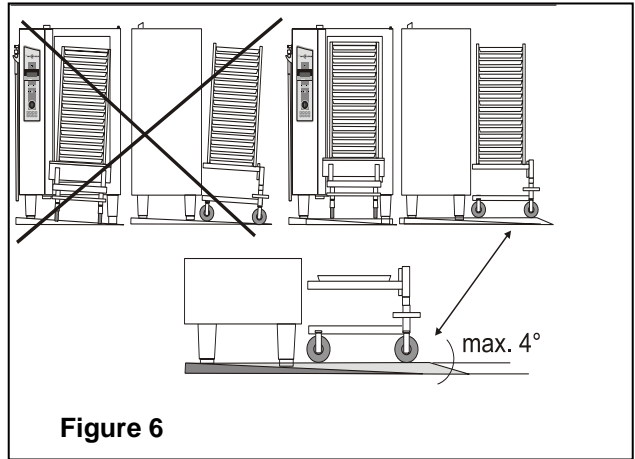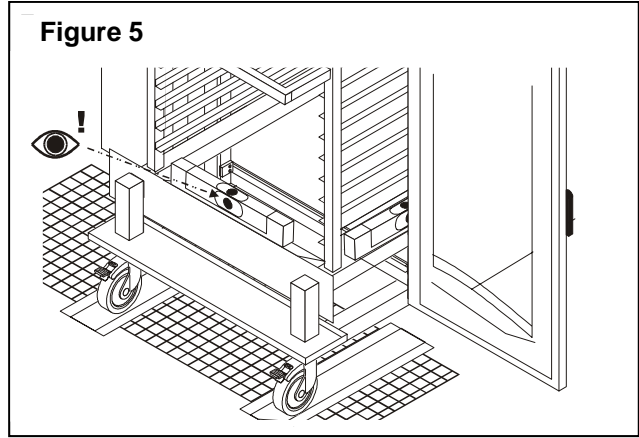

**Figure 6**

---

**E. CHECKOUT and STARTUP**

The Checkout and Startup procedure prepares a recently installed or repaired COMBI for operation. The procedures check proper electrical, gas, water, and drain connections to the COMBI, and verify basic COMBI operation.

**Table 2-5 Installation Check List**

TASK	REFERENCE Page No.	COMPLETED
Preparation		
Check operating location clearances	9	_____
Test supply water quality	11	_____
Verify Electric Power Requirements.	10	_____
Verify Gas Supply Requirements	16	_____
Verify Exhaust Hood Requirements	18	_____
Installation		
Check Exhaust Hood	18	_____
Check electrical line connection	10	_____
Check water supply connection	11	_____
Leak Test water supply lines	11	_____
Check Gas Supply Connection	16	_____
Leak Test Gas Supply Connection	16	_____
Verify Combi is level	20	_____
Check drain line connection	14	_____
Perform Burner Ignition Test	23	_____
Perform Startup Test	23	_____

**Notes:**

## CHAPTER 3 STARTUP PROCEDURE AND OPERATIONAL TESTS

---

### DANGER

#### **DO NOT TRY TO LIGHT BURNERS WITH A FLAME.**

The Combi has an electronic ignition system, which automatically lights burners, senses the flame, and controls gas flow. This provides precise burner control, safe ignition, and safe shutdown.

DEATH, INJURY, OR EQUIPMENT DAMAGE may result from an improperly adjusted gas control and ignition system. Do not alter any adjustments

If adjustment is required, contact a Cleveland Range authorized service center. Cleveland Range is in no way responsible for the operation or safety of this equipment if the controller, valve, igniter probe or any other gas system component is adjusted by anyone other than a qualified Cleveland Range authorized service representative

### DANGER

Death, severe electrical shock, or equipment damage can result from touching any component inside a COMBI when the main external power switch is in the ON position.

Use extreme caution during testing with the access cover removed.

### WARNING

When checking inside the Combi: always open the door slowly and stand to the hinge side and away from the Combi.

### WARNING

Water leaking from the door gasket can be a sign of a blocked drain. If the drain is blocked, hot water can accumulate inside the compartment and spill out when the door is opened.

## DANGER

**Do NOT attempt to operate a Combi during a power failure!**


**In the event of a power failure: turn OFF the Main External Power Switch and the Control Power Service Disconnect Switch.**

**If the power failure is prolonged: turn OFF the gas and water supplies.**


**When power is restored: restart a Combi with the Startup Procedure.**

### Lighting and Shutdown Procedures

#### **Startup Procedure**

- a. Turn ON the exhaust hood.
- b. Turn ON the water supply valve(s).
- c. Turn ON the gas supply valve(s).
- d. Turn ON the Main External Power Switch.
- e. Turn ON the Control Panel Service Disconnect Switch (Fig. 6-2).
- f. Turn ON the Combi with the ON / OFF key .

#### **Shutdown Procedure**

- 1) Turn OFF the Combi with the ON / OFF key .
- 2) Turn OFF the Control Panel Service Disconnect Switch (Fig. 6-2).
- 3) Turn OFF the Main External Power Switch.
- 4) Turn OFF the gas supply valve(s).
- 5) Turn OFF the water supply valve(s).
- 6) Turn OFF the exhaust hood.

---


## e. STARTUP PROCEDURE

**Note:** If the Combi has been delivered when the outside temperature is below 40° F then wait for the Combi to warm up to room temperature (about 72° F) before operating.

**Note:** If the Combi has been delivered when the outside temperature is below 32° F then the cooking compartment high limit safety thermostat will be tripped. The cooking compartment high limit safety thermostat must be reset a qualified Cleveland Range authorized service technician. Wait for the Combi to warm up to room temperature (about 72°F) before operating.

**Note:** If the Combi has been delivered when the outside temperature is below 23° F then the steam generator high limit safety thermostat will be tripped. The steam generator high limit safety thermostat must be reset by a qualified Cleveland Range authorized service technician. Wait for the Combi to warm up to room temperature (about 72°F) before operating.

**Note:** Remove the plastic cover from the tip of the Temperature Probe before starting the Combi





1. After initial installation, check:
  - a. Suction Plate (Hinged Fan Guard) for both swing and latch action.
  - b. Hinged Removable Pan Racks for remove, replace, and latch action.
  - c. Hanging Shelf Rack for correct installation.
  - d. Loading Trolley for proper roll in and out action (floor models only).
  - e. Pre-heat Bridge for correct fit (floor models only).
  - f. Descaling port cap is on and properly tightened.
  - g. Test Water Supply Lines
    - 1) Check all connections for proper tightness.
    - 2) Remove the side panel of the Combi to inspect water connections inside the Combi.
    - 3) Open the water supply valves.
    - 4) Check all lines and connections for leaks, both inside and outside the Combi.
    - 5) If Startup and Checkout will be performed next, leave side panel off; otherwise, replace the side panel and secure it to the Combi.
  - h. Test Gas Supply Lines
    - 1) Check all connections for proper tightness.
    - 2) Remove the side panel of the Combi to inspect water connections inside the Combi.
    - 3) Open the gas supply valve.
    - 4) Check all lines and connections for leaks with a soap and water solution.
    - 5) If Startup and Checkout will be performed next, leave side panel off; otherwise, replace the side panel and secure it to the Combi.
2. Turn ON the exhaust hood.
3. Turn ON the water supply valve(s).
4. Turn ON the gas supply valve(s).
5. Turn ON the Main External Power Switch.
6. Turn ON the Control Panel Service Disconnect Switch (Fig. 6-2).
7. Turn ON the Combi with the ON / OFF key .

8. SET CONTROL PANEL OPTIONS.






a. Start Setup Procedure

- 1) Press Smart Key 
- 2) Use the Selector Dial  to select Setup .
- 3) Confirm: Press Smart Key, 
- 4) Answer "Yes" with Smart Key .







b. Set Language

- 1) Start Setup Procedure (Above).
- 2) Select Language .
- 3) Confirm with Smart Key .
- 4) Select desired language with the Selector Dial .
- 5) Confirm with Smart Key .








c. Set Signal Tone

- 1) Start Setup Procedure (Above).
- 2) Select Signal Tone  with the Selector Dial .
- 3) Confirm with Smart Key .
- 4) Display will show available signal tones.
- 5) Select a signal tone with the Selector Dial .
- 6) Pausing on a tone icon will cause it to sound.
- 7) Select a signal tone by pausing on it.
- 8) Confirm with Smart Key .

d. Set Volume









- 1) Start Setup Procedure (Above).
- 2) Select Volume  (speaker and slider icon) with the Selector Dial .
- 3) Confirm with Smart Key .
- 4) Display will show volume options and an alert tone will sound.
- 5) Set Volume  with the Selector Dial .
- 6) Confirm with Smart Key .

e. Set Time





- 1) Start Setup Procedure (Above).
- 2) Select Time  (clock icon) with the Selector Dial .
- 3) Confirm with Smart Key .
- 4) Select time format desired with the Selector Dial .
- 5) Use the Paging / Scrolling keys  (Left and Right Arrows) to switch between hours and minutes.
- 6) Set the time with the Selector Dial .
- 7) Confirm with Smart Key .








f. Set Date


- 1) Start Setup Procedure (Above).
- 2) Select Date  with the Selector Dial .
- 3) Confirm with Smart Key .
- 4) Select date format desired with the Selector Dial .
- 5) Use the Paging / Scrolling keys   to switch between day, month, and year.
- 6) Set the date with the Selector Dial .
- 7) Confirm with Smart Key .




g. Select Temperature in C or F





- 1) Start Setup Procedure (Above).
- 2) Select  $^{\circ}\text{C}$ / $^{\circ}\text{F}$  with the Selector Dial .
- 3) Confirm with Smart Key .
- 4) Use the Selector Dial  to select C or F.
- 5) Confirm with Smart Key .

h. Network Address

- 1) (Required for use of PC Control, PC-HACCP, and Convotherm Service System.)
- 2) Start Setup Procedure (Above).
- 3) Use the Selector Dial  to select the Network Address  (three computers icon).
- 4) Confirm with Smart Key .
- 5) The current address will be displayed.
- 6) Use the Selector Dial  to select the desired network address (1-99).
- 7) Confirm with Smart Key .

i.  Program Protection








- 1) Compatible, connected energy optimization equipment is required to use this option.
- 2) Connecting the unit to an energy optimization unit during power peaks in the kitchen can cause the energy supply from the optimization unit to be interrupted during critical phases.
- 3) The program protection function automatically prevents program in progress from being interrupted.
  - a) Use the energy optimization lock if cooking time is crucial to the quality of a dish, including sensitive foods, short cooking times, or the regeneration of plates.
  - b) Individual steps in a recipe can be protected by the program protection function. The energy optimization can be set so that the energy optimization unit will not intervene during a critical phase but may during a less sensitive cooking step.
- 4) The energy optimization unit has no access to the Combi. Instead, it accesses other connected devices.
- 5) To set Program Protection
  - a) Press Smart Key .
  - b) Various options will appear in the display.
  - c) Use the Selector Dial  to select Program Protection .

- d) Confirm by pressing Smart Key 
- e) Confirm "Yes" with Smart Key 
- f) The Program Protection icon  appears.
- g) The display shows the nominal settings for the selected program, cooking plan, or recipe.
- h) Press the Start/Stop  key.
- i) The Combi will start with Program Protection activated.
- j) The energy optimization unit cannot intervene during active operation of the Combi.




---

## B. TEST PROCEDURES








### 1. Function Test














- a. SELECT the Superheated Steam cooking program:
- b. Press the Combi mode key 
- c. Press the Temperature key 
- d. Turn the Selector Dial  to set the temperature to 150°C / 302°F.
- e. Press the Time key 
- f. Set the time (10 minutes) with the Selector Dial .
- g. Press the Start / Stop key .
- h. The Program will start and the display will show the nominal oven temperature and time remaining.
- i. STEAM GENERATOR Models: The heating element for the oven heat exchanger and the heating element for the steam generator turn on, and the program runs.
- j. ALL MODELS: the program in step 1 will run.
- k. The Signal Tone will sound and program will end when set time has elapsed.
- l. Press the Start / Stop key  or carefully open the door.

### 2. EMPTY and RINSE the Steam Generator:

- a. Press Smart Key 
- b. Use the Selector Dial to select "Manual steam generator rinse" 
- c. Confirm with Smart Key 
- d. Steam generator will rinse.
- e. Total time 8 – 12 minutes, depending on model.

### 3. RUN a Semi-Automatic Cleaning Cycle:

- a. Close the door.
- b. Turn ON the Combi with the ON / OFF key 
- c. Bypass (answer "No") Automatic Steam Generator Rinse, if necessary.
- d. Press Smart Key 
- e. Select Cleaning  (brush icon) with the Selector Dial .
- f. Confirm selection with Smart Key 
- g. Answer prompt "Yes" with Smart Key 
- h. The brush icon  lights and the nominal values for the program are displayed.

- i. Press Smart Key  to start the cleaning cycle.
  - j. Step 1 of 4 is Hot Air at 70°C for 10 minutes.
  - k. Signal Tone sounds and display prompts “CONVOCLEAN.” Open the door. (In ordinary use, the operator sprays CONVOClean oven cleaner into the oven.)
  - l. Close the door. Do NOT press the Start / Stop key . The cleaning cycle starts step 2 of 4 automatically.
  - m. Step 2 of 4 is Steam at 86°F (30°C) for 9 minutes.
  - n. Signal Tone sounds. Open the door. (In ordinary use, the operator would clean behind the Suction Plate.)
  - o. Close the door. Do NOT press the Start / Stop key . The cleaning cycle starts step 3 / 4 automatically.
  - p. Step 3 of 4 is Steam at 86°F (30°C) for 1 minute. No action is required.
  - q. Step 4 of 4 is Steam at 212°F (100°C) for 10 minutes.
  - r. Signal Tone sounds. Turn OFF the unit with the ON / OFF key .
  - s. (In ordinary use the operator would carefully open the door and rinse the Combi with the Hand Shower)
  - t. Leave door open slightly
4. For CONVOClean System equipped Combis:
- a. The oven chamber must be cold before starting this process.
  - b. Before starting, remove large pieces food or cooking residue from the oven chamber. This will help prevent the drain from becoming blocked.
  - c. Check the level of CONVOTHERM by Cleveland oven cleaner and nozzle rinsing fluid. The containers **must** be full and the suction pipes **must** be located in the fluid.
  - d. Press Smart Key . Various options will appear in the display.
  - e. Use the Selector Dial  to select “CONVOClean system” .
  - f. Confirm by pressing Smart Key .
  - g. Select the level of cleaning
    - 1) light soiling
    - 2) medium soiling
    - 3) heavy soiling
    - 4) heavy soiling with Shine+
  - h. PRESS the Temperature key  and select cleaning level with the Selector Dial .
  - i. Press Smart Key .
  - j. The display reads “Food inside oven?” If the oven is empty then answer “No.”
  - k. Confirm by pressing Smart Key .
  - l. The display reads “Start auto-cleaning?” Answer “Yes” or “No” as desired.
  - m. Confirm by pressing Smart Key .
  - n. The program will start the CONVOClean system automatically.
    - 1) Check the supply of CONVOClean and CONVOCare.
    - 2) Make sure the connections are correct.
    - 3) Use only CONVOClean, CONVOClean *forte*, and CONVOCare for cleaning.
    - 4) Use only Cleveland Range Dissolve for descaling the steam generator.

5. TEST Temperature Probe:
  - a. Remove plastic tip protector from probe.
  - b. Replace probe in its hanger.
  - c. Set Temperature to 350° F in any cooking mode.
  - d. Set Probe Temperature to 210° F.
  - e. Begin cooking program.
  - f. Display shows set (nominal) temperature on the left and probe temperature on the right.
  - g. Press Temperature to display the actual temperature.
  - h. When the actual temperature reaches 210° F the Signal Tone sounds and the Combi turns off.

## CHAPTER 4 TROUBLESHOOTING

---

Convotherm by Cleveland Combi Oven-Steamers are equipped with an automatic error diagnosis system.

If an error occurs, the system will display error codes and a description of the error.

To continue operating, emergency operation is available (see below).

The following tables will help troubleshoot if errors or malfunctions occur while a Combi Oven-Steamer is operating. The tables show possible causes and their remedies.

### WARNING

If the Burner or Electric Heating ON icon  and the Cooking Mode Engaged icon  are lit but the burner or electric heater does not start and the fan does not start then remove the Combi from service.

**Call your qualified Cleveland Range authorized service representative at once.**

### WARNING

**If an error cannot be rectified with the aid of this list, contact your qualified Cleveland Range authorized service representative at once.**

### Error Messages and Remedies

Error	Message on display	Possible cause	Remedy
E01	Not enough water	Water tap closed	Open water tap
		Solenoid valve dirt filter contaminated	Remove and clean filter
		Solenoid valve fault	Call customer service
E02	Connection area temperature too high	Connection area ventilation fault, air supply blocked	Allow Combi to cool, or continue cooking at a lower oven temperature, and call customer service
E03	Fan malfunction	Motor temperature monitor triggered, external failsafe triggered	Call customer service
		Fan motor fault	Call customer service
E04	Connection area fan malfunction	Auxiliary fan fault	Call customer service
E05	no gas	Gas supply interrupted	Open gas tap
E11/E21	Excess temp. in oven/oven sensor failure	Excess oven temperature	Call customer service
		Oven sensor fault	Call customer service
E13/E23	Excess temp. of steam generator/steam gen. sensor failure	Steam generator sensor fault	Call customer service
E15/E25	Excess temp. of condenser / condenser sensor failure	Water tap closed	Open water tap
		Excess temperature in condenser via hot water connection	Connect Combi to cold water, restart
		Solenoid valve dirt filter contaminated	Remove and clean filter
		Solenoid valve fault	Call customer service
		Condenser sensor fault	Call customer service
E22	Core temperature sensor fault	Core temperature sensor fault	Set cooking program with time, call customer service
E24	Bypass sensor failure	Bypass sensor fault	Call customer service
E26	Steam generator safety temp. limiter sensor failure	Safety temp. limiter sensor fault in steam generator	Call customer service
E27	Excess temperature of Steam Generator heater	Steam generator dirtied	Descale steam generator
E29	Ground connection of sensor	Temperature sensor fault	Call customer service
E33	Steam generator heater error	Steam generator heater fault	Call customer service
E34	Steam generator pump error	Steam generator pump fault	Call customer service
E80/E95/E96	ID error / software error / connection fault	Control fault	Call customer service
E82	Working parameter error	Problems during switch between °C / F	Check settings in Cookbook, or check °C/F in Settings
Low agent pressure!	No cleaner pressure	Cleaner canister or nozzle rinsing fluid agent empty	Fill canister
		Pump fault	Call customer service

**These operating irregularities do not have error messages.**

<b>Error</b>	<b>Possible cause</b>	<b>Remedy</b>
Uneven browning	Suction plate not correctly locked	Lock suction plate correctly
	Nominal oven temperature too high	Select lower temperature and increase cooking time
	Not pre-heated	Pre-heat the Combi
	Bypass pipe greasy	Clean bypass
	Incorrect accessories, container	Use suitable accessories
Control elements not illuminated and do not react when switched on	No power connection, external failsafe triggered	Call customer service
Combi does not react to information entered	Software has hung itself up	Hold down the ON/OFF switch for 5 seconds or disconnect Combi for 5 seconds
Combi cannot be switched on or off	ON/OFF has been locked for 3 seconds	Try again after 3 seconds
Oven is not lit inside	Oven light fault	Call customer service
Water sprays from air outlet when door is closed	Steam measuring line blocked	Clean steam measurement line; see "Daily servicing and maintenance"
	Combi drain blocked	Clean outflow
Water sprayed out of steam generator into oven during operation	Automatic rinsing of steam generators has not been carried out for some time, i.e. it is continually deselected	Descale Steam Generator
Water inside the oven	Outflow blocked	Rinse condenser and outflow thoroughly, clean/check own drain system
Water running out of base of Combi	Outflow connection blocked or covered	Remove object
	Outflow blocked	Rinse condenser and outflow thoroughly, clean/check own drain system
Black marks inside oven	Incorrect cleaning agent	Use original CONVOClean forte or new cleaning agents
	Water hardness too high	See Water Quality Recommendations in Warranty
Automatic cleaning (CONVOClean system) gives poor cleaning results	Water pressure too low	Increase pressure at installation location
	Incorrect cleaning agent	Switch to CONVOClean
	Degree of soiling incorrectly set	Select higher cleaning level

## CHAPTER 5

### Emergency Operation

---

To continue to use your Convotherm by Cleveland Combi Oven-Steamer in the case of an error which cannot be solved immediately, an "Emergency Operation" function is available.

This allows you to use at least some of the Combi functions despite a malfunction.




Call customer service immediately!

#### Note:

---

- Cooking times can be longer.
- Monitor the cooking process and the status of the product carefully.

#### A. Operating Instructions for Emergency Operation

1. If the Combi has experienced an error:
  - a. the Signal Tone will sound
  - b. an error number appears in the display, e.g. E01
2. Press the Start/Stop  key to confirm the error.
3. The modes which can be selected will be indicated by flashing.
4. Proceed as normal.
5. Select a program by pressing the corresponding key
  - Note: locked programs will not respond to keys being pressed.
6. Set operating information as described under the individual programs.
7. Depending on the error, a limited range of functions (e.g. Temperature) will be available.
8. To start the Combi in Emergency Operation, press the Start/Stop  key.
9. When the cooking time has elapsed, press the Start/Stop  key.
10. When the error has been rectified, the Combi will automatically switch back to normal operation:
  - a. The error number will no longer be displayed,
  - b. The back-lighting / function display of the mode keys will not flash.
  - c. Keys will react to being pressed as normal.



**The oven will operate if these errors occur:**

X: Operation possible --: Operation not possible		1) Cooking time will be much longer, dishes in upper levels will be ready first 2) Injection of water into condenser constantly activated (higher water consumption) 3) Errors E23 and E26 simultaneously, steam generator is not pre-heated									
Error	Message on display	OEB	OGB	OES	OGS	Steaming	Combi Hot Air and Superheated Steam	Hot Air	Retherm	Cook & Hold	Delta-T
E01	Not enough water	X	X	X	X	--	--	up to 356°F	--	X	X
E02	Connection area temp. too high	X	X	X	X	X	up to 284°F	up to 284°F	up to 284°F	up to 284°F	up to 284°F
E03	Fan malfunction	X	X	--	--	up to 212°F (1)	--	--	--	--	--
E04	Connection area fan malfunction	X	X	X	X	X	up to 284°F	up to 284°F	up to 284°F	up to 284°F	up to 284°F
E05	no gas	X	--	X	--	X	X	X	X	X	X
E11	Excess oven temperature	--	--	--	--	--	--	--	--	--	--
E13	Excess temperature of steam generator	X	X	X	X	--	--	X	--	X	X
E15	Excess temperature of condenser	X	X	X	X	--	--	up to 356°F	--	X	X
E21	Oven sensor failure	X	X	--	--	212°F only	--	--	--	--	--
E22	Core temp. sensor fault	X	X	X	X	X	X	X	X	X	X
E23	Steam generator sensor failure	X	X	X	X	X	X	X	X	X	X
E24	Bypass sensor failure	X	X	X	X	up to 210°F	--	X	--	X	X
E25	Condenser sensor failure	X	X	X	X	X (2)	up to 356°F (2)	up to 356°F (2)	up to 356°F (2)	X (2)	X (2)

E26	Steam generator safety temp. limiter sensor failure	X	X	X	X	X	X	X	X	X	X
E23& E26 <sup>(3)</sup>	Steam generator safety temp. limiter and steam generator sensor failure <sup>(3)</sup>	X	X	X	X	X (3)	X (3)	X (3)	--	X (3)	X (3)
E27	Excess temperature Steam generator heater	X	X	X	X	--	--	X	--	X	X
E 29	Error in ground connection	--	--	--	--	--	--	--	--	--	--
E33	Steam generator heater error	X (1)	X (1)	X (2)	X (2)	X – (1) (2)	X – (1) (2)	X	X – (1) (2)	X	X
E34	Steam generator pump error	X	X	X	X	X	X	X	X	X	X
E80	ID error	--	--	--	--	--	--	--	--	--	--
E81	Program memory error	X	X	X	X	X	X	X	X	X	X
E82	Working parameter error	X	X	X	X	X	X	X	X	X	X
E83	Algo. error	X	X	X	X	X	X	X	X	X	X
E89	I2C error	X	X	X	X	X	X	X	X	X	X
E95											
E96											
Low agent pressure!	No cleaner pressure	X	X	X	X	X	X	X	X	X	X