


# 1. FABRICATION FROM 16GA S\*\*\*S

2. POLISH ALL METAL EDGES
3. DEBURR ALL METAL EDGES
4. REMOVE ALL SHARP CORNERS & EDGES

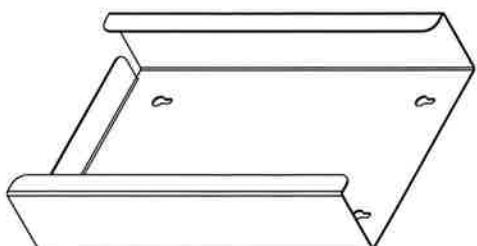

|                                                                                                                                 |         |                    |          |
|---------------------------------------------------------------------------------------------------------------------------------|---------|--------------------|----------|
|  <b>wasserstrom</b><br>N. Wasserstrom & Sons |         | PER VIEW<br>1 OF 1 |          |
| ARV                                                                                                                             | F697.80 | CI                 | 104W2018 |
| 3 GLOVE HOLDER BOX                                                                                                              |         | CUSTOMER           |          |
| TWOCQUADRA-TECH                                                                                                                 |         | 104W2018           |          |