


FRENCH FRY CUTTER

ASSEMBLY INSTRUCTIONS


FFC-250 FFC-375 FFC-500

ASSEMBLY


1) Attach handle to base with screws and secure with washer and hex nuts.

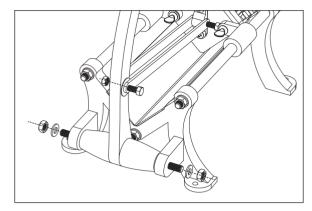


2) Attach push block in the center of base and secure with thumb screws.

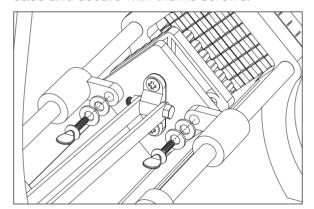


3) Attach cutter block to base and secure with washers and wing nuts.

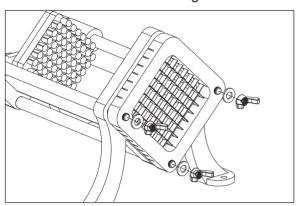

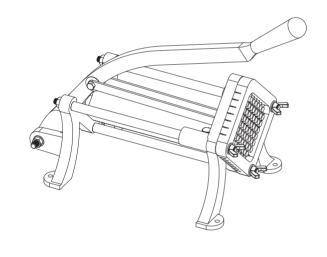

OPTIONAL PARTS




CUT BLOCK FFC-250B



PUSH BLOCK FFC-250K






CUT BLOCK FFC-375B



PUSH BLOCK FFC-375K

1/2" CUT




CUT BLOCK FFC-500B



PUSH BLOCK FFC-500K

6 WEDGE




CUT BLOCK FFC-6B



PUSH BLOCK FFC-6K

8 WEDGE



CUT BLOCK FFC-8B



PUSH BLOCK FFC-8K