



CATALOG OF REPLACEMENT PARTS




MODEL LT1 DISHWASHER

ML-104239


Table of Contents

3	CHEMICAL DETECTION BOX
5	CONTROL BOX
7	ELECTRICAL COMPONENTS
9	DOOR UNIT
11	WASH MOTOR & PUMP (PREVIOUS CONSTRUCTION)
13	WASH MOTOR & PUMP (CURRENT CONSTRUCTION STARTING SERIAL NO. 23-1076-369)
15	INSIDE WASH & RINSE PIPING
17	FILL PIPING (PREVIOUS CONSTRUCTION)
19	FILL PIPING (CURRENT CONSTRUCTION)
21	DRAIN (PRIOR TO S.N. 12-1021-852)
23	DRAIN (FIRST S.N. 12-1021-852)
24	TRACK & RACKS

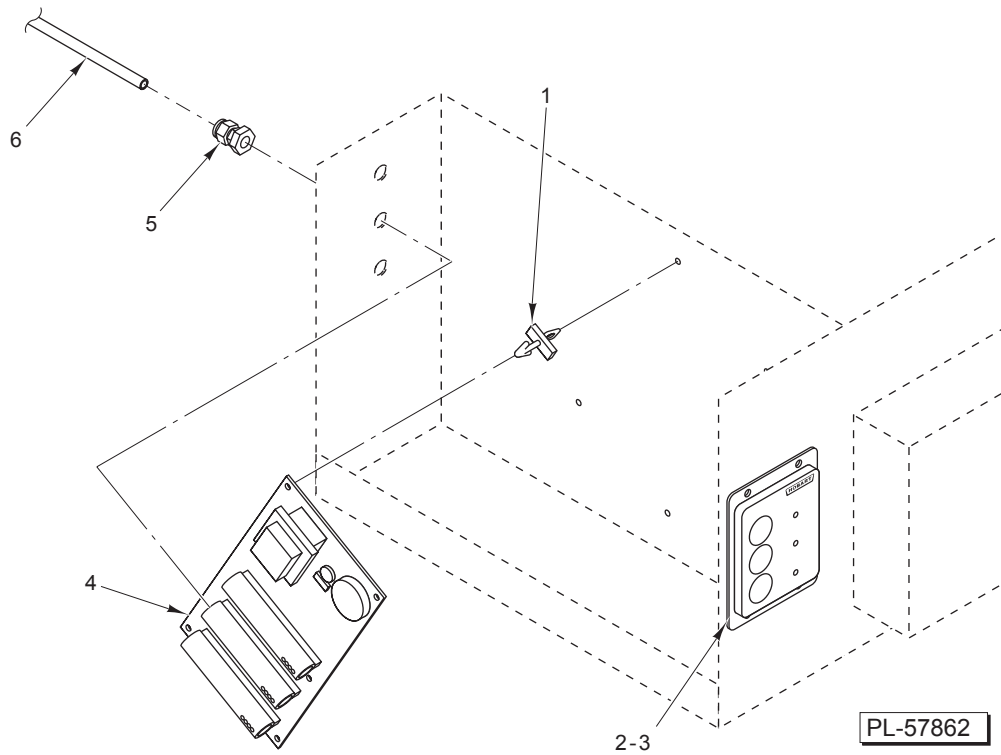

CHEMICAL DETECTION BOX

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-57862			
1	00-114247-00001	Rivet – Drive	1
2	00-893922	Switch – Membrane (Chemical Detection)	1
3	00-918108	Border – Keypad Protector	1
4	00-893766	Board Assy. – Chemical Module	1
5	FE-025-96	Relief – Strain Electrical	3
6	00-185105-00023	Tubing	3
	00-918068-00001	Chemical Detection Box Assy.	1
	00-918053	Potentiometer	1

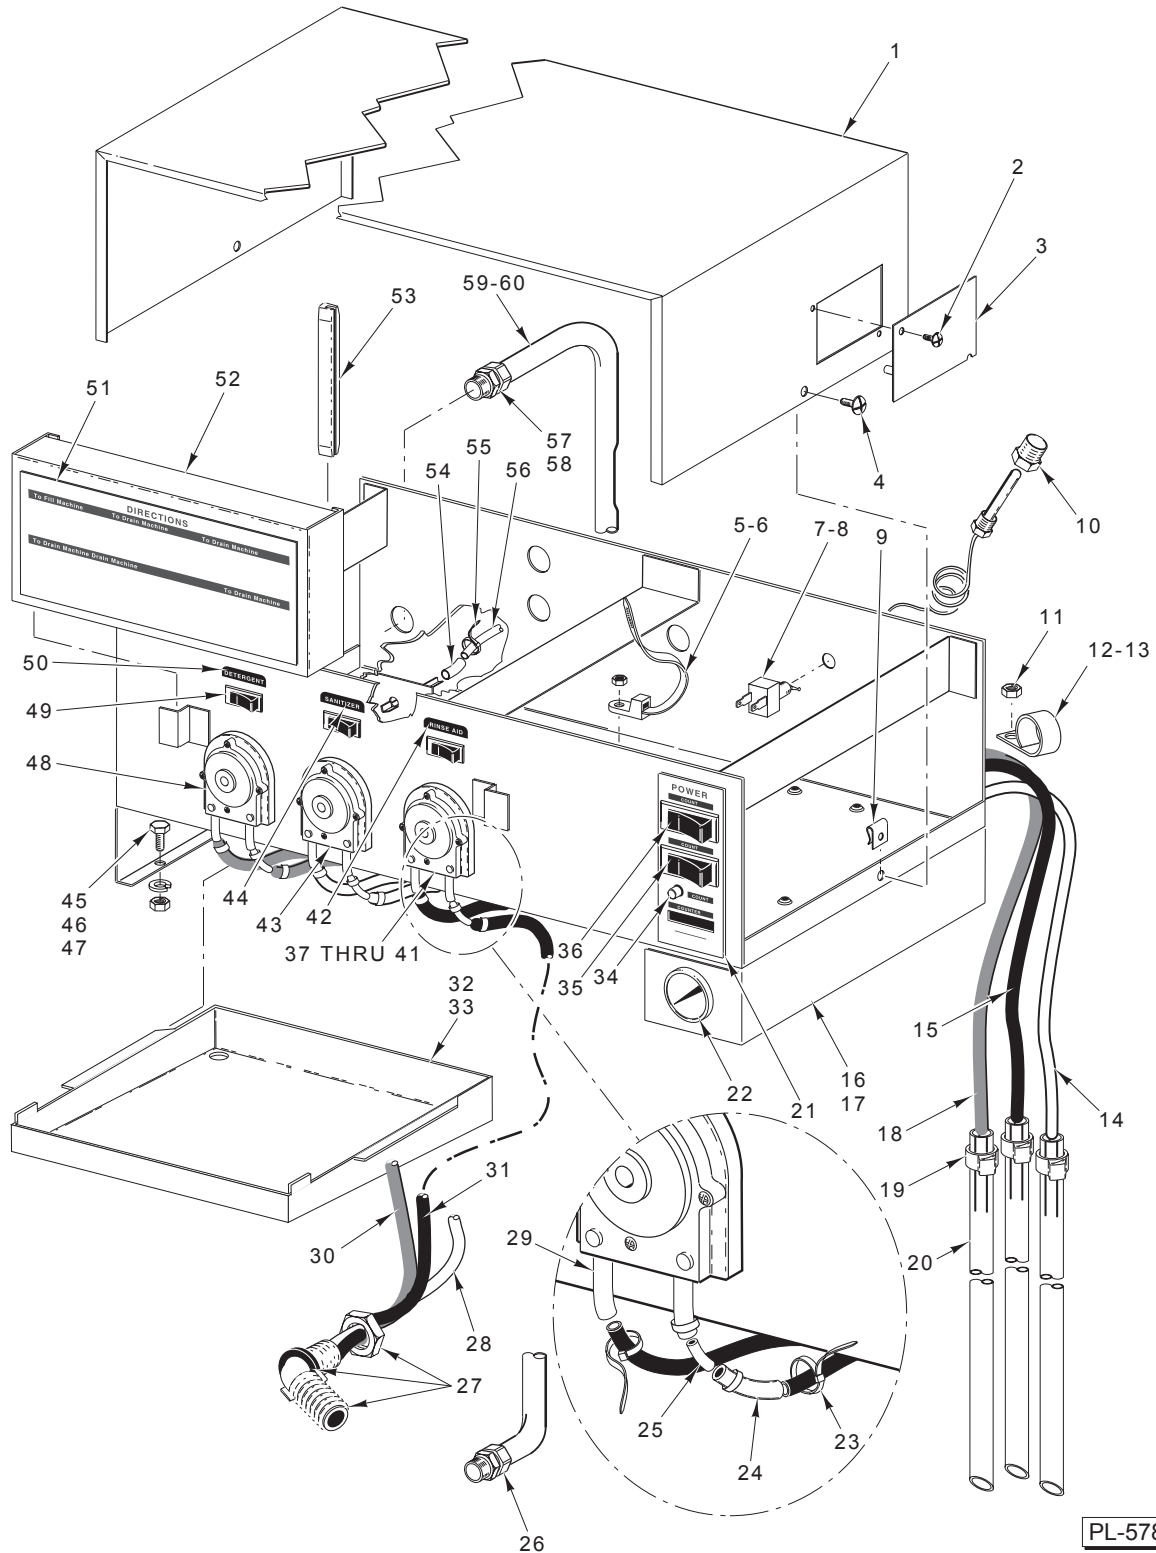


PL-57863

CONTROL BOX

CONTROL BOX

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-57863			
1	00-436195	Cover – Control Box (Give Elec. Spec., Mach. Model, & Serial No.)	1
2	SD-032-31	Self-Tapping Screw 8-18 x 3/8 Phil Pan Hd., Type B	2
3	00-436196-00001	Cover – Access	1
4	SC-053-05	Mach. Screw 10-24 x 3/8 Slotted Truss Hd.	2
5	00-328678	Wire Tie	1
6	NS-031-15	Stop Nut 10-24 Hex (SST)	1
7	00-087711-180-1	Switch – Toggle (Delime)	1
8	00-186297	Label – DELIME/NORMAL	1
9	00-074348	Speed Nut 10-24	2
10	00-107218	Coupling – Thermometer Bulb	1
11	NS-031-15	Stop Nut 10-24 Hex (SST)	2
12	00-078752-00001	Retainer (7/16 In.)	1
13	00-078752-00002	Retainer (3/4 In.)	1
14	00-185105-00004	Tube – Clear (Supply to Pump) (1/4 O.D. x 144 Lg.)	1
15	00-185105-00006	Tube – Blue (Supply to Pump) (1/4 O.D. x 144 Lg.)	1
16	00-436194	Control Box (Mach. Built Prior to 11/9/04)	1
17	00-918009	Control Box (Mach. Built After 11/9/04)	1
18	00-185105-00002	Tube – Red (Supply to Pump) (1/4 O.D. x 144 Lg.)	1
19	00-185111-00002	Clamp – Hose	3
20	00-185112	Stand Pipe 20 1/2 Lg.	3
21	00-436201	Label – Controls	1
22	00-437041-00003	Thermometer	1
23	00-113703	Cable Tie (Pump Connections)	12
24	00-436293	Tube – Clear	3
25	00-185105-00015	Tube – Clear (1/4 O.D. x 1 1/2 Lg.)	3
26	FE-025-27	Coupling – Conduit (Use on Lower End Item 59)	1
27	00-185104	Elbow – Feeder Tubes (Incls. Nut & Gasket)	1
28	00-185105-00010	Tube – Clear (Pump to Tank) (1/4 O.D. x 60 Lg.)	1
29	00-328252	Tubing – Chemical Pump (3/8 O.D.)	1
30	00-185105-00009	Tube – Red (Pump to Tank) (1/4 O.D. x 60 Lg.)	1
31	00-185105-00011	Tube – Blue (Pump to Tank) (1/4 O.D. x 60 Lg.)	1
32	00-436197	Tray – Drip (Mach. Built Prior to 11/9/04)	1
33	00-918084	Tray – Drip (Mach. Built After 11/9/04)	1
34	00-436288	Kit – Pilot Light	1
35	00-087711-193-2	Switch – Rocker (Fill/Drain)	1
36	00-087711-192-2	Switch – Rocker (Power On/Off)	1
37	00-329871	Pump, Chemical Assy.	3
38	SC-116-20	Mach. Screw 6-32 x 7/8 Bndg. Hd. (SST) (4 per pump)	4
39	SC-022-09	Mach. Screw 8-32 x 1/2 Flat Hd. (SST) (2 per pump)	2
40	SC-022-08	Mach. Screw 8-32 x 3/8 Flat Hd. (SST) (2 per pump)	2
41	00-185097-00002	Motor – Peristaltic Pump (12 RPM)	1
42	00-436204	Label – Rinse Aid	1
43	00-185097-00001	Motor – Peristaltic Pump (35 RPM)	1
44	00-436203	Label – Sanitizer	1
45	SC-041-10	Cap Screw 5/16-18 x 5/8 Hex Hd.	4
46	WL-006-23	Lockwasher 5/16 Medium (SST)	4
47	NS-015-11	Nut 5/16-18 Hex	4
48	00-185097-00001	Motor – Peristaltic Pump (35 RPM)	1
49	00-087711-194-1	Switch – Rocker	3
50	00-436202	Label – Detergent	1
51	00-436199	Label – Directions	1
52	00-436198	Cover – Peristaltic Pumps	1
53	00-436246	Guide – Pump Cover	2
54	00-436293	Tube – Clear (Drain Off Tube Behind Control Box)	1
55	00-113703	Cable Tie	5
56	00-185105-00010	Tube – Clear (Peristaltic Pump Drain Off to Drain Pan) (1/4 O.D. x 60)	1
57	FE-022-84	Relief – Strain Electrical	2
58	FE-008-10	1/2 Gasket Assy.	2
59	00-893534	Cable – Motor Assy. (Mach. Built After 1/21/04 and Prior to 6/21/04)	1
60	00-893534-00002	Cable – Motor Assy. (Mach. Built After 6/21/04)	1

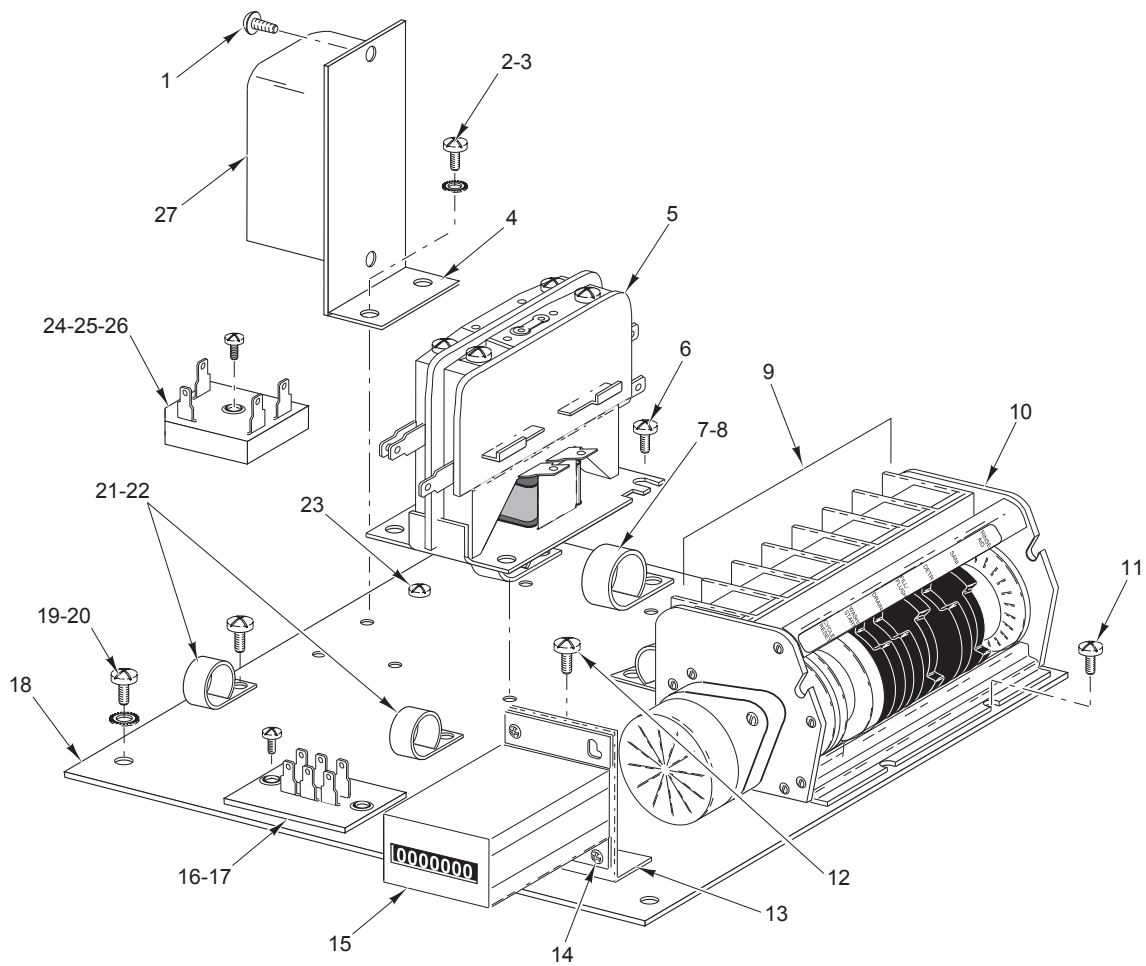


PL-57858

ELECTRICAL COMPONENTS

ELECTRICAL COMPONENTS


ILLUS. PL-57858	PART NO.	NAME OF PART	AMT.
1	SD-008-17	Self-Tapping Screw 6-20 x $\frac{3}{8}$ Phil. Bndg. Hd., Type B	2
2	SD-008-18	Self-Tapping Screw 8-18 x $\frac{3}{8}$ Phil. Bndg. Hd., Type B	2
3	WL-014-05	Lockwasher #8 External Shakeproof	2
4	00-437102	Bracket – Relay	1
5	00-087713-086-1	Contactor – Double Pole	1
6	SD-008-25	Self-Tapping Screw 10-16 x $\frac{1}{2}$ Phil. Pan Hd., Type B	2
7	00-294677-00003	Clamp – Wire ($\frac{3}{4}$ I.D.)	3
8	SD-008-25	Self-Tapping Screw 10-16 x $\frac{1}{2}$ Phil. Pan Hd., Type B	3
9	00-087711-00218	Switch – Timer	1
10	00-436265	Timer – Cam (Incls. Item 9)	1
11	SD-008-18	Self-Tapping Screw 8-18 x $\frac{3}{8}$ Phil. Bndg. Hd., Type B	2
12	SD-008-25	Self-Tapping Screw 10-16 x $\frac{1}{2}$ Phil. Pan Hd., Type B	2
13	00-185178	Bracket	1
14	SD-008-17	Self-Tapping Screw 6-20 x $\frac{3}{8}$ Phil. Bndg. Hd., Type B	2
15	00-185177	Counter & Bracket Assy. (Incls. Items 13, 14, & Terminals)	1
16	00-294325-00009	Terminal Board	1
17	SD-008-17	Self-Tapping Screw 6-20 x $\frac{3}{8}$ Phil. Bndg. Hd., Type B	2
18	00-918013	Base Plate (After 11/09/04)	1
19	SC-018-62	Mach. Screw 10-24 x $\frac{3}{8}$ Phil. Pan Hd.	5
20	WL-007-12	Lockwasher #10 External Shakeproof	2
21	00-294677-00003	Clamp – Wire ($\frac{3}{4}$ I.D.)	2
22	SD-008-25	Self-Tapping Screw 10-16 x $\frac{1}{2}$ Phil. Bndg. Hd., Type B	1
23	SD-008-25	Self-Tapping Screw 10-16 x $\frac{3}{8}$ Phil. Bndg. Hd., Type B	1
*24	00-473660	Rectifier	1
25	WL-006-07	Lockwasher #10 Medium	1
26	NS-011-18	Mach. Nut 10-24 Hex (SST)	1
27	00-087714-020-2	Relay – 3.P.D.T. (1203V.) (Rinse Feeder)	1
	00-294695	Wrench – Spanner (Use to Adjust Item 10)	1

*First Serial No. 12-1021-852

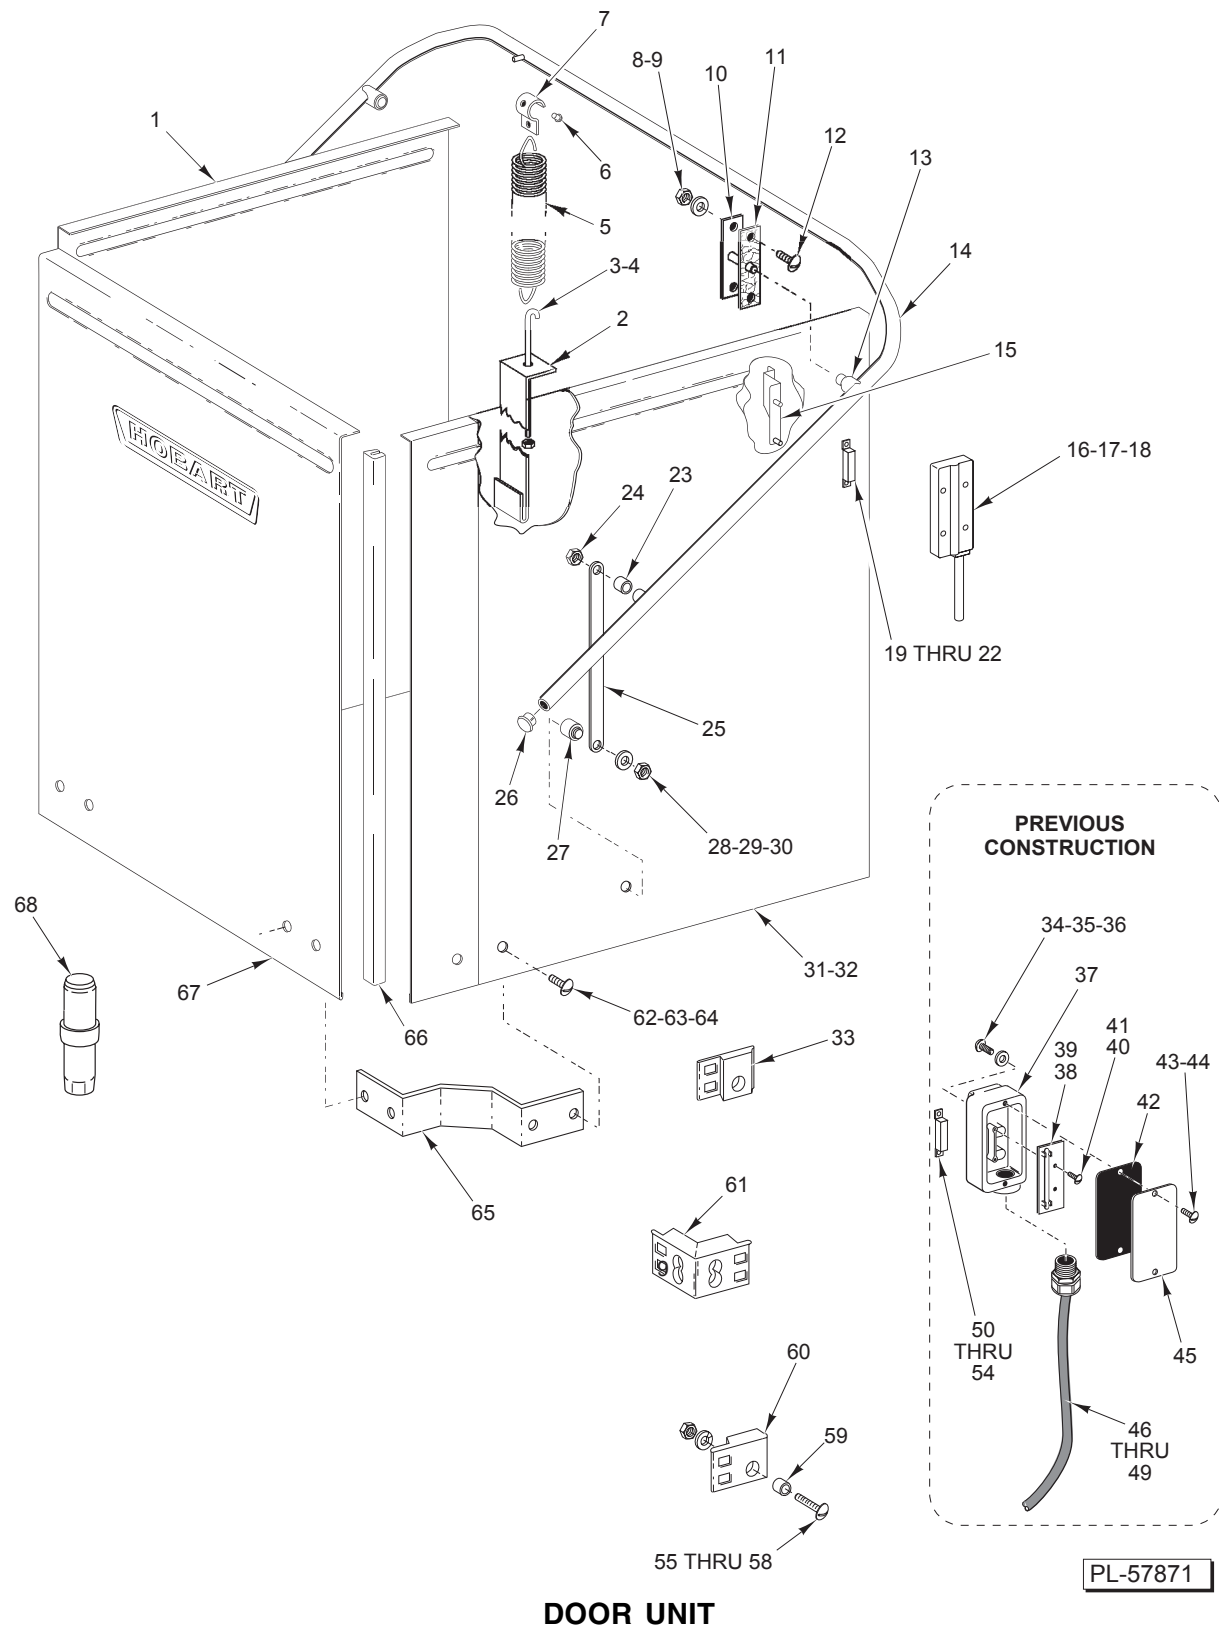

DOOR UNIT


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-57871			
1	00-893926	Door Assy. (LH)	1
2	00-185044	Bracket – Spring	1
3	00-186334-00002	Hook – Spring	1
4	NS-015-11	Nut $\frac{5}{16}$ -18 Hex	2
5	00-119079-00002	Spring – Counterbalance	1
6	00-119055	Button – Bearing	2
7	00-079008	Hanger – Spring	1
8	NS-015-11	Nut $\frac{5}{16}$ -18 Hex	4
9	WL-006-23	Lockwasher $\frac{5}{16}$ Medium (SST)	4
10	00-119017	Bearing Bracket & Pin Assy.	2
11	00-473432	Gasket – Door Lift	2
12	SC-041-10	Mach. Screw $\frac{5}{16}$ -18 x $\frac{5}{8}$ Hex Hd.	4
13	00-119104	Bushing – Door Lift Pin	2
14	00-475200-00001	Door Lift Assy.	1
15	00-748056	Bracket – Magnet	1
16	00-749348-00005	Switch – Reed Encapsulated	1
17	NS-031-50	Stop Nut 6-32 Hex (SST)	4
18	FE-022-84	Relief – Strain Electrical	1
19	00-290159	Retainer – Magnet	1
20	00-290160	Magnet	1
21	NS-047-82	Stop Nut $\frac{1}{4}$ -20 Hex (SST)	2
22	FE-024-88	Lock Nut $\frac{1}{2}$ Electrical	2
23	00-074068	Spacer – Door Link	2
24	NS-032-35	Stop Nut $\frac{5}{16}$ -18 Flexloc	2
25	00-119011	Link – Door	2
26	00-474831	Plug – Handle	2
27	00-119046	Pin – Door Lift	2
28	NS-025-09	Crown Nut $\frac{5}{16}$ -18	2
29	WS-005-32	Washer	2
30	SC-041-17	Cap Screw $\frac{5}{16}$ -18 x $1\frac{1}{2}$ Hex Hd. (SST)	2
31	00-436287	Door Assy. (RH) (Up to Serial #23-1067-450)	1
32	00-893927	Door Assy. (RH) (After Serial #23-1067-450)	1
33	00-119082	Insert – Tank Corner (Left Rear)	1
34	SC-066-06	Mach. Screw 10-24 x $\frac{1}{2}$ Phil. Truss Hd.	1
35	WS-029-79	Washer	2
36	WL-006-07	Lockwasher #10 Medium	2
37	00-436069	Housing – Cycle Switch	1
38	00-436071	Retainer – Switch Weldment (Switch Included)	1
39	00-811860	Barrier – Door Interlock	1
40	SC-115-26	Mach. Screw 6-32 x $\frac{5}{16}$ Pan Hd.	2
41	WL-006-42	Lockwasher #6 Medium	2
42	00-436073	Gasket – Housing	1
43	SC-093-03	Mach. Screw 8-32 x $\frac{3}{8}$ Phil. Pan Hd. (SST)	2
44	WL-006-02	Lockwasher #8 Medium	2
45	00-436072	Cover – Housing	1
46	00-294514-00003	Cable – Door Interlock Switch	1
47	FE-022-84	Relief – Strain Electrical	2
48	FE-024-88	Lock Nut $\frac{1}{2}$ Electrical	1
49	FE-008-10	$\frac{1}{2}$ Gasket Assy.	1
50	00-435950	Retainer – Magnet	1
51	00-436091	Magnet – Door Cycle Switch	1
52	SC-115-26	Mach. Screw 6-32 x $\frac{5}{16}$ Pan Hd.	2
53	WS-023-01	Washer	2
54	NS-031-50	Stop Nut 6-32 Hex (SST)	2
55	SC-041-15	Mach. Screw $\frac{5}{16}$ -18 x $1\frac{1}{4}$ Hex Hd. (SST)	6
56	SC-053-17	Mach. Screw $\frac{5}{16}$ -18 x $\frac{3}{4}$ Slotted Truss Hd. (SST)	2
57	WL-006-23	Lockwasher $\frac{5}{16}$ Medium (SST)	8
58	NS-015-11	Nut $\frac{5}{16}$ -18 Hex	8
59	00-119047	Spacer – Tank & Chamber	6
60	00-119083	Insert – Tank Corner (Right Rear)	1
61	00-119081	Insert – Tank Corner (Front)	2
62	SC-041-10	Mach. Screw $\frac{5}{16}$ -18 x $\frac{5}{8}$ Hex Hd.	8
63	WL-006-23	Lockwasher $\frac{5}{16}$ Medium (SST)	8
64	NS-015-11	Nut $\frac{5}{16}$ -18 Hex	8
65	00-185057	Bracket – Door Lift	2
66	00-112378-00023	Guide – Door	6
67	00-893925	Door Assy. (Front)	1
68	00-288946-00002	Foot – Adjustable ($1\frac{5}{8}$) (SST)	4

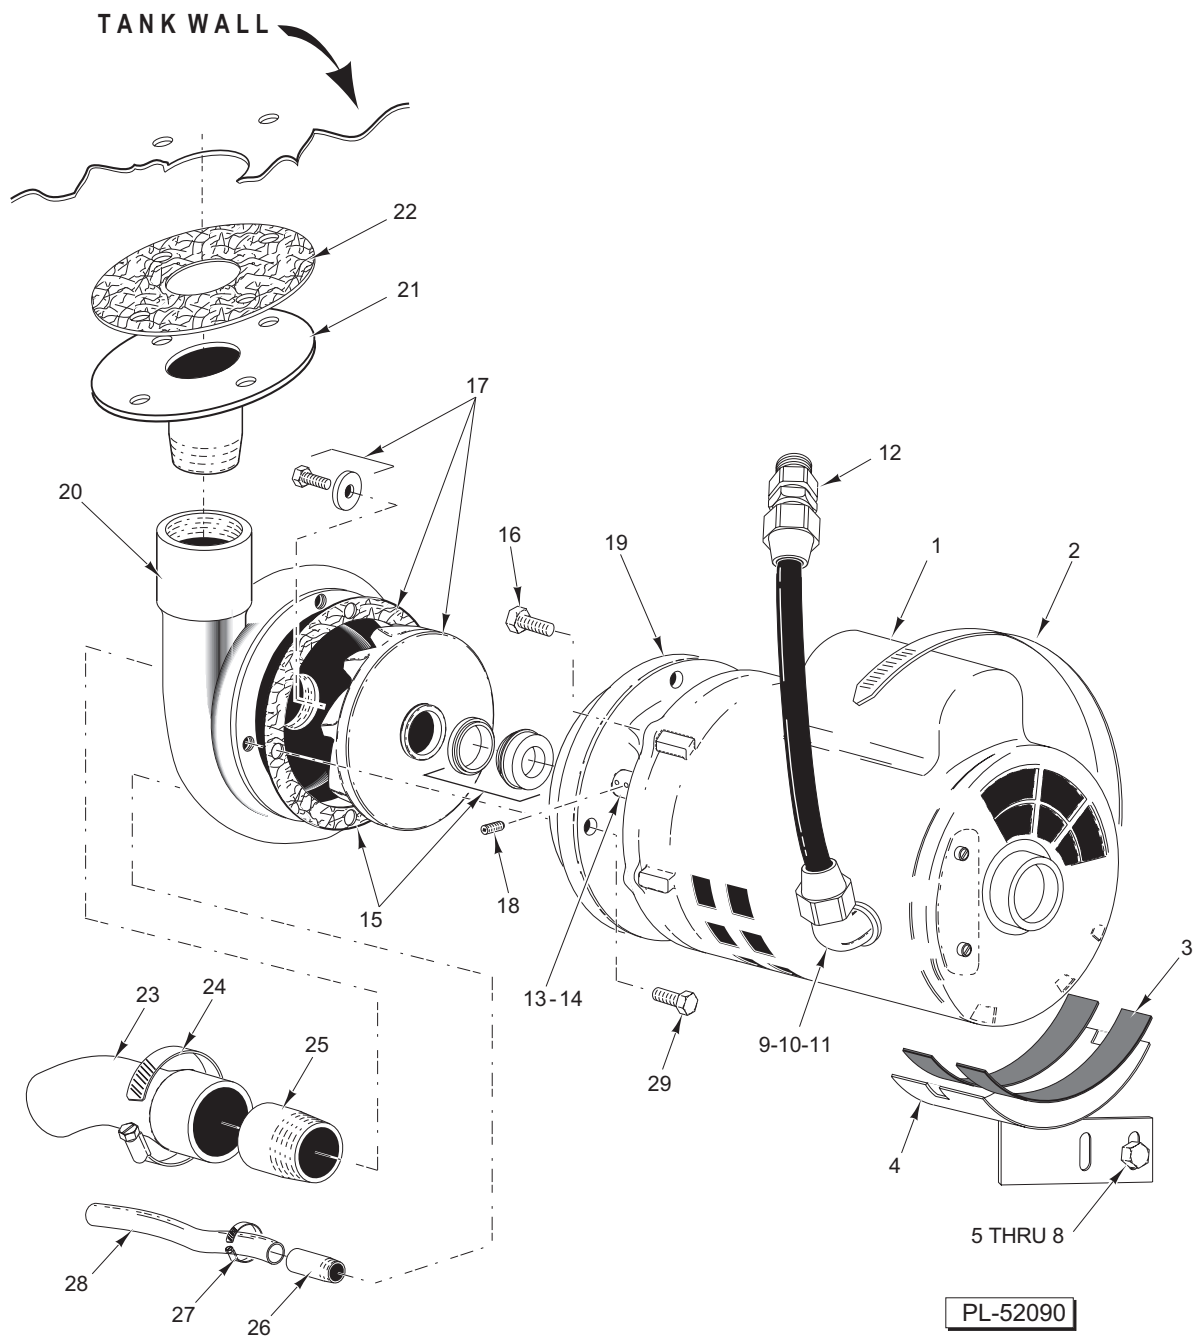

WASH MOTOR & PUMP (PREVIOUS CONSTRUCTION)

WASH MOTOR & PUMP (PREVIOUS CONSTRUCTION)


ILLUS. PL-52090	PART NO.	NAME OF PART	AMT.
1	00-436292-00001	Motor – Service (120 V., 60 Hz., 1 Ph.)	1
2	00-292171	Clamp – Motor Support	1
3	00-436295	Foam Tape	2
4	00-436276	Support – Motor (Incls. Item 3)	1
5	SC-041-10	Cap Screw $\frac{5}{16}$ -18 x $\frac{5}{8}$ Hex Hd.	2
6	WS-029-05	Washer	2
7	WL-006-23	Lockwasher $\frac{5}{16}$ Medium (SST)	2
8	NS-015-11	Nut $\frac{5}{16}$ -18 Hex	2
9	FE-024-65	Connector 90 Deg. (Non Metallic) Sealtite ($\frac{1}{2}$ Male Thd. x $\frac{1}{2}$ Flex. Cnd.)	1
10	FE-008-10	$\frac{1}{2}$ Gasket Assy.	1
11	00-436913-00023	Conduit – Liquidtight $\frac{1}{2}$ x 24 (Connects Motor to Control Box Cnd.)	1
12	FE-024-57	Connector Straight (Non Metallic) “Sealtite” ($\frac{1}{2}$ Male Thd. x $\frac{1}{2}$ Flex. Cnd.)	1
13	00-436291-00001	Flinger (Not Shown)	1
14	00-436291-00003	Adapter – Shaft	1
15	00-436289	Seal Kit (Service) (Incls. Casing Gasket)	1
16	00-436291-00007	Bolt – Hex Hd.	4
17	00-436290	Impeller Kit (Service) (Incls. Casing Gasket, Retaining Bolt, & Washer)	1
18	00-436291-00006	Set Screw	2
19	00-436291-00002	Support Head	1
20	00-436291-00004	Casing – Pump	1
21	00-436274	Flange Assy. – Pump Discharge	1
22	00-436270	Gasket	1
23	00-436233	Hose – Pump Intake	1
24	00-534651	Clamp – Hose (Large)	2
25	00-436153	Adapter – Pump	1
26	FP-087-33	Pipe $\frac{1}{8}$ x $1\frac{1}{4}$ (Standard Thread One End)	1
27	00-526614	Clamp – Hose (Small)	2
28	00-436294	Tube – Clear	1
29	00-436291-00005	Cap Screw	4
	00-436216	Pump & Motor Assy. (Incls. Items 1, 12 thru 21, 25 & 26)	1
	00-186894-00001	Pump & Motor Assy. (Incls. Items 1 & 12 thru 20)	1
	00-329919-00001	Pump & Motor Assy. (380 V., 50 Hz., 3 Ph.)	1
	00-329920-00001	Pump & Motor Assy. (220 V., 50 Hz., 1 Ph.)	1

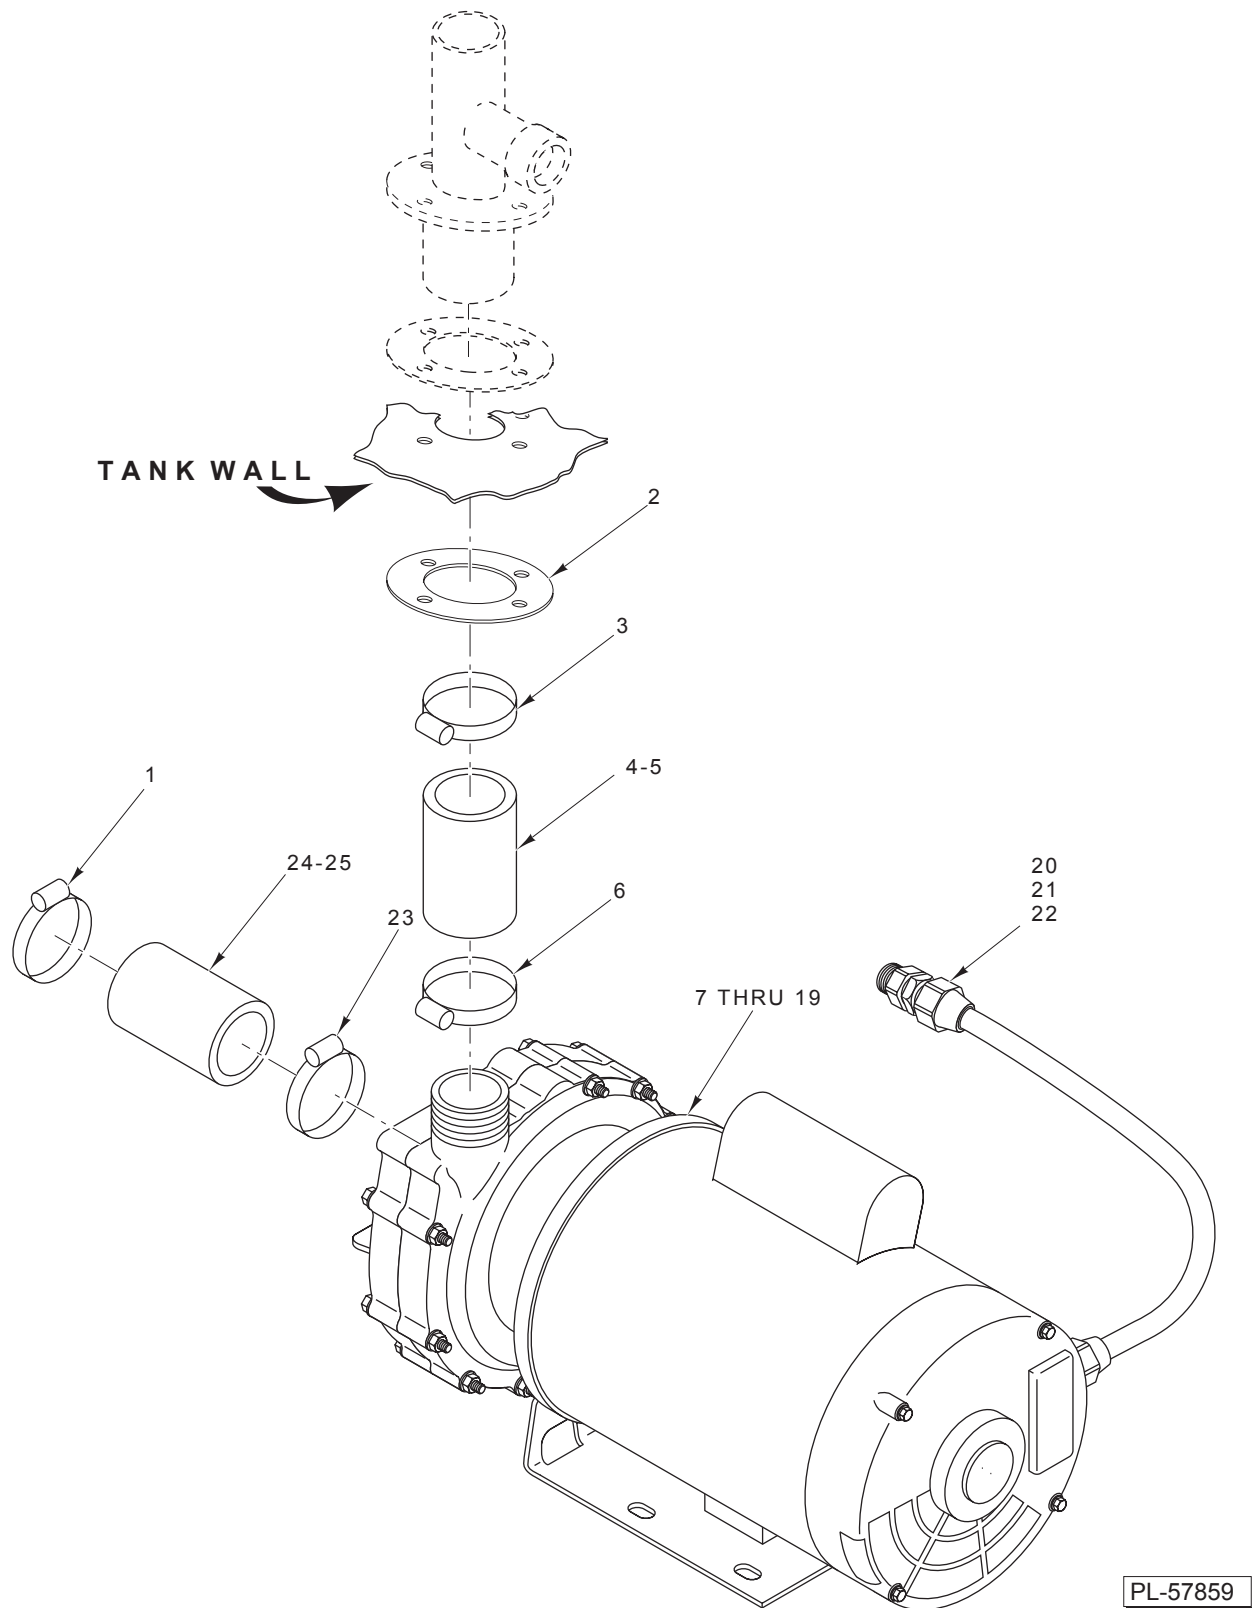

**WASH MOTOR & PUMP
(CURRENT CONSTRUCTION STARTING SERIAL NO. 23-1076-369)**

WASH MOTOR & PUMP
(CURRENT CONSTRUCTION STARTING SERIAL NO. 23-1076-369)

ILLUS. PL-57859	PART NO.	NAME OF PART	AMT.
1	00-538412	Clamp – Hose	1
2	00-436273-00002	Flange – Support	1
3	00-538412	Clamp – Hose	1
4	00-328607	Hose – Pump Outlet	1
5	00-328607-00002	Hose – Pump Outlet	1
6	00-538412	Clamp – Hose	1
7	00-474837-00002	Pump & Motor Assy. (115/230 V., 50/60 Hz., 1 Ph./3 Ph.)	1
8	00-476734-00001	Kit – Motor Pump (50/60 Hz.)	1
9	00-476734-00002	Kit – Casting Pump	1
10	00-476734-00003	Kit – Casting Pump	1
11	00-476734-00004	Kit – Shaft Seal	1
12	00-476734-00005	Kit – Impeller (60 Hz.)	1
13	00-476734-00006	Kit – Plug	1
14	00-476734-00007	Kit – Shim	1
15	00-476734-00008	Kit – Impeller (50 Hz.)	1
16	00-476734-00009	Kit – Motor Shaft Flinger	1
17	00-476734-00010	Kit – Motor Pump (50 Hz., 1 Ph.)	1
18	00-476734-00011	Kit – Impeller (60 Hz., 3 Ph.)	1
19	00-476734-00012	Kit – Impeller (50 Hz., 3 Ph.)	1
20	00-893534-00002	Cable – Motor Assy.	1
21	FE-022-84	Relief – Strain Electrical	2
22	FE-024-88	Lock Nut 1/2 Electrical	1
23	00-538412	Clamp – Hose	1
24	00-328607	Hose – Pump Outlet	1
25	00-328607-00002	Hose – Pump Outlet	1

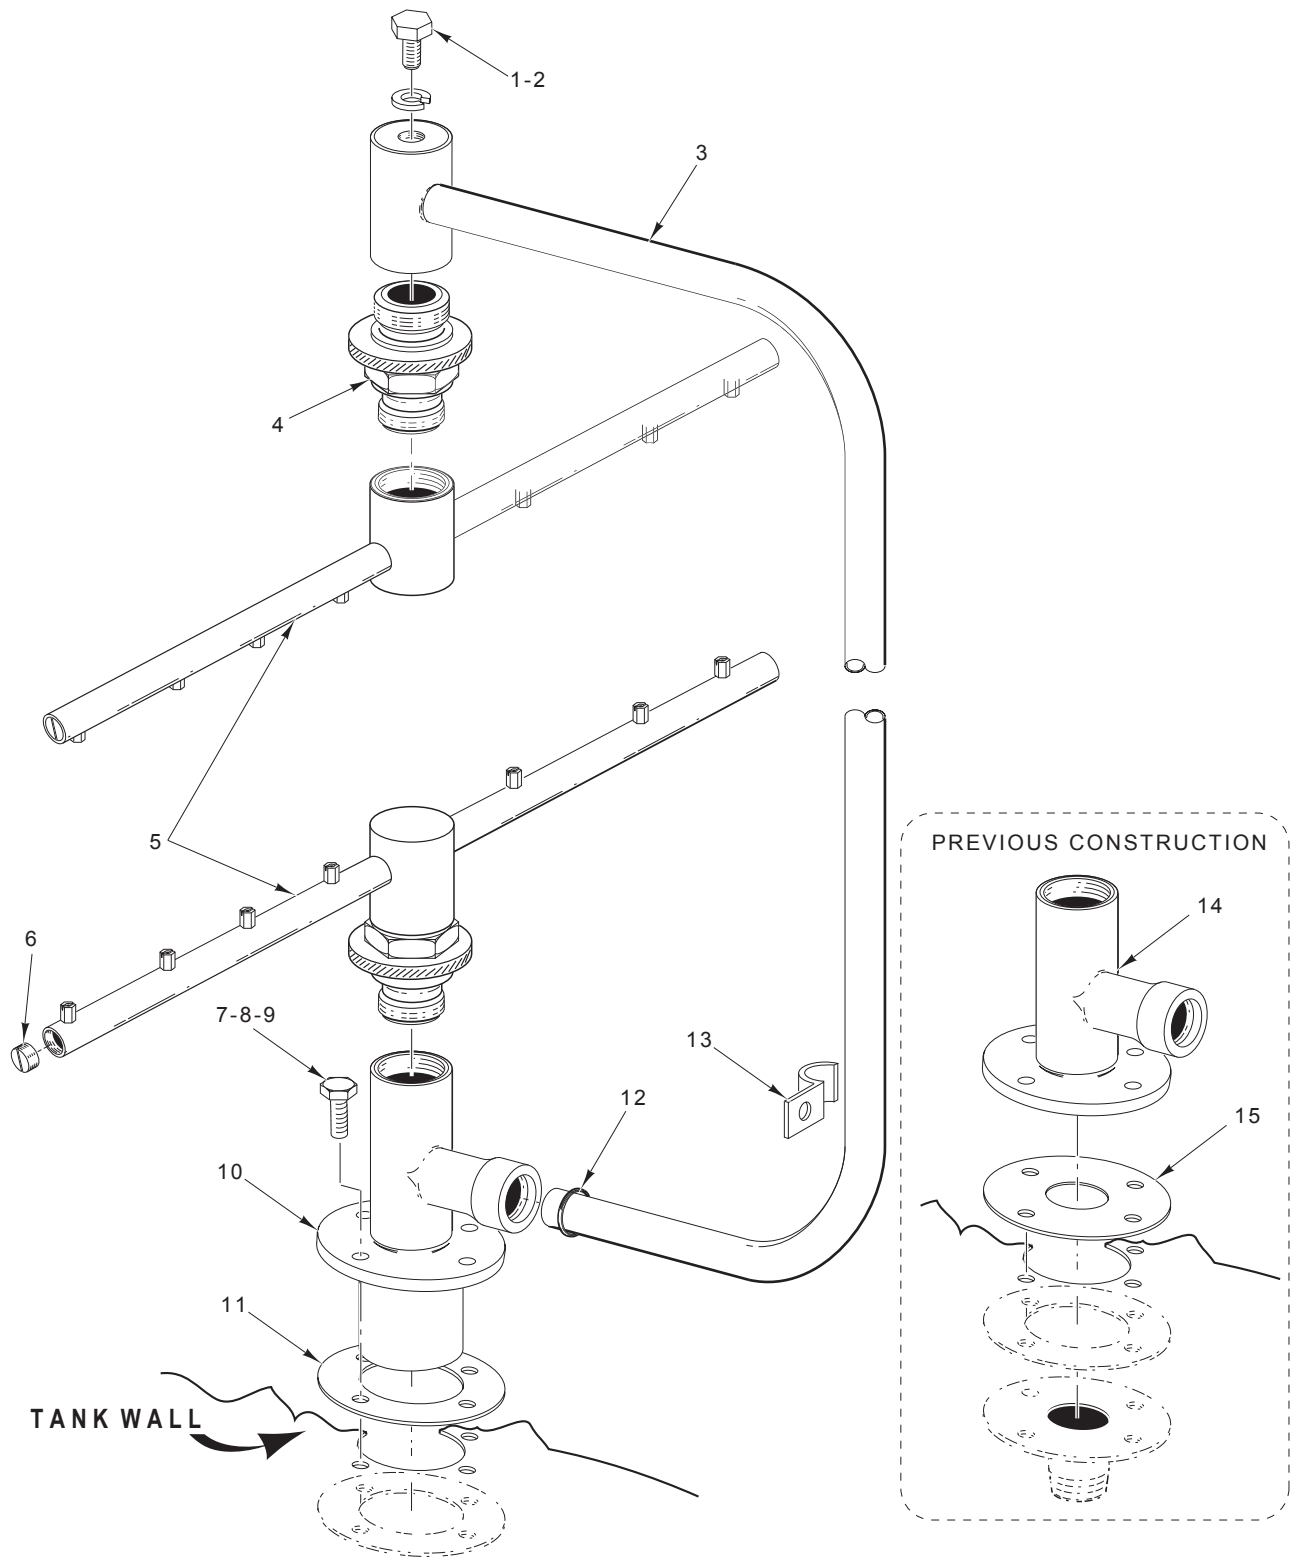


PL-57860

INSIDE WASH & RINSE PIPING

INSIDE WASH & RINSE PIPING

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-57860			
1	SC-041-10	Mach. Screw $\frac{5}{16}$ -18 x $\frac{5}{8}$ Hex Hd. (SST)	1
2	WL-6-23	Lockwasher $\frac{5}{16}$ Medium (SST)	1
3	00-436215	Tube Assy. – Riser	1
4	00-436210-00003	Bearing Assy. – Wash Arm	2
5	00-436210-00001	Wash Arm Assy. (Incls. Item 6)	2
6	00-474252	End Cap	4
7	SC-041-13	Cap Screw $\frac{5}{16}$ -18 x 1 Hex Hd. SST	4
8	WS-017-01	Washer	4
9	NS-036-19	Stop Nut $\frac{5}{16}$ -18 Hex (SST)	4
10	00-893793	Manifold – Lower Wash Arm (Current Construction)	1
11	00-436270-00002	Gasket	1
12	00-067500-00010	O-Ring	1
13	00-436217	Clamp – Riser	1
14	00-436214	Manifold – Lower Wash Arm (Previous Construction)	1
15	00-436270	Gasket (Previous Construction)	1

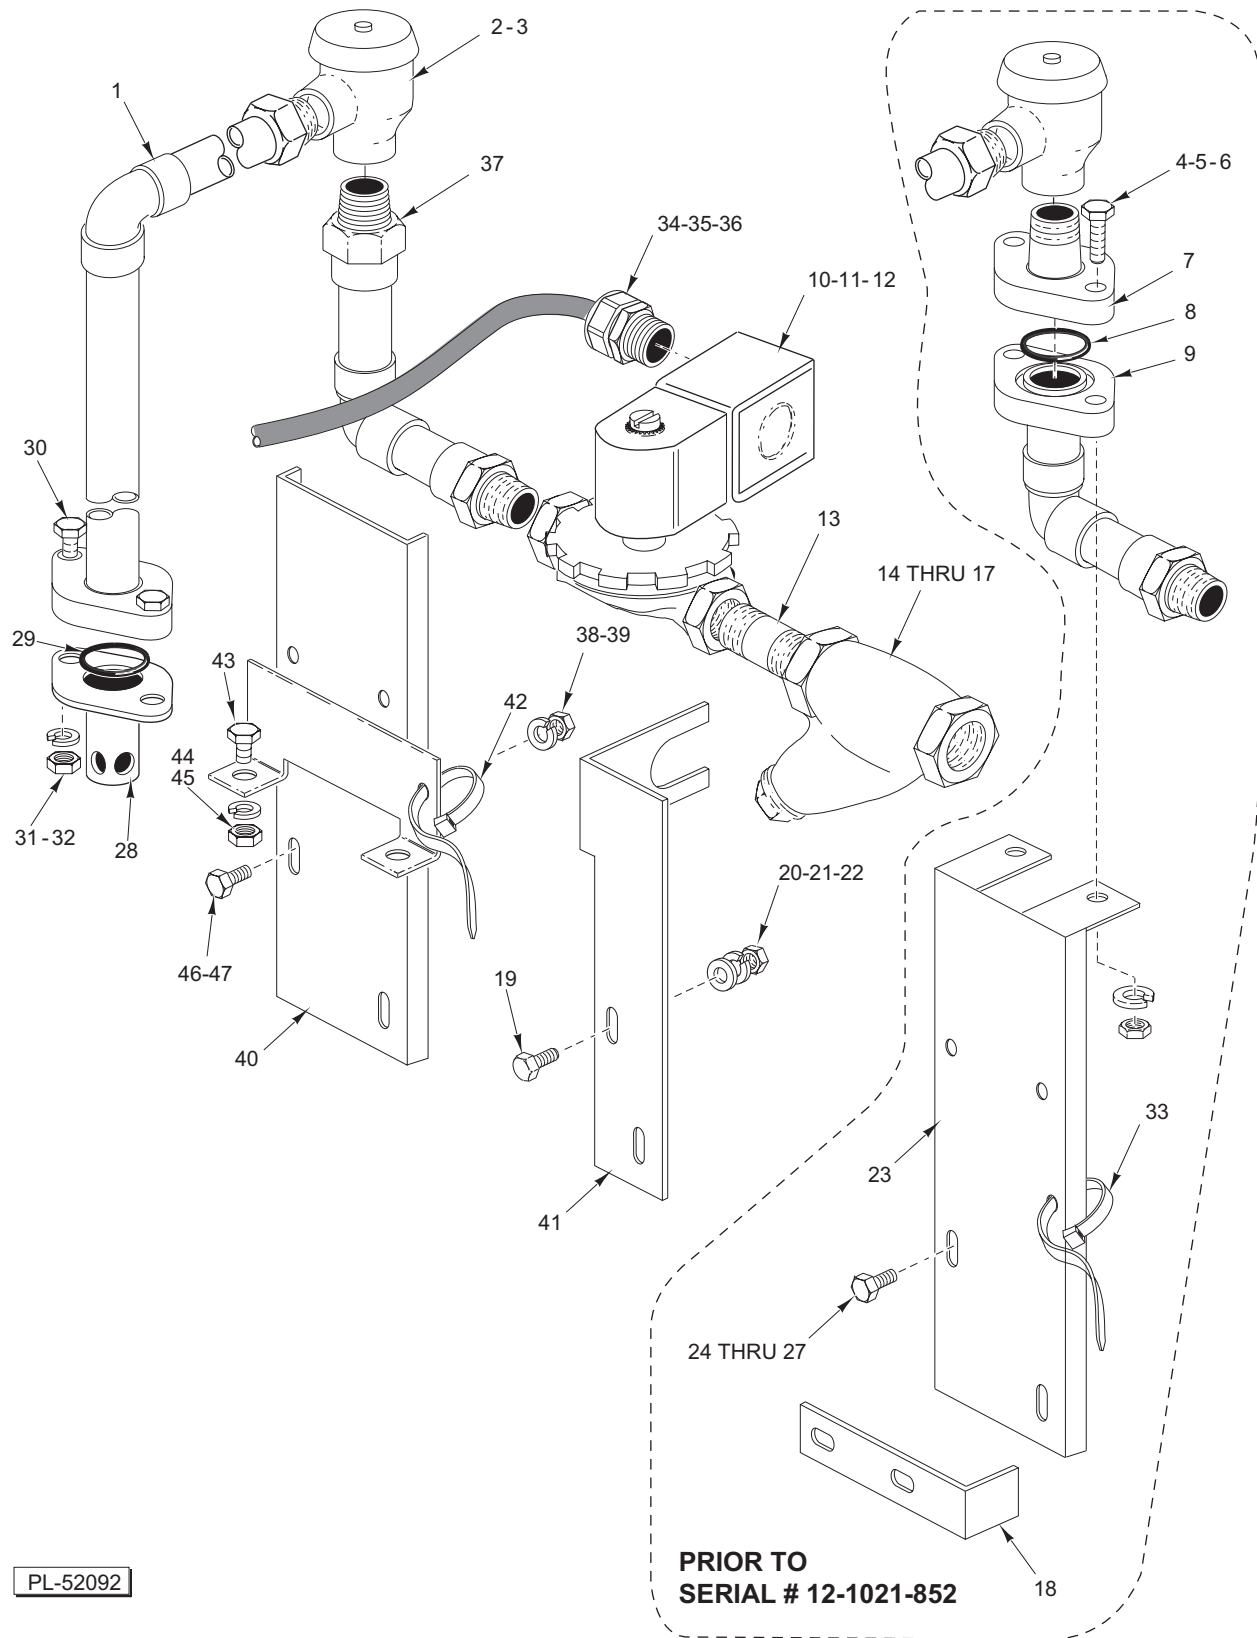

PL-52092


FILL PIPING (PREVIOUS CONSTRUCTION)

FILL PIPING (PREVIOUS CONSTRUCTION)

ILLUS. PL-52092	PART NO.	NAME OF PART	AMT.
1	00-293850	Tube & Flange Assy.	1
2	00-277112	Vacuum Breaker (3/4")	1
3	00-118270	Service Kit – Vacuum Breaker (Float & Seal Assy.)	1
4	NS-015-11	Nut 5/16-18 Hex	2
5	SC-041-16	Cap Screw 5/16-18 x 1 3/8 Hex Hd. (SST)	2
6	WL-006-23	Lockwasher 5/16 Medium (SST)	2
** 7	00-270751	Flange & Nipple Assy.	1
** 8	00-067500-00012	O-Ring	1
** 9	00-293849	Flange & Tube Assy.	1
10	00-271002-00001	Solenoid Valve 3/4 (120 V.) (Incls. Items 11 & 12)	1
11	00-271839-00001	Coil – Solenoid Valve	1
12	00-271838	Service Kit – 3/4 Solenoid Valve	1
13	FP-041-53	Pipe 3/4 x 1 3/4 Lg. TBE., (Brass)	1
14	00-186922	Line Strainer (Incls. Items 15, 16, & 17)	1
15	00-186923	Plug - Branch (3/4 Line Strainer)	1
16	00-186924	Gasket (Branch Plug)	1
17	00-186925	Screen (3/4 Line Strainer)	1
**18	00-270764	Support – Fill Piping	1
19	SC-041-05	Cap Screw 1/4-20 x 5/8 Hex Hd.	2
20	WS-017-06	Washer	2
21	WL-006-17	Lockwasher 1/4 Medium	2
22	NS-015-01	Nut 1/4-20 Hex (SST)	2
**23	00-293572	Bracket – Fill Piping	1
24	SC-041-05	Cap Screw 1/4-20 x 5/8 Hex Hd.	2
25	WS-017-06	Washer	2
26	WL-006-17	Lockwasher 1/4 Medium	2
27	NS-015-01	Nut 1/4-20 Hex (SST)	2
28	00-474221	Inside Fill Piping Assy.	1
29	00-067500-00012	O-Ring	1
30	SC-041-13	Cap Screw 5/16-18 x 1 Hex Hd. (SST)	2
31	WL-006-23	Lockwasher 5/16 Medium (SST)	2
32	NS-015-11	Nut 5/16-18 Hex	2
33	00-113703	Cable Tie	1
34	FE-022-84	Relief – Strain Electrical	2
35	FE-008-10	1/2 Gasket Assy.	2
36	FE-024-88	Lock Nut 1/2 Electrical	2
*37	00-474743	Piping – Final Rinse	1
38	WL-006-17	Lockwasher 1/4 Medium	2
39	NS-015-01	Nut 1/4-20 Hex (SST)	2
*40	00-474736	Bracket – Solenoid Box	1
*41	00-474739	Support – Fill Pipe	1
42	00-113703	Cable Tie	1
43	SC-041-05	Cap Screw 1/4-20 x 5/8 Hex Hd.	1
44	WL-006-17	Lockwasher 1/4 Medium	1
45	NS-015-01	Nut 1/4-20 Hex (SST)	1
46	SC-041-05	Cap Screw 1/4-20 x 5/8 Hex Hd.	2
47	WS-017-06	Washer	2

* First Serial Number 12-1021-852

** Prior to Serial Number 12-1021-852

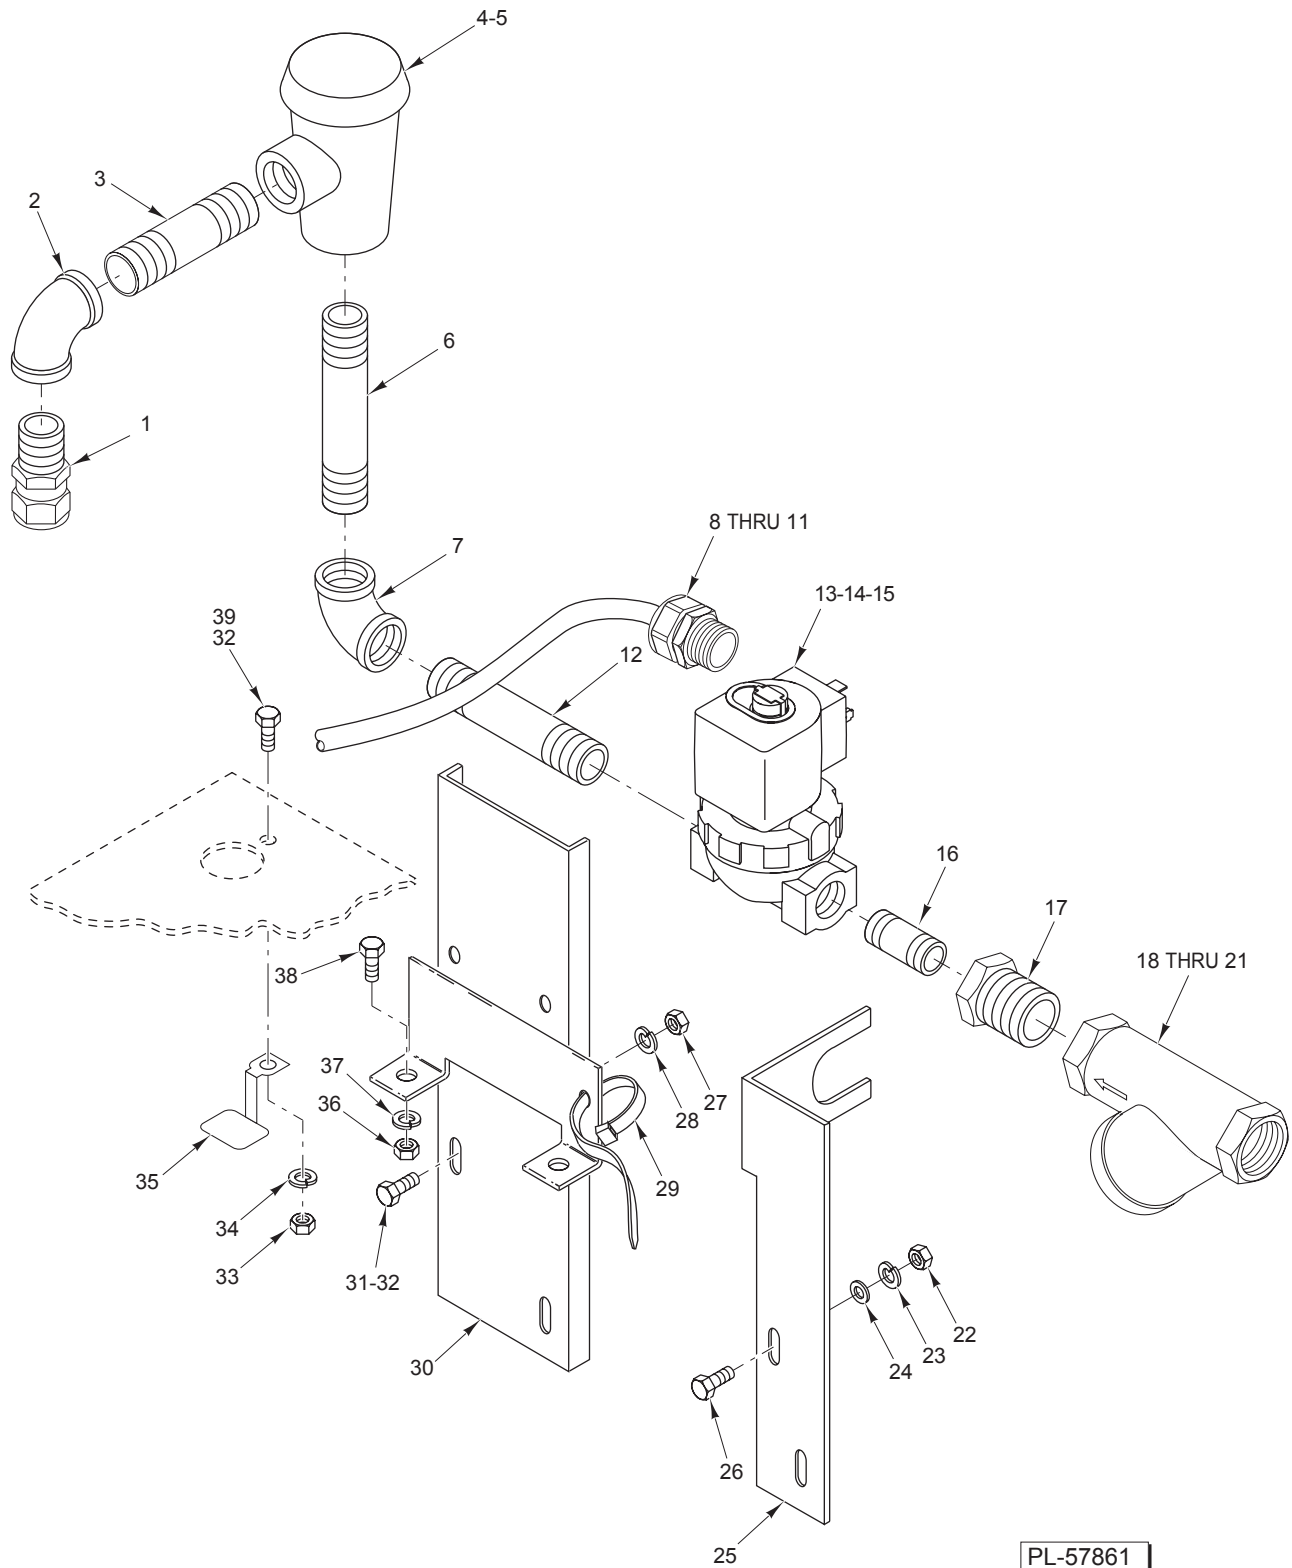


PL-57861

FILL PIPING (CURRENT CONSTRUCTION)

FILL PIPING (CURRENT CONSTRUCTION)


ILLUS. PL-57861	PART NO.	NAME OF PART	AMT.
1	00-069897-00001	Fitting – Compression	1
2	FP-015-16	Elbow – Pipe $\frac{1}{2}$ x 90 Deg.	1
3	FP-040-62	Pipe $\frac{1}{2}$ x $2\frac{3}{4}$ TBE	1
4	00-292909-00002	Vacuum Breaker ($\frac{1}{2}$ In.)	1
5	00-292910	Service Kit – Vacuum Breaker ($\frac{1}{2}$ In.) (Float & Seal Assy.)	1
6	FP-040-62	Pipe $\frac{1}{2}$ x $2\frac{3}{4}$ TBE	1
7	FP-015-16	Elbow – Pipe $\frac{1}{2}$ x 90 Deg.	1
8	FE-022-84	Relief – Strain Electrical	2
9	FE-008-10	$\frac{1}{2}$ Gasket Assy.	2
10	FE-024-88	Lock Nut $\frac{1}{2}$ Electrical	2
11	00-893950-00001	Cable	1
12	FP-040-62	Pipe $\frac{1}{2}$ x $2\frac{3}{4}$ TBE	1
13	00-893100-00001	Solenoid Valve $\frac{1}{2}$ (120 V.) (Incls. Items 14 & 15)	1
14	00-892132	Coil – Solenoid Valve	1
15	00-893101	Service Kit – $\frac{3}{4}$ Solenoid Valve	1
16	FP-040-42	Pipe $\frac{1}{2}$ x $1\frac{1}{8}$ TBE	1
17	FP-027-22	Bushing – Pipe $\frac{3}{4}$ to $\frac{1}{2}$	1
18	00-186922	Line Strainer (Incls. Items 19, 20, & 21)	1
19	00-186923	Plug - Branch ($\frac{3}{4}$ Line Strainer)	1
20	00-186924	Gasket (Branch Plug)	1
21	00-186925	Screen ($\frac{3}{4}$ Line Strainer)	1
22	NS-015-01	Nut $\frac{1}{4}$ -20 Hex (SST)	2
23	WL-006-17	Lockwasher $\frac{1}{4}$ Medium	2
24	WS-017-06	Washer	2
25	00-474739	Support – Fill Pipe	1
26	SC-041-05	Cap Screw $\frac{1}{4}$ -20 x $\frac{5}{8}$ Hex Hd.	2
27	NS-015-01	Nut $\frac{1}{4}$ -20 Hex (SST)	2
28	WL-006-17	Lockwasher $\frac{1}{4}$ Medium	2
29	00-113703	Cable Tie	1
30	00-474736	Bracket – Solenoid Box	1
31	SC-041-05	Cap Screw $\frac{1}{4}$ -20 x $\frac{5}{8}$ Hex Hd.	2
32	WS-017-06	Washer	2
33	NS-015-11	Nut $\frac{5}{16}$ -18 Hex	2
34	WL-006-23	Lockwasher $\frac{5}{16}$ Medium (SST)	2
35	00-893920	Deflector – Fill	1
36	NS-015-01	Nut $\frac{1}{4}$ -20 Hex (SST)	1
37	WL-006-17	Lockwasher $\frac{1}{4}$ Medium	1
38	SC-041-05	Cap Screw $\frac{1}{4}$ -20 x $\frac{5}{8}$ Hex Hd.	1
39	SC-041-13	Cap Screw $\frac{5}{16}$ -18 x 1 Hex Hd. (SST)	2

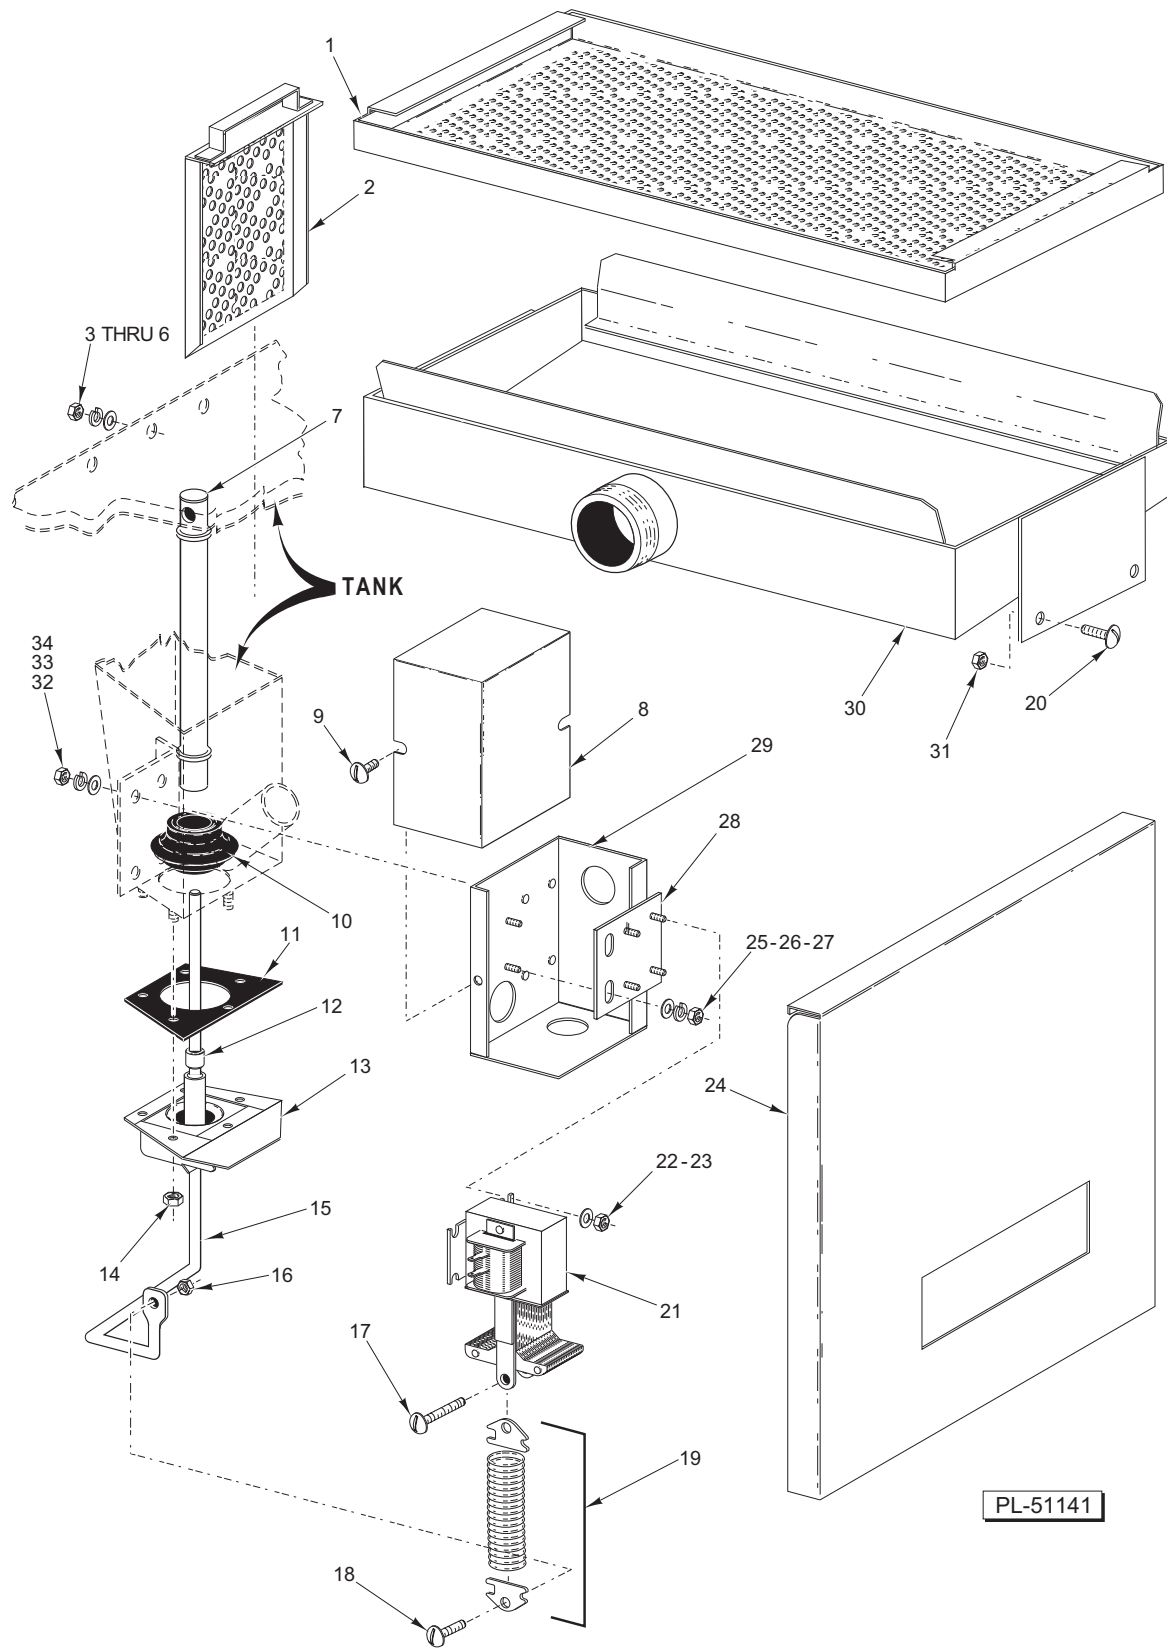

DRAIN
(PRIOR TO S.N. 12-1021-852)

DRAIN
(PRIOR TO S.N. 12-1021-852)

ILLUS. PL-51141	PART NO.	NAME OF PART	AMT.
1	00-436222	Pan – Strainer	1
2	00-436281	Strainer – Sump	1
3	NS-015-11	Nut $\frac{5}{16}$ -18 Hex	3
4	WS-029-05	Washer	3
5	WL-006-23	Lockwasher $\frac{5}{16}$ Medium (SST)	3
6	SC-041-10	Mach. Screw $\frac{5}{16}$ -18 x $\frac{5}{8}$ Hex Hd.	3
7	00-436247	Tube – Drain	1
8	00-436242	Cover – Solenoid	1
9	SC-053-05	Mach. Screw 10-24 x $\frac{3}{8}$ Slotted Truss Hd.	2
10	00-436248	Stopper – Drain	1
11	00-436206	Gasket – Sump	1
12	00-436279	Bearing – Drain	1
13	00-893413	Drain Chute Assy. (Incls. Item 12)	1
14	NS-047-82	Stop Nut $\frac{1}{4}$ -20 (SST)	5
15	00-436234	Rod – Drain Lift	1
16	NS-031-15	Stop Nut – Special 10-24 Hex (SST)	2
17	SC-098-05	Mach. Screw 10-24 x $1\frac{1}{2}$ Rd. Hd. (SST)	1
18	SC-021-25	Mach. Screw 10-24 x $\frac{3}{4}$ Rd. Hd.	1
19	00-436230	Spring Assy. – Drain	1
20	SC-021-25	Mach. Screw 10-24 x $\frac{3}{4}$ Rd. Hd.	4
21	00-041539	Solenoid	1
22	NS-031-15	Stop Nut – Special 10-24 Hex (SST)	4
23	WS-019-20	Washer	4
24	00-474905	Panel – Front (Optional)	1
25	NS-015-01	Nut $\frac{1}{4}$ -20 Hex (SST)	4
26	WL-006-17	Lockwasher $\frac{1}{4}$ Medium	4
27	WS-022-34	Washer	4
28	00-436241-00001	Bracket – Solenoid	1
29	00-436240-00001	Box – Solenoid	1
30	00-436223	Pan – Drain	1
31	NS-031-15	Stop Nut – Special 10-24 Hex (SST)	4
32	NS-015-01	Nut $\frac{1}{4}$ -20 Hex (SST)	2
33	WL-006-17	Lockwasher $\frac{1}{4}$ Medium	2
34	WS-022-34	Washer	2

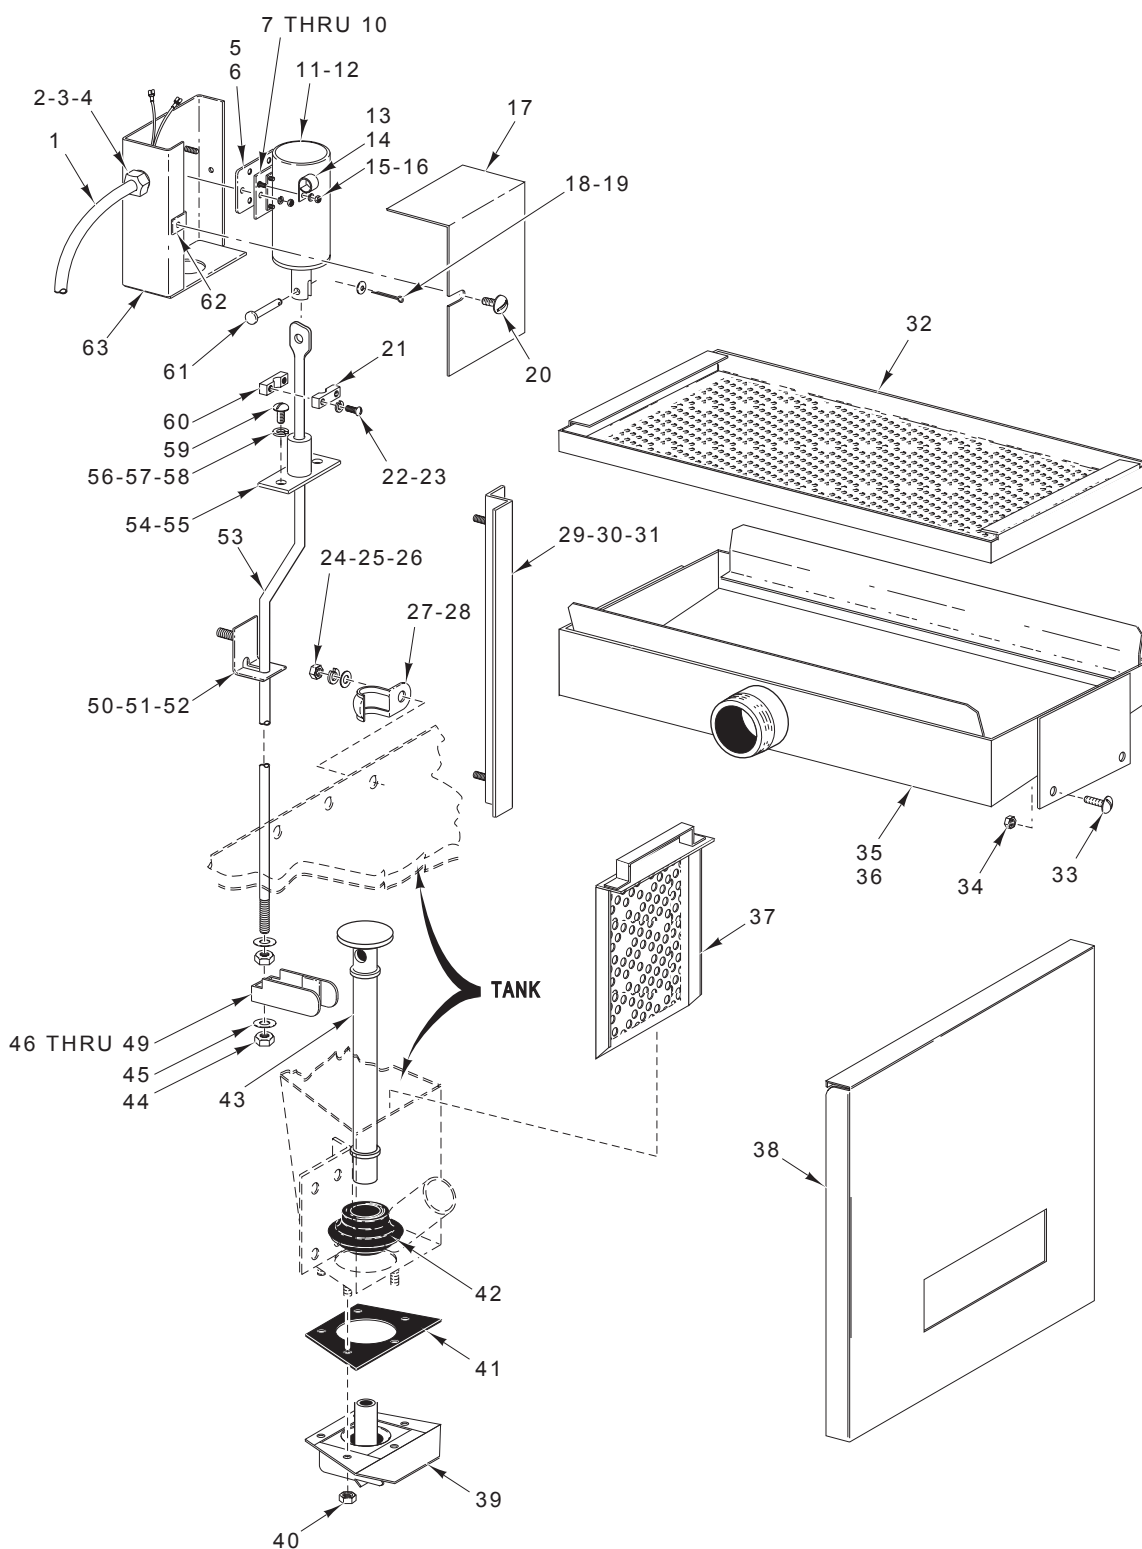


PL-57864

DRAIN (FIRST S.N. 12-1021-852)

DRAIN **(FIRST S.N. 12-1021-852)**

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-57864			
1	00-294514-00009	Cable – Drain Solenoid	1
2	FE-008-10	1/2 Gasket Assy. (Previous Construction)	2
3	FE-022-84	Relief – Strain Electrical	2
4	FE-024-88	Lock Nut 1/2 Electrical	2
5	00-474802	Spacer – Solenoid (Previous Construction)	1
6	00-893909	Spacer – Solenoid (Current Construction)	1
7	00-436306	Plate – Solenoid Mounting (Previous Construction)	1
8	00-893910	Plate – Solenoid Mounting (Current Construction)	1
9	WL-006-17	Lockwasher 1/4 Medium	2
10	NS-015-01	Nut 1/4-20 Hex (SST)	2
11	SD-008-18	Self – Tapping Screw 8-18 x 3/8 Phil. Bndg. Hd., Type B	4
12	00-436312	Solenoid (Ledex, DC)	1
13	00-078752-00004	Retainer (7/16 In.) (Previous Construction)	1
14	00-078752-00010	Clamp – Cable (Current Construction)	1
15	WL-006-07	Lockwasher #10 Medium	1
16	NS-011-18	Mach. Nut 10-24 Hex (SST)	1
17	00-436305	Cover – Solenoid	1
18	WS-023-24	Washer	1
19	PC-005-02	Pin – Cotter 1/16 x 1/2 (SST)	1
20	SC-053-05	Mach. Screw 10-24 x 3/8 Slotted Truss Hd.	2
21	00-436309	Block – Clamping	1
22	SC-021-23	Mach. Screw 10-24 x 1/2 Rd. Hd.	2
23	WL-006-07	Lockwasher #10 Medium	2
24	NS-015-11	Nut 5/16-18 Hex	3
25	WS-029-05	Washer	2
26	WL-006-23	Lockwasher 5/16 Medium (SST)	3
27	SC-053-17	Mach. Screw 5/16-18 x 3/4 Slotted Truss Hd.	3
28	00-436217	Clamp	1
29	00-474253-00001	Guard – Lift Rod	1
30	WL-006-07	Lockwasher #10 Medium	2
31	NS-011-18	Mach. Nut 10-24 Hex (SST)	2
32	00-436222	Pan – Strainer	1
33	SC-021-25	Mach. Screw 10-24 x 3/4 Rd. Hd.	4
34	NS-031-15	Stop Nut – Special 10-24 Hex (SST)	2
35	00-436223	Pan – Drain (Previous Construction)	1
36	00-893792	Pan – Drain (Current Construction)	1
37	00-436281	Strainer – Sump	1
38	00-474905	Panel – Trim (Optional)	1
39	00-893413	Drain Chute Assy.	1
40	NS-047-82	Stop Nut 1/4-20 (SST)	5
41	00-436206	Gasket – Sump	1
42	00-436248	Stopper – Drain	1
43	00-474220	Tube – Drain	1
44	NS-015-11	Nut 5/16-18 Hex	2
45	WL-006-23	Lockwasher 5/16 Medium (SST)	2
46	00-436296	Block – Lift	1
47	00-436297	Support – Drain Assy.	1
48	WL-006-07	Lockwasher #10 Medium (Use to Mount Item 46)	2
49	SC-021-23	Mach. Screw 10-24 x 1/2 Rd. Hd. (Use to Mount Item 46)	2
50	00-436307-00001	Bracket – Lift Rod	2
51	WL-006-23	Lockwasher 5/16 Medium (SST)	2
52	NS-015-11	Nut 5/16-18 Hex	2
53	00-436303	Rod – Lift Drain	1
54	00-436300	Guide – Rod Assy.	1
55	00-436310	Gasket – Guide	1
56	WL-006-17	Lockwasher 1/4 Medium	2
57	WS-017-06	Washer	2
58	NS-015-01	Nut 1/4-20 Hex (SST)	2
59	SC-041-01	Cap Screw 1/4-20 x 3/4 Hex Hd.	2
60	00-436308	Block – Threaded	1
61	00-436313	Pin – Clevis	1
62	00-074348	Speed Nut 10-24	2
63	00-436304-00001	Box – Solenoid	1

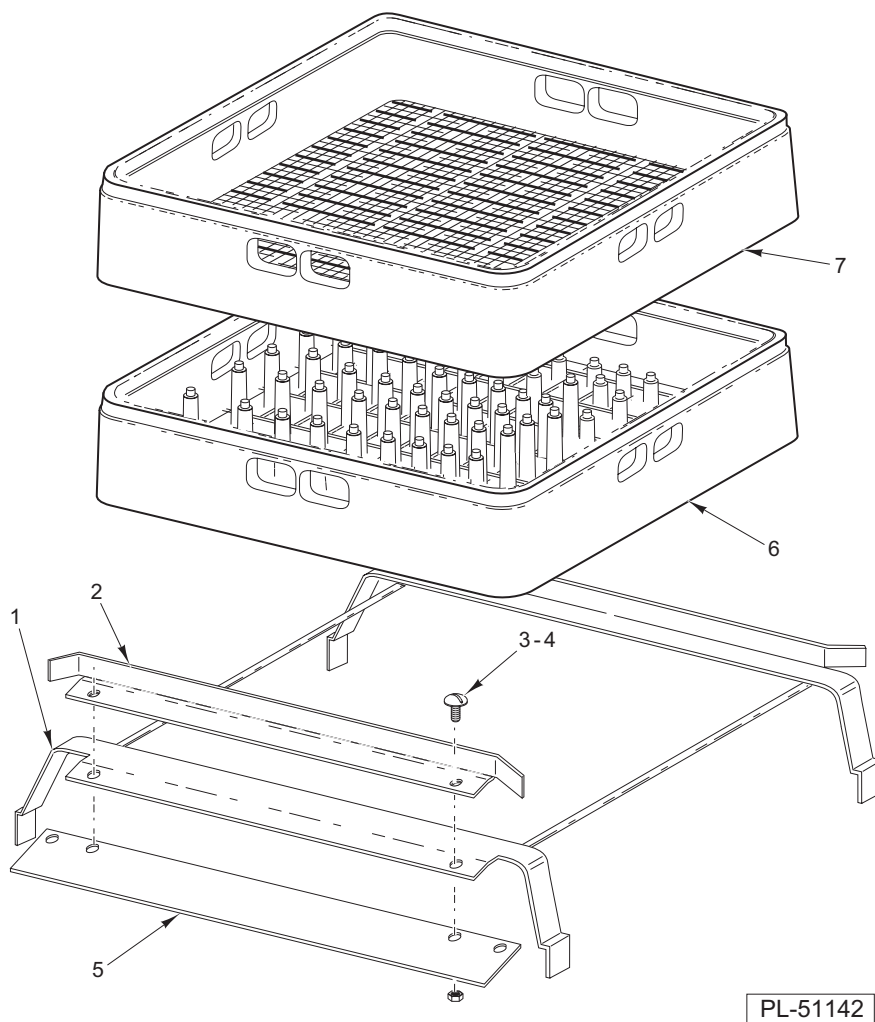

TRACK & RACKS

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-51142			
1	00-435036	Track Weldment	1
2	00-185050	Side – Rack Track	1
3	SC-053-02	Mach. Screw 10-24 x 1/2 Truss Hd. (SST)	4
4	NS-031-15	Stop Nut 10-24 Hex (SST)	4
5	00-185053	Guard – Door Splash	1
6	00-315191	Rack – Peg (Packaged) (Optional)	1
7	00-315193	Rack – Combination (Packaged) (Optional)	1