



CATALOG OF REPLACEMENT PARTS




ELECTRIC CONVECTION OVENS

DEC5	ML-126749
HEC5	ML-126750
HEC5D	ML-126751
HEC5X	ML-126753
HEC5DX	ML-126754

TABLE OF CONTENTS

5	CONTROL PANEL
7	COMPONENT PANEL
9	OVEN PANELS (LH SIDE) (PREVIOUS CONSTRUCTION)
11	OVEN PANELS (LH SIDE) (CURRENT CONSTRUCTION)
13	OVEN PANELS (RH SIDE)
15	CHAIN DOOR ASSEMBLY (SIMULTANEOUSLY OPENING DOORS) (PREVIOUS CONSTRUCTION)
17	CHAIN DOOR ASSEMBLY (SIMULTANEOUSLY OPENING DOORS) (CURRENT CONSTRUCTION)
19	DOOR ASSEMBLY (INDEPENDENTLY OPENING DOORS) (PREVIOUS CONSTRUCTION)
21	DOOR ASSEMBLY (INDEPENDENTLY OPENING DOORS) (CURRENT CONSTRUCTION)

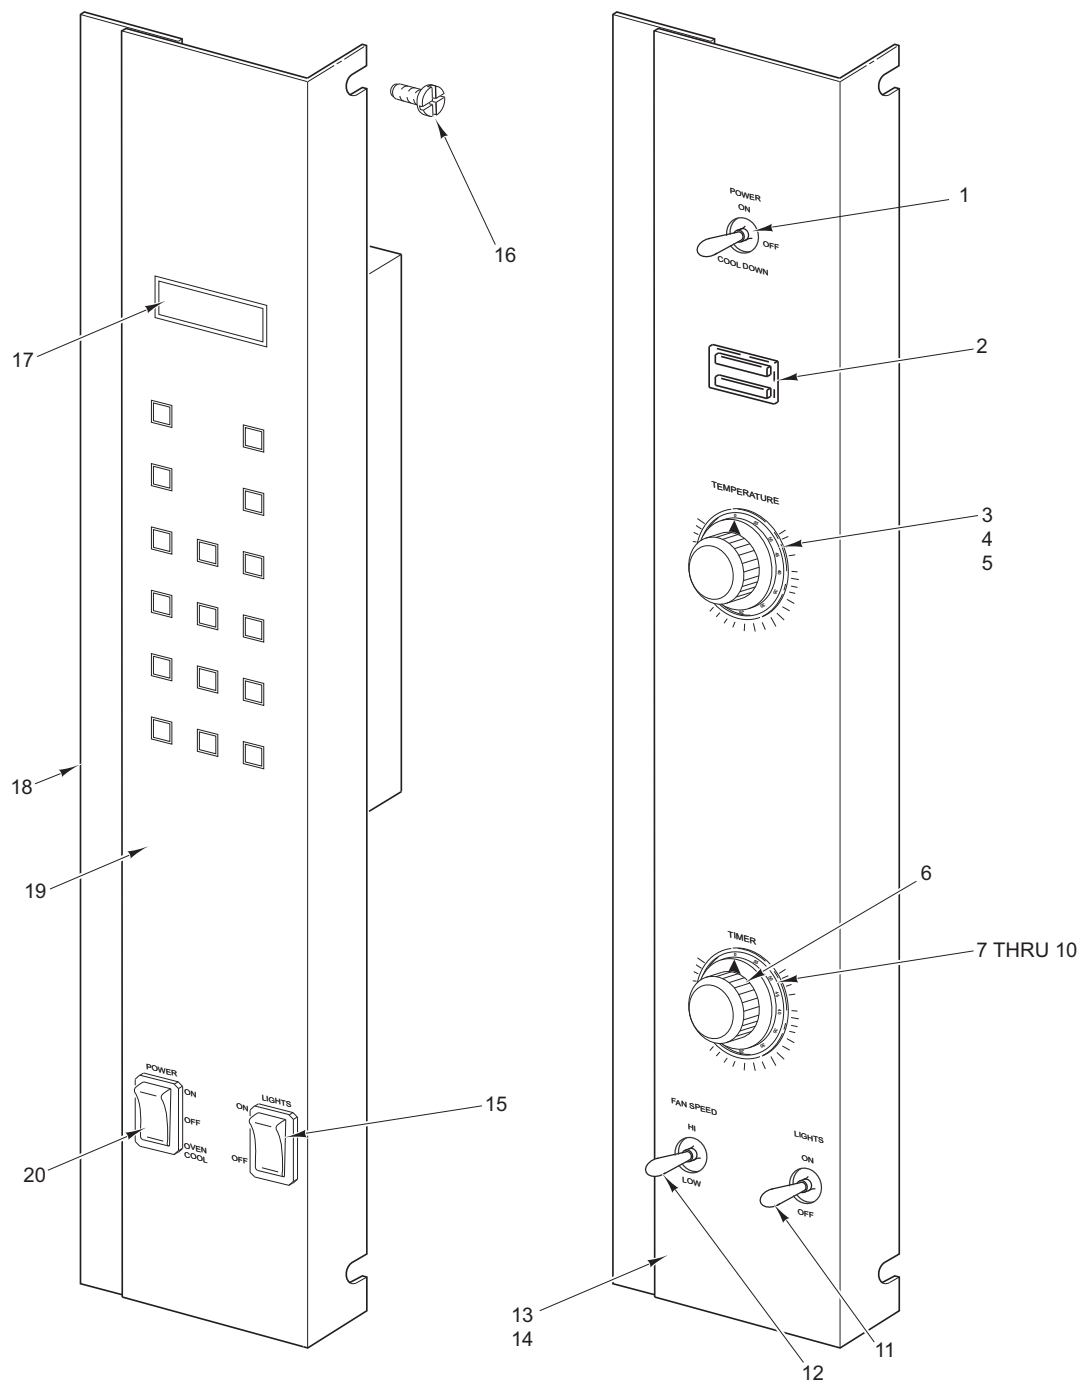

PL-55170


HEC5D

HEC5 / DEC5


CONTROL PANEL

CONTROL PANEL

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55170			
1	00-340324-00008	Switch (Hold)	1
2	00-354575-00001	Light Indicator (On/Heat) (200-240V)	1
3	00-411242-00001	Knob	1
4	00-353613-00002	Controller – Temperature (500 Deg.) (ML-126749, ML-126750, & ML-126753).....	1
5	00-411506-00003	Thermostat (Previous Construction) (ML-126749)	1
6	00-411242-00001	Knob	1
7	00-411690-00002	Timer (240 V.) (1-Hr.) (60 Hz.)	1
8	00-411690-00004	Timer (240 V.) (5-Hr.) (60 Hz.)	1
9	00-411690-00005	Timer (240 V.) (1-Hr) (50Hz).....	1
10	00-411690-00006	Timer (240 V.) (5-Hr.) (50 Hz.)	1
11	00-340324-00012	Switch (S.P.S.T.)	1
12	00-340324-00009	Switch (D.P.D.T.).....	1
13	00-426825-00001	Overlay – Panel (Previous Construction).....	1
14	00-426856-00001	Overlay – Panel (ML-126749, ML-126750, & ML-126753).....	1
15	00-358628-00002	Switch – Rocker (2-Position)	1
16	SD-037-02	Self-Tapping Screw 10-16 x 1/2 Hex Washer Hd., Type AB.....	3
17	00-424846-00001	Controller (Watlow #734)	1
18	00-426927-000G2	Panel – Control Assy.....	1
19	00-426932-00001	Overlay – Control Panel (ML-126751 & ML-126754)	1
20	00-358628-00001	Switch – Rocker (3-Position)	1
	00-411499-00003	Buzzer (230 V.)	1
	00-423918-00001	Electronic Beeper	12

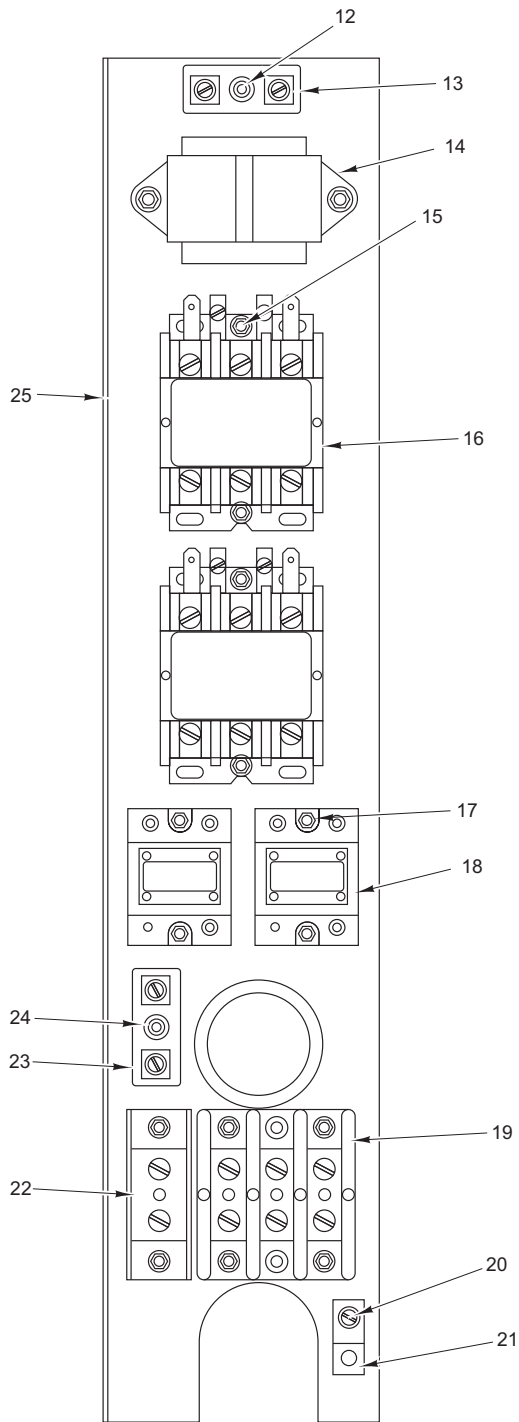

HEC5D

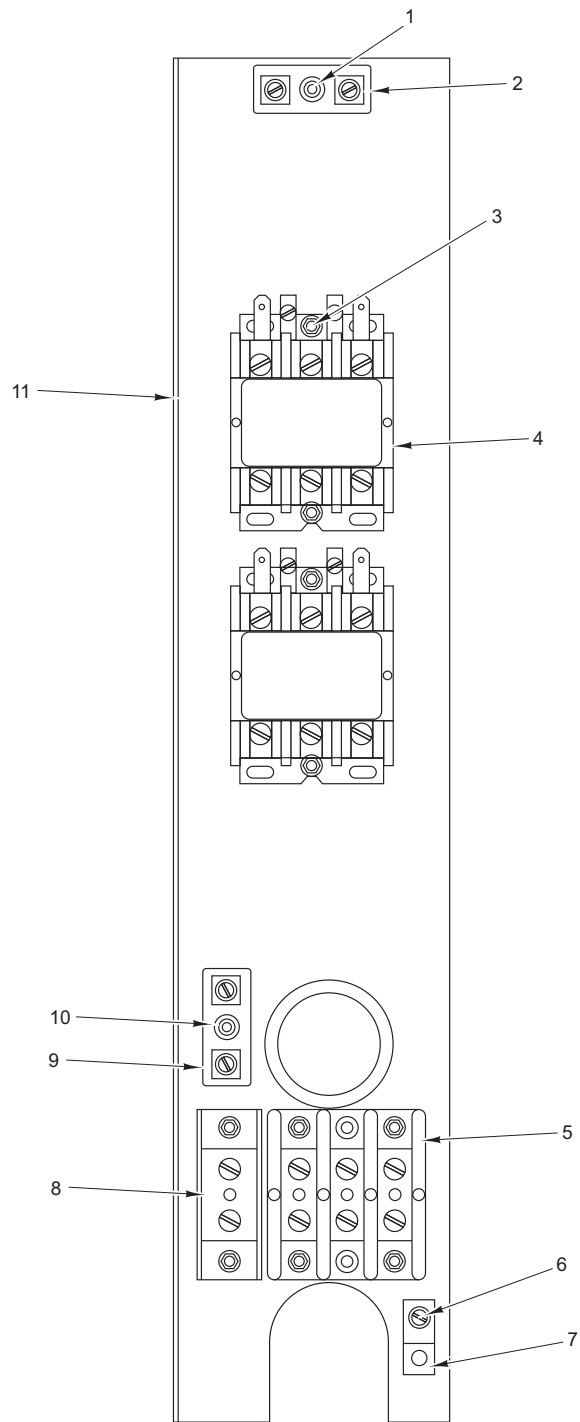


HEC5 / DEC5

PL-55171

COMPONENT PANEL

COMPONENT PANEL

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55171			
1	SD-034-52	Self-Tapping Screw 8-32 x 1 Hex Washer Hd., Type T.....	1
2	00-417934-000G1	Block Assy – Porcelain	1
3	SD-032-07	Self-Tapping Screw 10-24 x 1/2 Hex Washer Hd., Type TT	4
4	00-411497-000C5	Contactor (3-Pole)	2
5	00-410472-00008	Terminal Block	1
6	SD-032-07	Self-Tapping Screw 10-24 x 1/2 Hex Washer Hd., Type TT	1
7	00-417856-00001	Lug – Grounding (With Set Screw)	1
8	00-410472-00009	Block – Terminal (1-Pole).....	1
9	00-417934-000G1	Block Assy – Porcelain	1
10	SD-034-52	Self-Tapping Screw 8-32 x 1 Hex Washer Hd., Type T.....	1
11	00-422155-00001	Component Panel	1
12	SD-034-52	Self-Tapping Screw 8-32 x 1 Hex Washer Hd., Type T.....	1
13	00-417934-000G1	Block Assy – Porcelain	1
14	00-421758-000G2	Transformer (208-240 V.).....	1
15	SD-032-07	Self-Tapping Screw 10-24 x 1/2 Hex Washer Hd., Type TT	4
16	00-411497-000C5	Contactor (3-Pole)	2
17	SD-034-52	Self-Tapping Screw 8-32 x 1 Hex Washer Hd., Type T.....	4
18	00-821875-00002	Relay – Solid State (50 Amp.).....	2
19	00-410472-00008	Terminal Block	1
20	SD-032-07	Self-Tapping Screw 10-24 x 1/2 Hex Washer Hd., Type TT	1
21	00-417856-00001	Lug – Grounding (With Set Screw)	1
22	00-410472-00009	Block – Terminal (1-Pole).....	1
23	00-417934-000G1	Block Assy – Porcelain	1
24	SD-034-52	Self-Tapping Screw 8-32 x 1 Hex Washer Hd., Type T.....	1
25	00-422155-00001	Component Panel	1

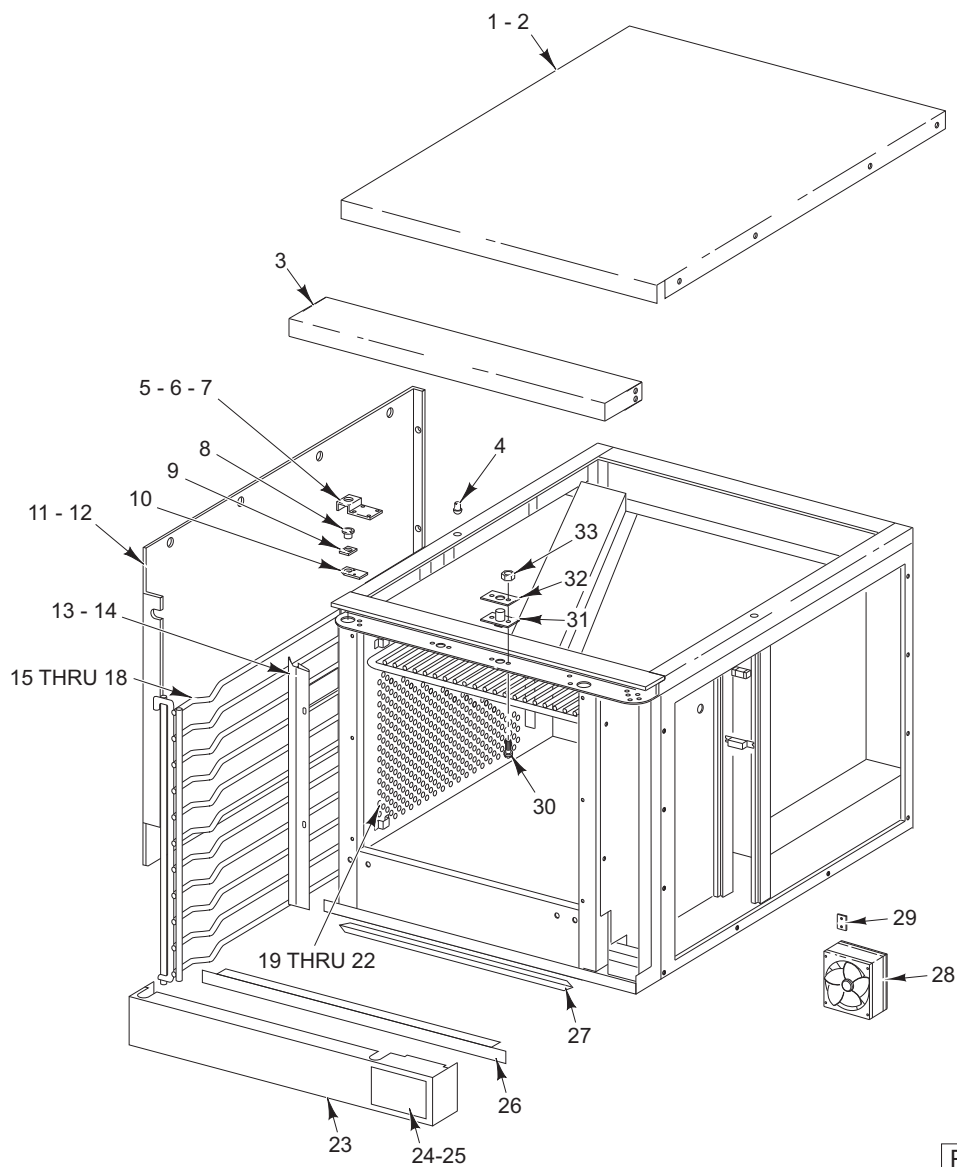


PL-55166

OVEN PANELS (LH SIDE) (PREVIOUS CONSTRUCTION)

OVEN PANELS (LH SIDE) (PREVIOUS CONSTRUCTION)


ILLUS. PL-55166	PART NO.	NAME OF PART	AMT.
1	00-424141-00002	Top (SST) (ML-126749, ML-126750, & ML-126751)	1
2	00-424229-00002	Top (SST) (ML-126753 & ML-126754)	1
3	00-421799-00001	Top – Front.....	1
4	00-339337-00001	Stud – Locating.....	2
5	00-353484-00001	Plate – Retainer.....	2
6	SC-053-41	Mach. Screw 1/4-20 x 1/2 Truss Hd. (SST).....	4
7	NS-038-08	Lock Nut 1/4-20 x 1 Hex Hd.	4
8	00-347080-00002	Bearing – Door Shaft	2
9	00-353482-00001	Spacer	2
10	00-353483-00001	Plate – Upper Door Bearing.....	2
11	00-424142-00002	Panel – Outer (SST) (LH) (ML-126749, ML-126750, & ML-126751).....	1
12	00-424230-00002	Panel – Outer (SST) (LH) (ML-126753 & ML-126754).....	1
13	00-423841-00001	Seal – Vertical Door (LH)	1
14	00-423841-00002	Seal – Vertical Door (RH)	1
15	00-342141-00001	Rack – Support (LH) (ML-126749, ML-126750, & ML-126751).....	1
16	00-342141-00002	Rack – Support (RH) (ML-126749, ML-126750, & ML-126751).....	1
17	00-342141-00003	Rack – Support (LH) (ML-126753 & ML-126754).....	1
18	00-342141-00004	Rack – Support (RH) (ML-126753 & ML-126754)	1
19	00-426648-000G1	Cavity – Side Assy. (LH)	1
20	00-426920-000G1	Cavity – Side Assy. (LH) (Porcelain).....	1
21	00-426648-000G2	Cavity – Side Assy. (RH).....	1
22	00-426920-000G2	Cavity – Side Assy. (RH) (Porcelain)	1
23	00-423766-000G1	Trim – Bottom W/Access Door Assy	1
24	00-423758-00001	Door – Access Trim.....	1
25	00-425199-00001	Fastener – Nylon (Push-In).....	2
26	00-424865-00001	Cover – Trim	1
27	00-357507-00001	Seal – Horizontal Door (30 1/2 In. Long) (Top & Bottom).....	2
28	00-424940-00002	Fan – Cooling (230 V.).....	1
29	00-425433-00001	Fan – Clip	1
30	SC-115-51	Mach. Screw 10-32 x 1/2 Phil. Truss Hd.	2
31	00-347545-00001	Door Catch Assy.	1
32	00-423848-00001	Shim – Door Strike.....	AR
33	NS-038-03	Lock Nut 10-32 SP.....	2
	00-346357-00001	Thermostat – High Limit (Thermodisc)	1
	00-424172-00001	Leg – Set (25 3/4 In.) (PTD)	1
	00-424172-00002	Leg – Set (25 3/4 In.) (SST)	1
	00-424175-00001	Leg – Set (25 3/4 In.) (PTD W/Casters)	1
	00-424175-00002	Leg – Set (25 3/4 In.) (SST W/Casters).....	1
	00-424184-000G1	Open Stand W/Legs (ML-126749, ML-126750, & ML-126751)	1
	00-424184-000G2	Open Stand W/Casters (ML-126749, ML-126750, & ML-126751)	1
	00-424184-000G3	Open Stand W/Legs (ML-126753 & ML-126754)	1
	00-424184-000G4	Open Stand W/Casters (ML-126753 & ML-126754).....	1

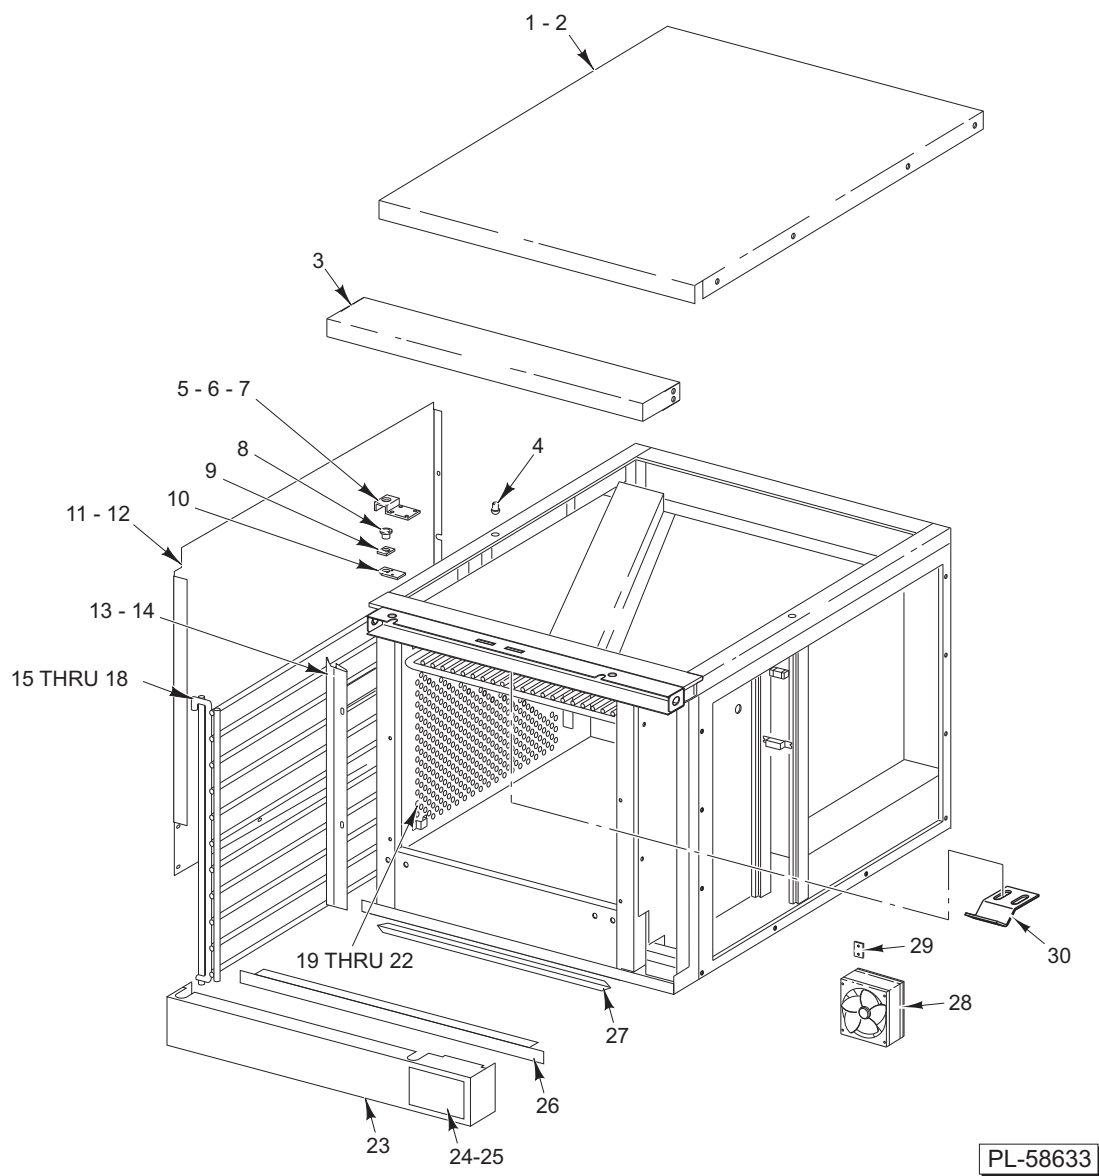

OVEN PANELS (LH SIDE) (CURRENT CONSTRUCTION)

OVEN PANELS (LH SIDE) (CURRENT CONSTRUCTION)


ILLUS. PL-58633	PART NO.	NAME OF PART	AMT.
1	00-424141-00002	Top (SST) (ML-126749, ML-126750, & ML-126751)	1
2	00-424229-00002	Top (SST) (ML-126753 & ML-126754)	1
3	00-421799-00001	Top – Front.....	1
4	00-339337-00001	Stud – Locating.....	2
5	00-353484-00001	Plate – Retainer.....	2
6	SC-053-41 Mach.	Screw 1/4-20 x 1/2 Truss Hd. (SST)	4
7	NS-038-08	Lock Nut 1/4-20 x 1 Hex Hd.	4
8	00-347080-00002	Bearing – Door Shaft	2
9	00-353482-00001	Spacer	2
10	00-353483-00001	Plate – Upper Door Bearing.....	2
11	00-499302-00001	Side – Body (LH) (ML-126749, ML-126750, & ML-126751).....	1
12	00-499303-00001	Side – Body (LH) (ML-126753 & ML-126754)	1
13	00-423841-00001	Seal – Vertical Door (LH)	1
14	00-423841-00002	Seal – Vertical Door (RH)	1
15	00-428104-00001	Guide – Rack (LH) (ML-126753 & ML-126754).....	1
16	00-428104-00002	Guide – Rack (RH) (ML-126749, ML-126750, & ML-126751).....	1
17	00-428104-00003	Guide – Rack (LH) (ML-126749, ML-126750, & ML-126751).....	1
18	00-428104-00004	Guide – Rack (RH) (ML-126753 & ML-126754)	1
19	00-426648-000G1	Cavity – Side Assy. (LH)	1
20	00-426920-000G1	Cavity – Side Assy. (LH) (Porcelain).....	1
21	00-426648-000G2	Cavity – Side Assy. (RH).....	1
22	00-426920-000G2	Cavity – Side Assy. (RH) (Porcelain)	1
23	00-423766-000G1	Trim – Bottom W/Access Door Assy	1
24	00-499297-00001	Door – Lower Access Trim.....	1
25	00-425199-00001	Fastener – Nylon (Push-In).....	2
26	00-424865-00001	Cover – Trim	1
27	00-357507-00001	Seal – Horizontal Door (30 1/2 In. Long) (Top & Bottom).....	2
28	00-424940-00002	Fan – Cooling (230 V.).....	1
29	00-425433-00001	Fan – Clip	1
30	00-497585-00001	Plate – Strike	1
	00-346357-00001	Thermostat – High Limit (Thermodisc)	1
	00-424172-00001	Leg – Set (25 3/4 In.) (PTD).....	1
	00-424172-00002	Leg – Set (25 3/4 In.) (SST)	1
	00-424175-00001	Leg – Set (25 3/4 In.) (PTD W/Casters)	1
	00-424175-00002	Leg – Set (25 3/4 In.) (SST W/Casters).....	1

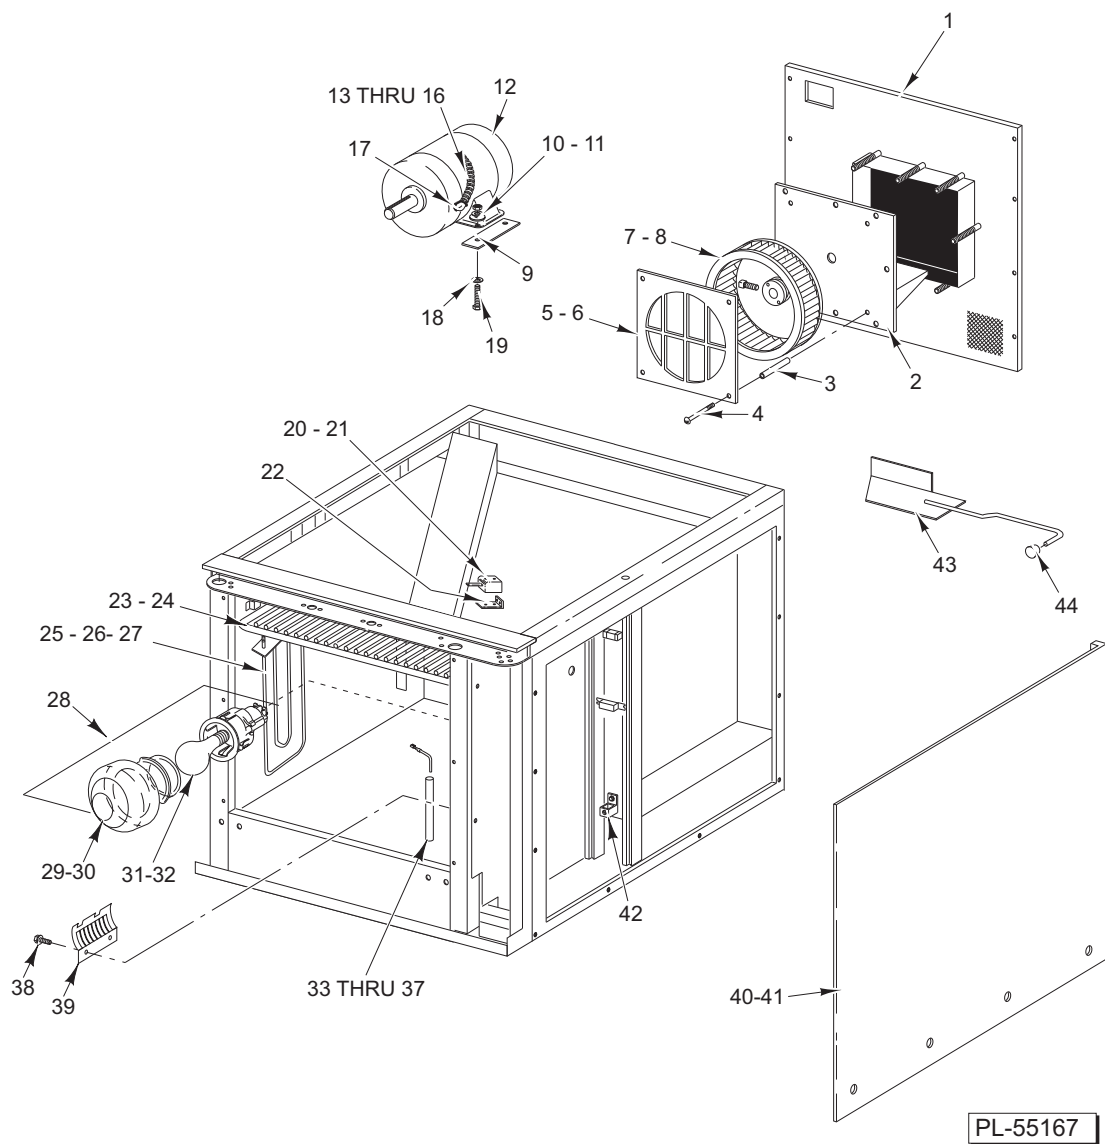

OVEN PANELS (RH SIDE)

OVEN PANELS (RH SIDE)

ILLUS. PL-55167	PART NO.	NAME OF PART	AMT.
1	00-426839-000G1	Panel Assy. – Back	1
2	00-423289-000G1	Motor Mount.....	1
3	00-411289-00004	Spacer – Fan Housing	4
4	SC-120-15	Mach. Screw 1/4-20 x 4 Rd. Hd.....	4
5	00-411136-00004	Cover – Fan (60 Hz.).....	1
6	00-411136-00003	Cover – Fan (50 Hz.).....	1
7	00-415780-00003	Wheel – Blower (60 Hz.).....	1
8	00-415780-00005	Wheel – Blower (50 Hz.).....	1
9	00-358723-00001	Spacer – Steel	2
10	WS-029-46	Washer.....	4
11	NS-046-86	Nut Assy. 5/16-18 KEPS Hex	4
12	00-358516-00002	Motor 1/2 Hp. (2-Speed) (208-240/50/60/1)	1
13	FE-006-05	Lock Nut 1/2	1
14	00-414540-00B35	Conduit 3/8 x 35 In. Lg.	1
15	00-342285-00001	Bushing – Plastic	2
16	FE-002-03	Connector – Conduit 3/8 TS Straight.....	1
17	FE-002-52	Connector – Conduit 3/8 TS (90 Deg.).....	1
18	WS-029-46	Washer.....	4
19	SC-113-65	Cap Screw 5/16-18 x 1 1/4 Hex Hd.....	4
20	00-411496-000F1	Switch – Micro	1
21	SD-034-47	Self-Tapping Screw 6-32 x 1 Hex Washer Hd., Type T.....	2
22	00-425324-00001	Bracket – Door Switch	1
23	00-424188-000G1	Rack Assy. (ML-126749, ML-126750, & ML-126751).....	AR
24	00-424188-000G3	Rack Assy. (ML-126753 & ML-126754)	AR
25	00-426635-00001	Element – (2000 Watts) (208 V.).....	6
26	00-426635-00002	Element – (2000 Watts) (240 V.).....	6
27	00-426635-00003	Element – (2000 Watts) (480 V.).....	6
28	00-357036-00001	Oven Lamp (40 Watts) (120-130 V.).....	2
29	00-423832-00001	Cover – Light (Previous Construction).....	2
30	00-428595-00001	Cover – Light (Current Construction).....	1
31	00-342766-00001	Lamp – Oven (40 Watts) (120 V.) (Previous Construction).....	2
32	00-357036-00001	Lamp – Oven (40 Watts) (120-130 V.) (Current Construction).....	2
33	00-353589-00001	Probe (ML-126749, ML-126750, & ML-126753).....	1
34	00-920883-00001	Probe (ML-126751) (Previous Construction).....	1
35	00-920883-00003	Probe (ML-126751 & ML-126754) (Current Construction)	1
36	00-342132-00002	Guard – Probe (ML-126749).....	1
37	00-342132-00004	Guard – Probe (ML-12675 & ML-126751).....	1
38	SD-032-07	Self-Tapping Screw 10-24 x 1/2 Hex Washer Hd., Type TT	2
39	00-499278-00001	Guard – Probe	1
40	00-424140-00002	Panel – Outer (RH) (SST) (ML-126749, ML-126750, & ML-126751)	1
41	00-424228-00002	Panel – Outer (RH) (SST) (ML-126753 & ML-126754)	1
42	00-417856-00001	Lug – Grounding (With Set Screw).....	1
43	00-426804-000G1	Vent Slide Assy. (Includes Item 44).....	1
44	00-341564-00003	Handle	1
	00-423818-000G3	Pan – Drip (ML-126749, ML-126750, & ML-126751)	1
	00-423818-000G4	Pan – Drip (ML-126753 & ML-126754).....	1

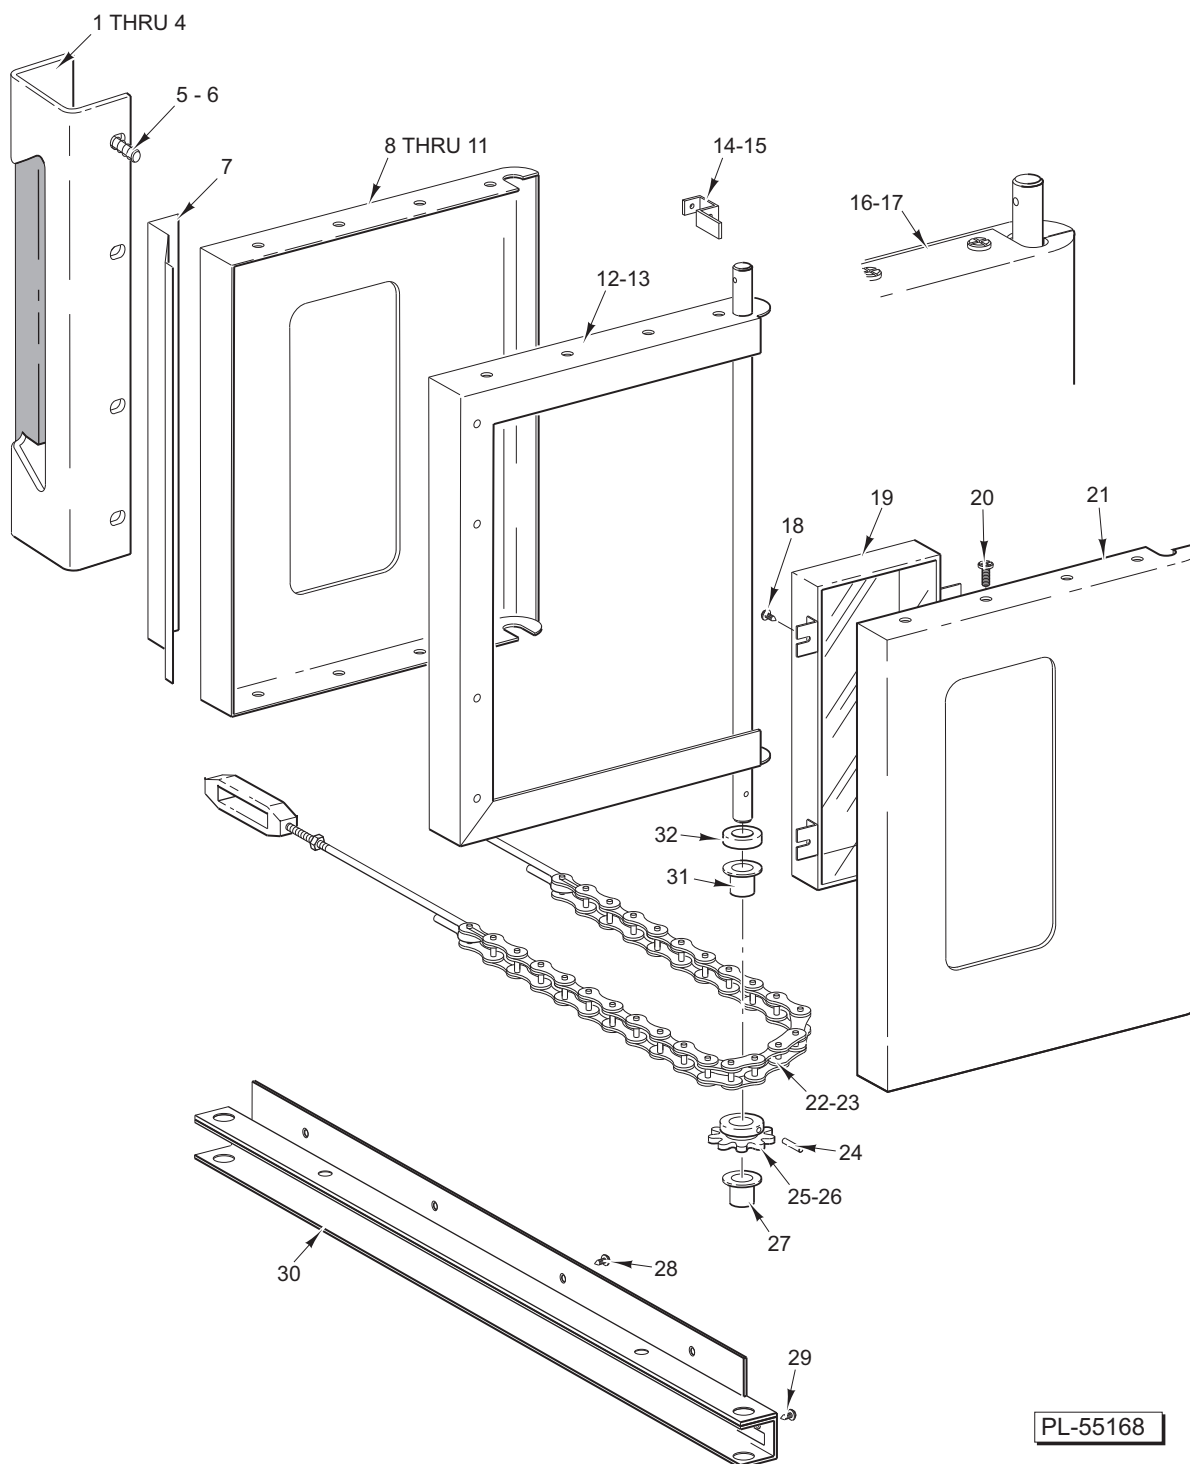


PL-55168

**CHAIN DOOR ASSEMBLY
(SIMULTANEOUSLY OPENING DOORS) (PREVIOUS CONSTRUCTION)**

CHAIN DOOR ASSEMBLY (SIMULTANEOUSLY OPENING DOORS) (PREVIOUS CONSTRUCTION)


ILLUS. PL-55168	PART NO.	NAME OF PART	AMT.
1	00-356562-00001	Handle – Door.....	1
2	00-356563-00001	Grip – Front.....	1
3	00-356563-00002	Grip – Rear	1
4	SC-113-98	Mach. Screw 10-24 x 1/2 Hex Washer Hd.	3
5	SC-041-01	Cap Screw 1/4-20 x 3/4 Hex Hd. (SST)	4
6	WL-019-37	Lockwasher 1/4 Internal	4
7	00-356550-00001	Latch – Friction	1
8	00-421913-00003	Panel – Outer Door (LH) (W/Window)	1
9	00-421913-00001	Panel – Outer Door (RH) (W/Window)	1
10	00-421913-00004	Panel – Outer Door (LH) (W/O Window)	1
11	00-421913-00002	Panel – Outer Door (RH) (W/O Window)	1
12	00-421904-000G2	Frame Assy. – Door (LH)	1
13	00-421905-000G1	Frame Assy. – Door (RH).....	1
14	00-424163-00001	Lever – Door Switch	1
15	SD-034-52	Self-Tapping Screw 8-32 x 1 Hex Washer Hd., Type T.....	1
16	00-424730-00001	Door Assy. (LH) (W/Window)	1
17	00-424731-00001	Door Assy. (RH) (W/Window).....	1
18	SD-034-62	Self-Tapping Screw 10-32 x 1/2 Hex Washer Hd., Type T	4
19	00-358534-00001	Window Assy.....	1
20	SD-034-22	Self-Tapping Screw 10-16 X 5/8 Phil. Truss Hd., Type AB	9
21	00-358532-00001	Panel – Inner Door (W/Window)	1
22	00-343608-00002	Door Chain & Turnbuckle Assy.	2
23	00-352667-00001	Cable – Door Stop	1
24	PS-004-11	Spirol Pin 3/16 x 1 1/4 Heavy	2
25	00-342166-00001	Sprocket – Door Shaft	2
26	SC-047-28	Set Screw 1/4-28 x 3/8 Hex Hdls., Cup Pt.	2
27	00-347080-00002	Bearing – Door Shaft	2
28	SC-022-40	Mach. Screw 1/4-20 x 3/4 Phil. Flat Hd.	4
29	SC-113-90	Mach. Screw 1/4-20 x 3/4 Hex Hd.	2
30	00-357846-00001	Channel – Door Sill Weldment.....	1
31	00-347080-00002	Bearing – Door Shaft	2
32	00-343143-00002	Washer.....	2
	00-520228	Adhesive – Loctite 242 (Use W/Item 24) (50cc Bottle)	AR
	00-528664	Lubricant (Use W/Item 20) (Pint Can).....	AR

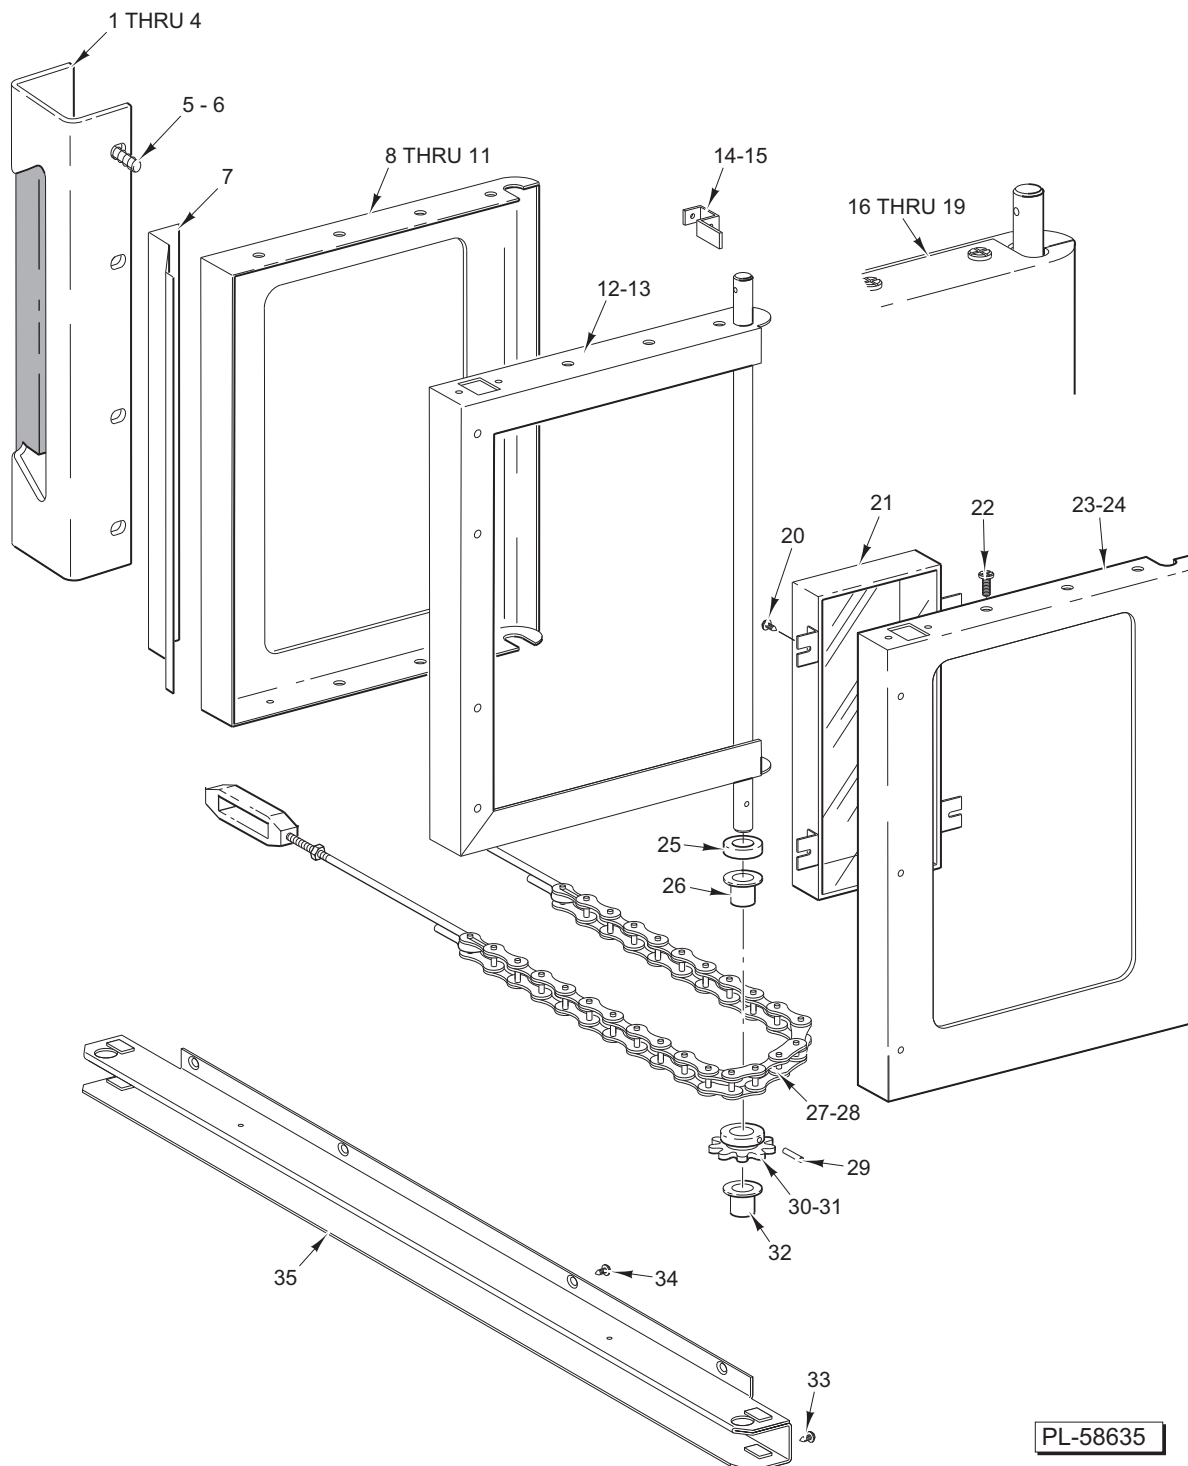

**CHAIN DOOR ASSEMBLY
(SIMULTANEOUSLY OPENING DOORS) (CURRENT CONSTRUCTION)**

CHAIN DOOR ASSEMBLY (SIMULTANEOUSLY OPENING DOORS) (CURRENT CONSTRUCTION)


ILLUS. PL-58635	PART NO.	NAME OF PART	AMT.
1	00-356562-00001	Handle – Door.....	1
2	00-356563-00001	Grip – Front.....	1
3	00-356563-00002	Grip – Rear	1
4	SC-113-98	Mach. Screw 10-24 x 1/2 Hex Washer Hd.	3
5	SC-041-01	Cap Screw 1/4-20 x 3/4 Hex Hd. (SST)	4
6	WL-019-37	Lockwasher 1/4 Internal	4
7	00-356550-00001	Latch – Friction	1
8	00-421913-00003	Panel – Outer Door (LH) (W/Window)	1
9	00-421913-00001	Panel – Outer Door (RH) (W/Window).....	1
10	00-421913-00004	Panel – Outer Door (LH) (W/O Window)	1
11	00-421913-00002	Panel – Outer Door (RH) (W/O Window).....	1
12	00-421904-000G2	Frame Assy. – Door (LH)	1
13	00-421905-000G1	Frame Assy. – Door (RH).....	1
14	00-424163-00001	Lever – Door Switch	1
15	SD-034-52	Self-Tapping Screw 8-32 x 1 Hex Washer Hd., Type T.....	1
16	00-499289-000G1	Door Assy. (LH) (W/Window)	1
17	00-499289-000G2	Door Assy. (LH) (W/O Window)	1
18	00-499299-000G1	Door Assy. (RH) (W/Window).....	1
19	00-499290-000G2	Door Assy. (RH) (W/O Window)	1
20	SD-034-62	Self-Tapping Screw 10-32 x 1/2 Hex Washer Hd., Type T	4
21	00-358534-00001	Window Assy.....	1
22	SD-034-22	Self-Tapping Screw 10-16 X 5/8 Phil. Truss Hd., Type AB	9
23	00-358532-00001	Panel – Inner Door (W/Window)	1
24	00-358533-00003	Panel – Inner Door (W/O Window)	1
25	00-343143-00002	Washer.....	2
26	00-347080-00002	Bearing – Door Shaft	2
27	00-343608-00002	Door Chain & Turnbuckle Assy.	2
28	00-352667-00001	Cable – Door Stop	1
29	PS-004-11	Spirol Pin 3/16 x 1 1/4 Heavy	2
30	00-342166-00001	Sprocket – Door Shaft	2
31	SC-047-28	Set Screw 1/4 -28 x 3/8 Hex Hdls., Cup Pt.	2
32	00-347080-00002	Bearing – Door Shaft	2
33	SC-113-90	Mach. Screw 1/4-20 x 3/4 Hex Hd.	2
34	SC-022-40	Mach. Screw 1/4-20 x 3/4 Phil. Flat Hd.....	4
35	00-499300-000G1	Channel – Bottom Door Sill	1
	00-520228	Adhesive – Loctite 242 (Use W/Item 31) (50cc Bottle).....	AR
	00-528664	Lubricant (Use W/Item 27) (Pint Can).....	AR

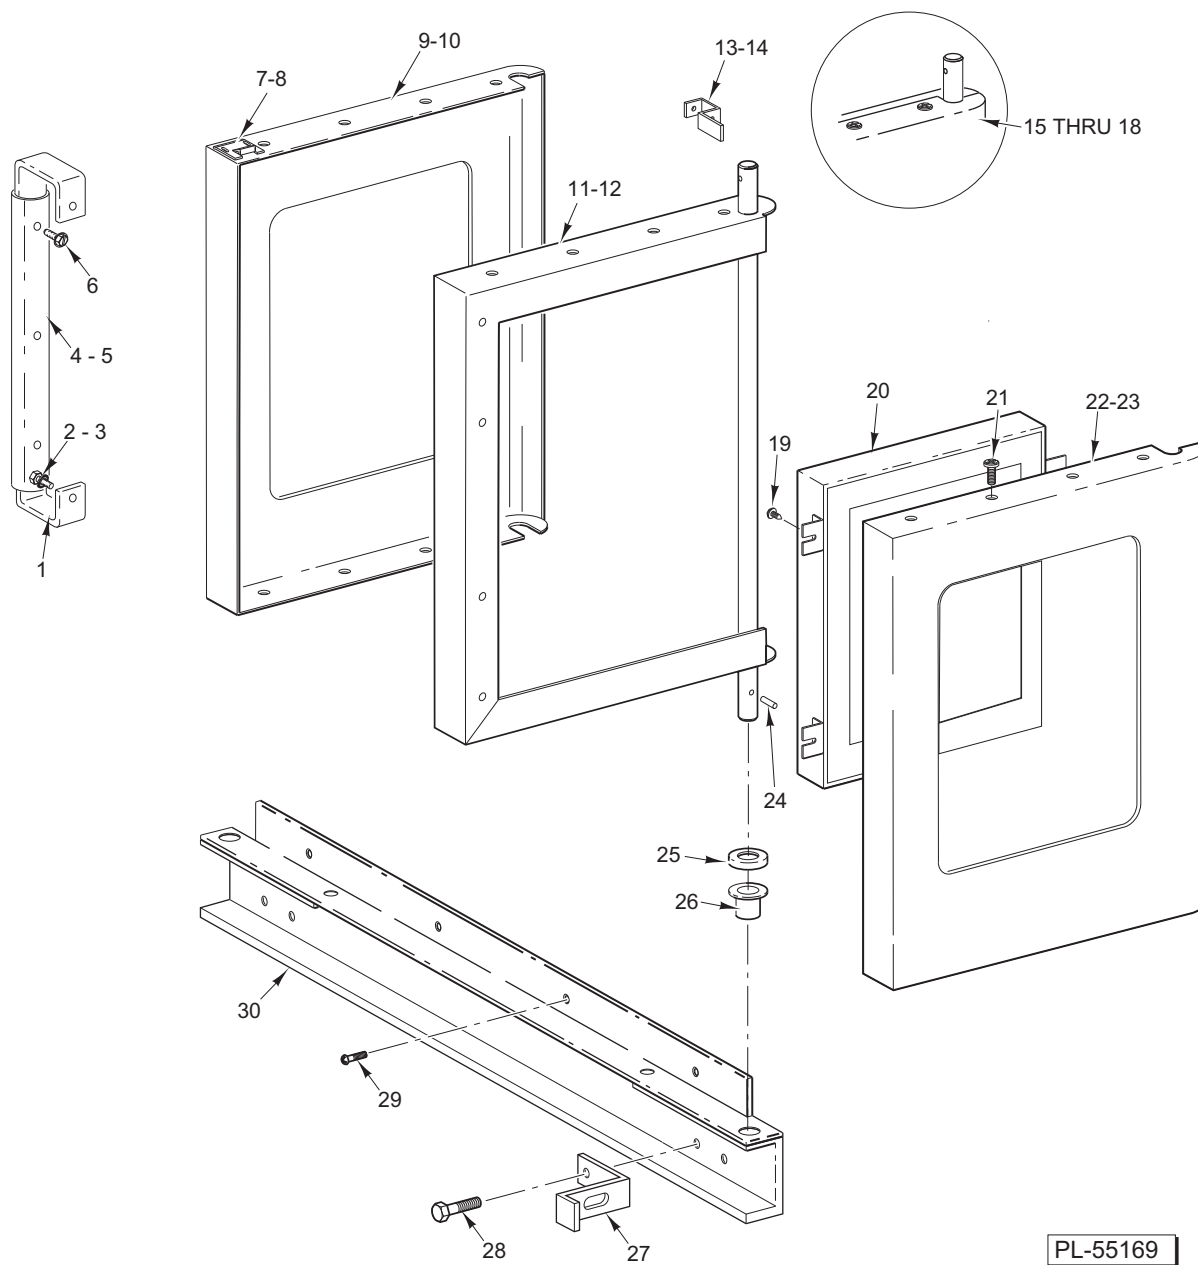

**DOOR ASSEMBLY
(INDEPENDENTLY OPENING DOORS) (PREVIOUS CONSTRUCTION)**

DOOR ASSEMBLY (INDEPENDENTLY OPENING DOORS) (PREVIOUS CONSTRUCTION)

ILLUS. PL-55169	PART NO.	NAME OF PART	AMT.
1	00-357929-00001	Handle – Door.....	1
2	SC-041-01	Cap Screw 1/4-20 x 3/4 Hex Hd. (SST)	2
3	WL-019-37	Lockwasher 1/4 Internal	2
4	00-356563-00001	Grip – Front.....	1
5	00-356563-00002	Grip – Rear	1
6	SC-113-98	Mach. Screw 10-24 x 1/2 Hex Washer Hd.	3
7	00-423847-00001	Strike – Door	1
8	SD-034-22	Self-Tapping Screw 10-16 X 5/8 Phil. Truss Hd., Type AB	2
9	00-358600-00001	Panel – Outer Door (W/Window)	1
10	00-358600-00002	Panel – Outer Door (W/O Window)	1
11	00-421905-000G1	Frame Assy. – Door (RH).....	1
12	00-421904-000G2	Frame Assy. – Door (LH)	1
13	00-424163-00001	Lever – Door Switch	1
14	SD-034-52	Self-Tapping Screw 8-32 x 1 Hex Washer Hd., Type T.....	1
15	00-358529-00005	Door Assy. (LH) (W/Window)	1
16	00-358529-00006	Door Assy. (LH) (W/O Window)	1
17	00-358530-00003	Door Assy. (RH) (W/Window).....	1
18	00-358530-00004	Door Assy. (RH) (W/O Window).....	1
19	SD-034-62	Self-Tapping Screw 10-32 x 1/2 Hex Washer Hd., Type T	4
20	00-358534-00001	Window Assy.....	1
21	SD-034-22	Self-Tapping Screw 10-16 X 5/8 Phil. Truss Hd., Type AB	8
22	00-358532-00001	Shell – Inner Door (W/Window)	1
23	00-358533-00003	Shell – Inner Door (W/O Window)	1
24	PS-004-11	Spirol Pin 3/16 x 1 1/4 Heavy	1
25	00-343143-00002	Washer.....	2
26	00-347080-00002	Bearing – Door Shaft	1
27	00-424158-00001	Door Stop.....	1
28	SC-113-90	Mach. Screw 1/4-20 x 3/4 Hex Hd.	2
29	SC-022-40	Mach. Screw 1/4-20 x 3/4 Phil. Flat Hd.....	4
30	00-357846-00001	Channel – Door Sill Weldment.....	1

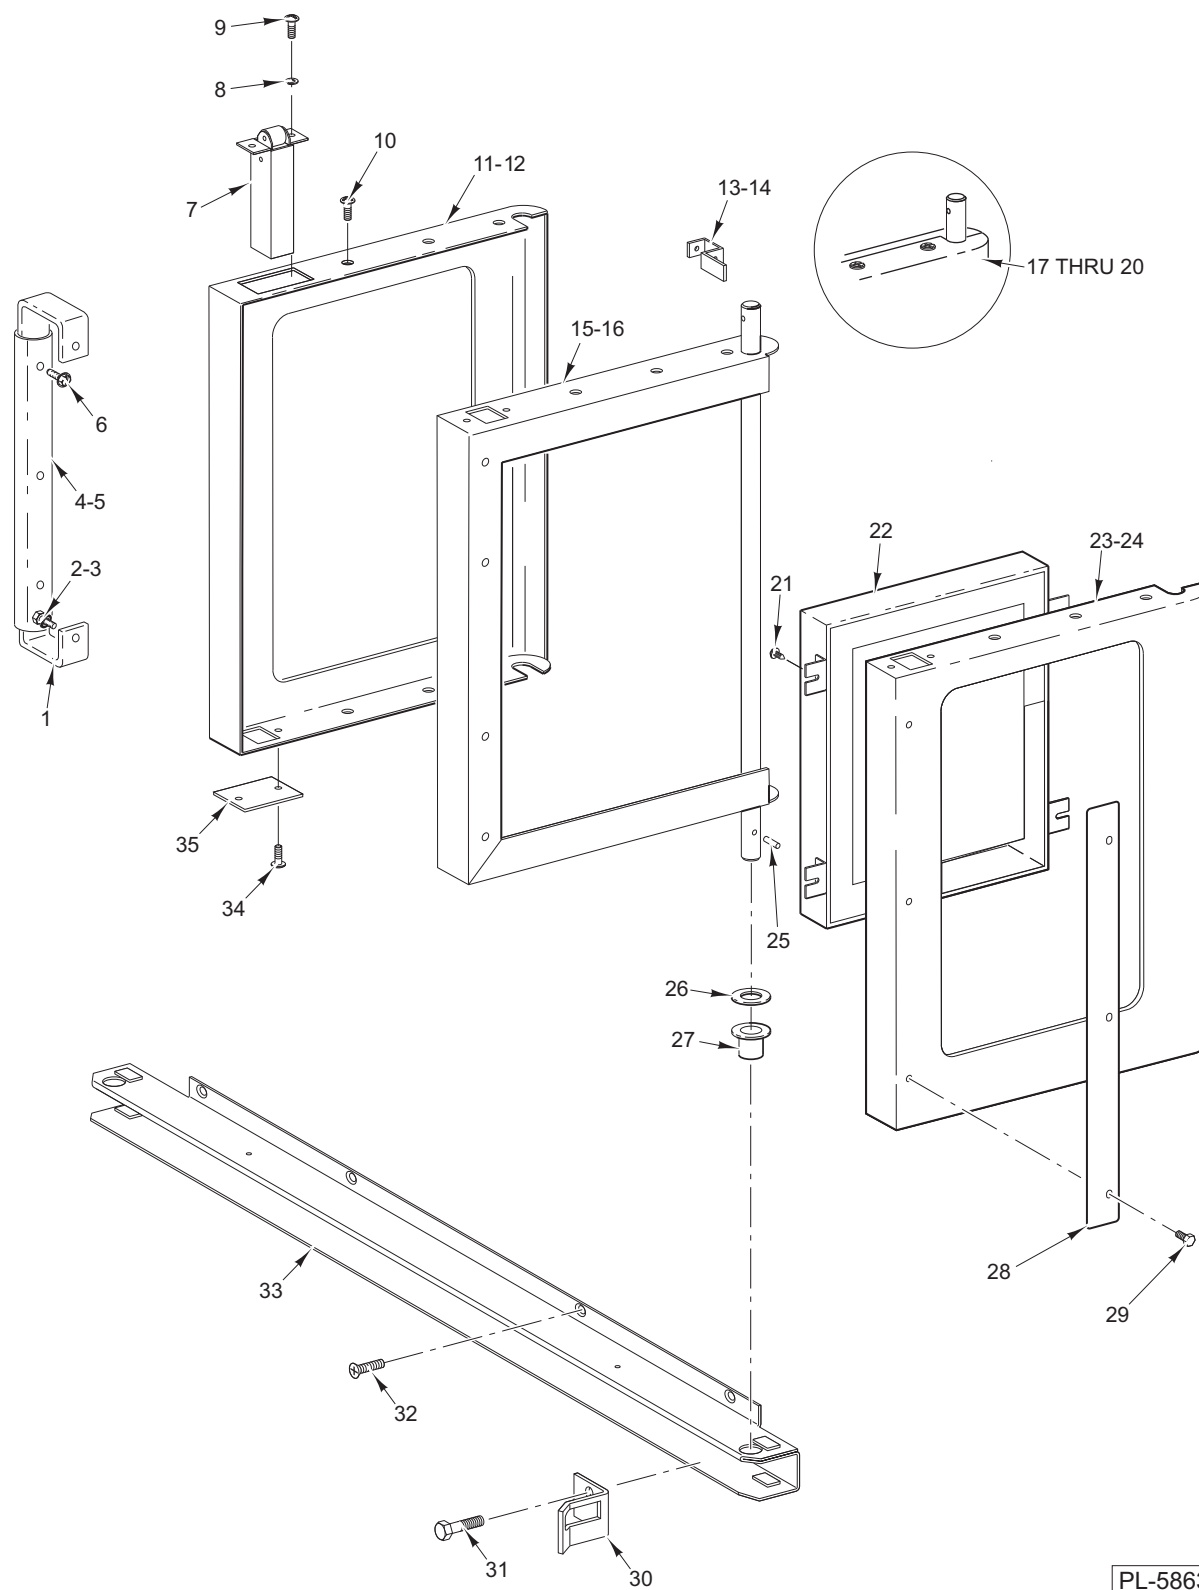

PL-58634

**DOOR ASSEMBLY
(INDEPENDENTLY OPENING DOORS) (CURRENT CONSTRUCTION)**

DOOR ASSEMBLY (INDEPENDENTLY OPENING DOORS) (CURRENT CONSTRUCTION)

ILLUS. PL-58634	PART NO.	NAME OF PART	AMT.
1	00-357929-00001	Handle – Door.....	1
2	SC-041-01	Cap Screw 1/4-20 x 3/4 Hex Hd. (SST).....	2
3	WL-019-37	Lockwasher 1/4 Internal	2
4	00-356563-00001	Grip – Front.....	1
5	00-356563-00002	Grip – Rear	1
6	SC-113-98	Mach. Screw 10-24 x 1/2 Hex Washer Hd.	3
7	00-497586-00001	Latch – Roller.....	1
8	WL-019-35	Lockwasher #10 Internal.....	2
9	SC-117-73	Mach. Screw 10-32 x 5/8 Phil. Truss Hd., Type AB	2
10	SD-034-22	Self-Tapping Screw 10-16 X 5/8 Phil. Truss Hd., Type AB	8
11	00-358600-00001	Panel – Outer Door (RH) (W/Window).....	1
12	00-358600-00002	Panel – Outer Door (RH) (W/O Window).....	1
13	00-424163-00001	Lever – Door Switch	1
14	SD-034-52	Self-Tapping Screw 8-32 x 1 Hex Washer Hd., Type T	1
15	00-421905-000G1	Frame Assy. – Door (RH).....	1
16	00-421904-000G2	Frame Assy. – Door (LH)	1
17	00-499285-000G1	Door Assy. (LH) (W/Window)	1
18	00-499285-000G2	Door Assy. (LH) (W/O Window)	1
19	00-499286-000G1	Door Assy. (RH) (W/Window).....	1
20	00-499286-000G2	Door Assy. (RH) (W/O Window).....	1
21	SD-034-62	Self-Tapping Screw 10-32 x 1/2 Hex Washer Hd., Type T	4
22	00-358534-00001	Window Assy.....	1
23	00-358532-00001	Panel – Inner Door (W/Window)	1
24	00-358533-00003	Panel – Inner Door (W/O Window)	1
25	PS-004-11	Spirol Pin 3/16 x 1 1/4 Heavy	1
26	00-343143-00002	Washer.....	2
27	00-347080-00002	Bearing – Door Shaft	1
28	00-357837-00001	Seal – Door End	1
29	SD-034-22	Self-Tapping Screw 10-16 X 5/8 Phil. Truss Hd., Type AB	3
30	00-499263-00001	Door Stop.....	1
31	SC-113-90	Mach. Screw 1/4-20 x 3/4 Hex Hd.	2
32	SC-022-40	Mach. Screw 1/4-20 x 3/4 Phil. Flat Hd.	4
33	00-499300-000G1	Channel – Bottom Door Sill	1
34	SD-034-22	Self-Tapping Screw 10-16 X 5/8 Phil. Truss Hd., Type AB	2
35	00-499264-00001	Plate – Latch Cutout	1

