


Escali

PRODUCT
MANUAL

Arti Digital Scale

Model # 157

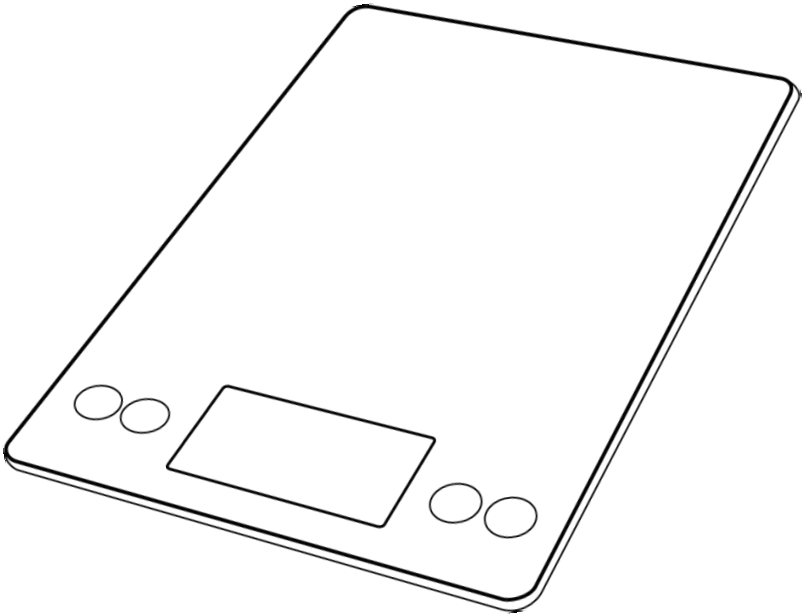

www.escali.com

Thank you for purchasing the Escali Arti Digital Scale!

Please read the following operation information to ensure the proper function of your new scale.

HOW TO WEIGH

1. Press the key. All display segments will appear for approximately 2 seconds before resetting to zero.
2. Press the **UNIT** key to select the units (lb+oz, fl oz, g, oz, or ml).
3. Place item slowly on the platform.
4. Press the key to turn the scale off.

HOW TO USE THE TARE FEATURE

This feature allows you to obtain the exact weight of an item in a container; by subtracting the weight of the container.

1. Place the container, without the item, slowly on the platform.
2. Press the **TARE** key. The weight of the container will be removed, and the display will reset to zero.
3. Slowly add the item to the container. The display will show the weight of the item only.
4. You may continue to determine the weight of each additional item as they are added by repeating steps 2 & 3.

HOW TO CLEAR THE TARE FEATURE

Remove all items from the platform and press the **TARE** or power key.

HOW TO USE THE HOLD FEATURE

This feature is used to weigh oversized items that block the display.


1. Press the **HOLD** key.
2. Place an item on the scale; a beep sound is heard when the weight is stable.
3. Remove the item, and the weight will show on the display for 5 seconds.

Attention! The scale will tare any amount of weight. Once the total weight actually on the scale reaches the maximum capacity of 15 pounds (7000 g) the overload warning code (O-Ld) will display.

PROPER USE & CARE

- Use and store the scale at room temperature.
- Use on a flat, level, and stable surface.
- The scale is an instrument of precision. Do not submit the scale to shaking, excessive vibration, or other rough treatment.
- The display may be affected by electromagnetic disturbances such as radios, microwaves, or cell phones. If such disturbances occur, remove the source of the disturbance, and restart the scale.
- Disassembling or tampering with the scale voids the warranty.
- Clean the scale with dish soap, and a damp cloth.
- Do not submerge in liquid; the scale is not waterproof.
- For best results, use lithium cell batteries.
- Install only new batteries of the same type in your product.
- Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
- Do not mix old and new batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
- Do not dispose of batteries in fire.
- Batteries should be recycled or disposed of as per state and local guidelines.

WARNING MESSAGES

- 0-Ld Overload warning
-  Low battery warning

PRODUCT SPECIFICATIONS

Model: 157

Capacity: 15 lb / 7000 g

Graduation: 1 g / 0.1 oz

Product Dimensions: 9" x 6.5" x .75"

Power Source: 2 - CR2032 lithium batteries (included)

Automatic shut-off: 5 minutes

ESCALI CORPORATION

3203 Corporate Center Drive, Suite 150
Burnsville, MN 55306
USA

PRODUCT SUPPORT

24/7 Online support: <https://escali.zendesk.com>

Email support: feedback@escali.com

Phone support: 1-800-467-6408



LIFETIME LTD WARRANTY

This scale is guaranteed to be free of defects in materials and workmanship. For more details visit: www.escali.com/warranties

Escali's liability is limited to two (2) times the cost of the product.

© Escali Corp., Minneapolis, MN, USA. All rights reserved. Escali, the Escali logo and other Escali marks are owned by Escali Corp. and may be registered.