



ASSEMBLY INSTRUCTIONS

MOBILE BREATH GUARDS

Standard Item #	Flat Item #	Mount Item #	Description
MB24	MB24FLAT	MB24MOUNT	Mobile Breath Guard, 24" (61 cm)
MB36	MB36FLAT	MB36MOUNT	Mobile Breath Guard, 36" (91 cm)
MB48	MB48FLAT	MB48MOUNT	Mobile Breath Guard, 48" (122 cm)
MB60	MB60FLAT	MB60MOUNT	Mobile Breath Guard, 60" (152 cm)
*All models are height-adjustable. Breath Guard angle can also be adjusted on Standard models.			

Standard & Flat


(Mounting Post Models pg2)

Tools

- Provided Allen wrench
- Phillips Screwdriver (Flat only)



MB36

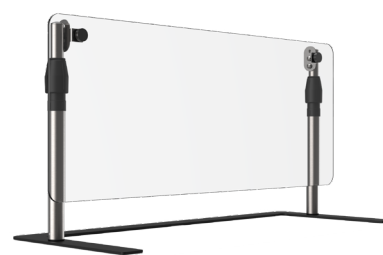

MB36FLAT


1. Install O-rings to base.		2. Ensure rings are fully seated as shown.	
3. Set uprights onto base; set-screw holes face outside of base.		4. Insert set screws into uprights; do not tighten.	
5. If loose, slightly tighten thumbscrews (Standard) or Phillips-head screws (Flat or Mounted) to steady the mounting brackets for breath-guard installation.		6. (Two people) remove protective backing if present. Install breath guard to uprights using supplied washers and thumbscrews.	
7. Tighten upright set screws.		8. Adjust to desired height. a. Rotate each collar until loose. b. Slide collars up or down to raise or lower the guard. c. Tighten collars to secure.	



ASSEMBLY INSTRUCTIONS

Adjusting Angle (Standard Models Only)

1. Loosen thumb screws to allow the guard to pivot.
2. Position guard at the desired angle.
3. Tighten thumb screws.

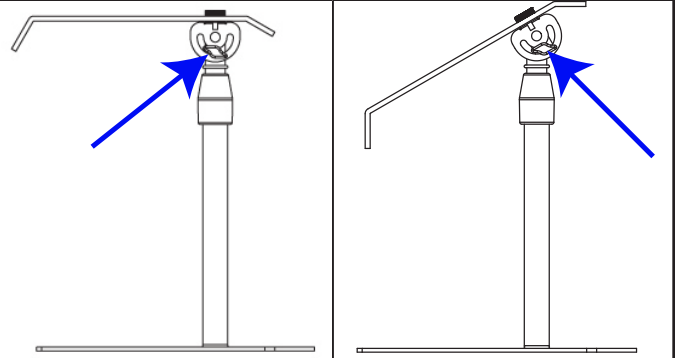


With Mounting Posts

Tools


- Drill and drill bits
- Fasteners for mounting to countertop (Recommendation #10 stainless steel, round or hex head. Screw length and thread type will vary depending on specific application)

Before starting installation, verify that the mounting surface and underlying materials are capable of supporting the breath guard and screws.

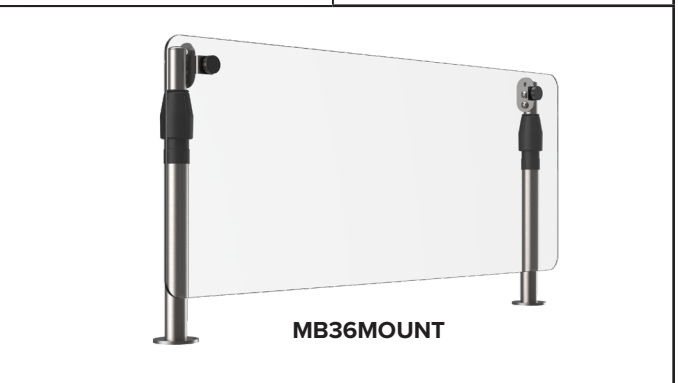

Assembly Steps (Two People)

1. Follow steps 5 & 6 on pg 1.
2. Align mounting posts on mounting surface, ensuring posts are plumb using a level, then mark holes for pre-drilling.
3. Pre-drill holes for appropriate fastener size.
4. Fasten mounting posts to the mounting surface.
5. Adjust height if desired (see page 1).

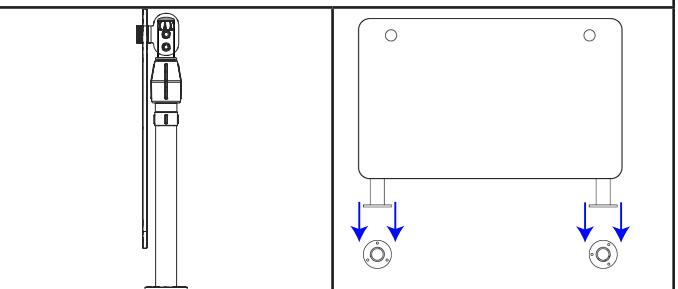

Cleaning & Care (All Models)

- Only use soft, lint-free, non-abrasive, non-paper cloths with cleaners safe for Plexiglas® and acrylic—such as dish soap and warm water, Novus® #1, Plexiclear, and Brilliantize.
- Remove minor scratches by using a specialized mild abrasive polish such as Novus® #2 or #3. Heavier scratches can often be removed by hand sanding with increasingly finer grit (250,400,600) sandpaper, then buffing with a wheel and compound.

NOTICE: Ammonia, alcohol, acetone, or dry cleaning chemicals, abrasive cleansers, sharp or rough materials (e.g. razor blades, brushes, steel wool, scouring pads), WD-40®, and petroleum will damage the guard.