

Avant Guarde™ Room Divider


Instruction & Specification Sheet


SETTING UP YOUR PRODUCT

- * Two Phillips screwdrivers and wrench required for assembly.
- 1. Carefully remove all parts from packaging.
- 2. Make sure you have all parts listed:
 - a. 2 Metal Leg Assemblies
 - b. 1 Clear or Bronze Panel
 - c. 7 Barrel & Screws
 - d. 4 Casters with locks
 - e. 4 Hex Nuts
- 3. To assemble, lay 1 metal assembly (a) face down. Place the panel (b) on top where the holes aligh. Then place the 2nd metal assembly (a) face up on top of panel. It is easiest to do this on a large table or clean floor space. Move parts carefully so they do not become scratched. See Figure 1.
- 4. Place the screw barrel (c) in one side of the hole and place the screw (c) on the opposite side. Hold the barrel in place with one screwdriver and use a second screw driver to tighten the screw. Repeat for remaing screws. See Figure 2.
- . Assemble casters (d) to the bottom of the metal assembly by placing the threading in caster hole and securing with hex nut (e). Tighten with wrench. See Figure 3.
- 6. Once all screw are in, carfully stand the divider up. See Figure 4.
- 7. Check to make sure all screws are tight and in place. You may need to adjust a few.

Figure 3

Secure casters with hex nut.

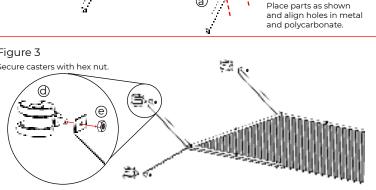

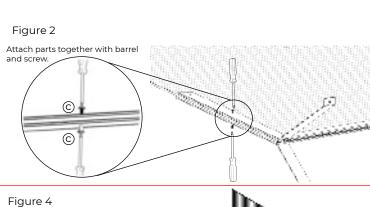

Customer Service Support: **847-763-1215**

Address: 3714 Jarvis Avenue Skokie, IL 60076

Website: www.rosseto.com



RD001 - Clear RD002 - Bronze

Carefully stand divider up and retighten loose screws.





Avant Guarde™ Room Divider

Instruction & Specification Sheet

SPECIFICATIONS


DIMENSIONS 48(W) X 21(D) X 72 (H)IN


121.9(W) X 53.34(D) X 182.88(H) CM

WEIGHT 17 Pounds

7.7 Kilograms

REPLACEMENT PARTS		
Item Number	Description	Material
SMM035	Barrel & Screw	Stainless Steel
SMM037	Casters (Set of 4)	Plastic
SMM036	Hex Nut for Caster	Stainless Steel

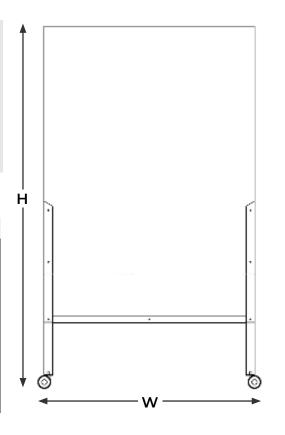



CLEANING & CARE INSTRUCTIONS

- DO NOT use any abrasive materials such as scrapers or metal-based brushes.
- DO NOT use harsh chemicals or abrasive cleaners.

Polycarbonate Care:

To maintain the quality of your polycarbonate, wipe down with a warm damp cloth and mild soap. Use a clean, damp cloth to rinse off soap. Dry with a soft sponge or cloth to prevent water spots. Be careful to not get water in the interior channels of the polycarbonate as it will be hard to remove water spots that form on the inside.

Stainless Steel Care:

Metal Care: Wipe down with damp microfiber cloth and always wipe dry with a microfiber cloth. Store in a dry and well-ventilated place.

IS057 R1 06192020

